CS6729 CS6729-2 CS6729-26 CS6729-3 CS6729-4

DECT 6.0 cordless telephone



vtech

Abridged user's manual (Canada version)

Charge the battery

charger to charge

Congratulations

on purchasing your new VTech product. Before using this product, please read Important safety instructions.

This abridged user's manual provides you with basic installation and use instructions. A limited set of features are described in abbreviated form.

Please refer to the online Complete user's manual for a full set of installation and operation instructions at www.vtechcanada.com.



lephones identified with this ogo have reduced noise and erference when used with most T-coil equipped hearing aids and cochlear implants. The TIA-1083 Compliant Logo is a trademark of the ecommunications Industry Association. Used under license.






1 set for CS6729-2 CS6729-26: 2 sets for CS6729-3; 3 sets for CS6729-4



What's in the box

Your product package contains the following

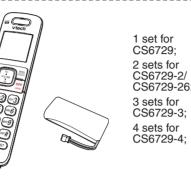



- · Make or answer a call using the handset
- During a call, press to switch between the speakerphone and the handset

- MUTE/DELETE

- Mute the microphone during a call. Delete digits or characters while using the
- dialing keys. Silence the ringer temporarily while the handset is ringing.

 While you have set the dial mode to pulse and on a call, press to switch to tone dialing temporarily.

· Press to add a space when entering names

 Press repeatedly to add or remove 1 in front of the caller ID log entry before dialing or saving it to the directory.

Press and hold to set or dial your voicemail

13 - TALK /FLASH

- Make or answer a home call.
- · Answer an incoming home call when you hear a call waiting alert.

14 - REDIAL/PAUSE

· Press repeatedly to review the redial list.

Press and hold to insert a dialing pause while

15 - VOLUME/**▲**/᠍♡

- Review the directory when the phone is not in
- Increase the listening volume during a call. Scroll up while in a menu, or in the directory,
- caller ID log, or redial list Move the cursor to the right when entering
- numbers or names.

VOLUME/▼/CID

- · Review the caller ID log when the phone is not in
- · Decrease the listening volume during a call. Scroll down while in a menu, or in the
- directory, caller ID log, or redial list.
- · Move the cursor to the left when entering numbers or names

16 - CHARGE light

On when the handset is charging.

Telephone base overview

Charger overview

1 - Charging pole

≻∐→∰→∰

ANS ON

Display icons overview

charged.

The battery icon flashes when

The battery icon animates when

the battery is low and needs

the battery is charging.

The battery icon becomes

The handset ringer is off.

There are new voicemail

service provider.

received from your telephone

The message number currently

The answering system is turned

playing and total number of

new/old messages recorded.

The ECO mode activates

is within range from the


telephone base.

automatically to reduce power

There are new caller ID log

consumption when the handset

solid when the battery is fully

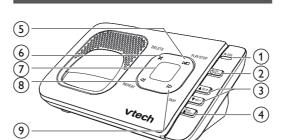

1 - IN USE light

- Flashes when there is an incoming call, or another telephone sharing the same line is in
- Flashes when handsets are being deregistered
- · On when the handset is in use or being
- registered
- On when the answering system is answering
- 2 UANS ON/OFF
- Press to turn the answering system on or off. 3 - ▲VOL+ and ▼VOL-
- · Press to adjust the volume during message
- When the phone is not in use, press to adjust the telephone base ringer volume.

4 – **I**/FIND HANDSET

Press to page all system handsets.

5 - ▶/■/PLAY/STOP

· Press to play messages Press to stop message

6 - X/DELETE

- Press to delete the playing message.
- When the phone is not in use, press twice to delete all previously reviewed messages.

7 – Message window Shows the number of messages, and other

information of the answering system or elephone base.

- Press to repeat the playing message. Press twice to play the previous message.

 
· Press to skip to the next message.

Connect


You can choose to connect the telephone base for desktop usage or wall mounting.

• Use only the power adapters supplied with this


• If you subscribe to digital subscriber line (DSL) high-speed Internet service through your telephone line, make sure you install a DSL filter (not included) between the telephone line cord and telephone wall jack. Contact your DSL service provider for more information




Connect the telephone base

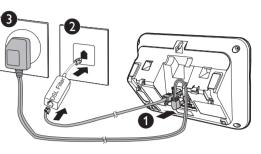


Connect the charger

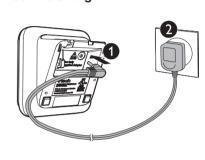


Mount the telephone base

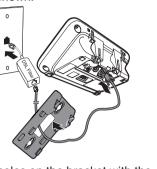

 
Align the holes on the bracket with the standard wall plate and slide the bracket down until it clicks securely in place.



Align the grooves on the telephone base with the tabs on the wall mount bracket, and then slide it down until it clicks securely in place

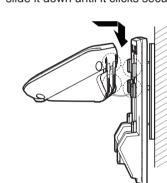

Connect the power adapter to the telephone base and an electrical outlet not controlled by a wall switch.

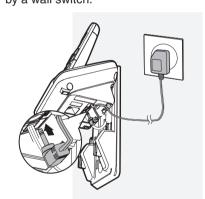


nstall and charge the battery


Install the battery

Install the battery as shown below. **Ø**NOTES

Use only the adapters provided.

 If the handset will not be used for a long time disconnect and remove the battery to prever possible leakage.

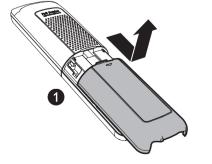

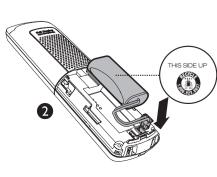

following a power outage, the handset or telephone will prompt you to set the date and time.

year correctly; otherwise the answering system does

- 1. Use the dialing keys (0-9) to enter the month (MM), date (DD) and year (YY). Then press **SELECT**.
- to choose AM or PM.

Once you have installed the battery, the handset LCD display indicates the battery status (see the table below). **M**NOTES

Place the handset in the telephone base or the

• For best performance, keep the handset in the elephone base or charger when not in use. The battery is fully charged after 12 hours of continuous charging.

	indicators	Battery status	Action
	The screen is blank, or shows Put in charger and [] flashes.	The battery has no charge or very little charge. The handset cannot be used.	Charge without interruption (at least 30 minutes).
	The screen shows Low battery and Ω flashes.	The battery has enough charge to be used for a short time.	Charge without interruption (at least 30 minutes).
	The screen shows HANDSET X.	The battery is charged.	To keep the battery charged, place it in the

or charger when

Before use

After you install your telephone or power returns

Set date and time

not announce the correct day of the week for your recorded messages time stamp.

- 2. Use the dialing keys (0-9) to enter the hour (HH) and minute (MM). Then press ▼ or ▲
- 3. Press SELECT to save

Press TALK. If you hear a dial tone, the installation

changed your telephone service to digital service from a cable company or a VoIP service provider, the telephone line may need to be rewired to allow all existing telephone jacks to work. Contact your cable/ VolP service provider for more information.

When the handset is out of range, the handset displays Out of range or no pwr at base.

If there is a call while the handset is out of range, it may not ring, or if it does ring, the call may not connect well when you press TALK. Move closer to the telephone base, and then press to answer the call. If the handset moves out of range during a telephone conversation, there closer to the telephone base.

- desired feature menu
- To return to the previous menu, press CANCEL Make sure you set the date and time including the To return to idle mode, press and hold CANCEL.

Check for dial tone:

If you do not hear a dial tone: Make sure the installation procedures described above are properly done.

Operating range

This cordless telephone operates with the maximum power allowed by the Federal Communications Commission (FCC), Ever so, this handset and telephone base can communicate over only a certain distance which can vary with the locations of the telephone base and handset, the weather, and the layout of your home or office.

may be interference. To improve reception, move

sing the handset menu

Configure your telephone

- 1. Press **MENU** when the phone is not in use. 2. Press ▼ or ▲ until the screen displays the
 - Press SELECT to enter that menu.

- all screen displays 1. Press **MENU** when the handset is not in
 - 2. Scroll to Settings, and then press SELECT

The LCD language is preset to English. You can

select English, French or Spanish to be used in

Scroll to choose English, Français or Español, and then press SELECT. 4. Press **SELECT** again to save.

Set date and time

 Make sure you set the date and time including the vear correctly; otherwise the answering system does not announce the correct day of the week for your recorded messages time stamp. 1. Press **MENU** when the handset is not in

2. Scroll to **Set date/time**, and then press SELECT. 3. Use the dialing keys (0-9) to enter the month (MM), date (DD) and year (YY).

4. Use the dialing keys (0-9) to enter the hour (HH) and minute (MM). Then press ▼ or ▲

to choose AM or PM. 5. Press **SELECT** to save.

Then press **SELECT**.

Temporary tone dialing

If you have pulse (rotary) service only, you can switch from pulse to tone dialing temporarily During a call, press ^{TONE} ★.

number. The telephone sends touch-tone

signals. It automatically returns to pulse

2. Use the dialing keys to enter the relevant

dialing mode after you end the call.

ephone operation

Handset overview

JKL5) (MO6)

· While in a menu, press to select an item, or

· Silence the ringer temporarily while the

Press and hold to erase the missed call

Press to return to the previous menu: or

Press repeatedly to show other dialing

 Press to start an intercom conversation or transfer a call (for multi-handset models only)

ndicator while the phone is not in use.

press and hold to return to idle mode, without

options when reviewing a caller ID log entry.

DOPERO QUET#

- Handset earpiece

Show the menu

· Hang up a call.


handset is ringing.

save an entry or setting.

2 - LCD display

3 - MENU/SELECT

4 - OFF/CANCEL

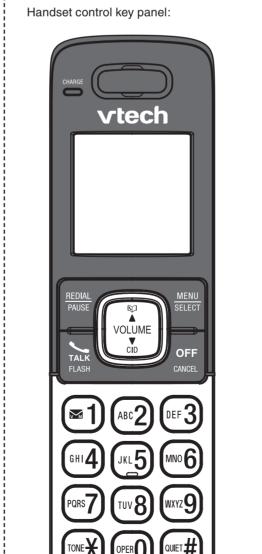

Press TALK or ■), and then dial the telephone

Make a call

Answer a call Press TALK, ■), or any dialing key.

Speakerphone

Press OFF on the handset, or put the handset

switch between speakerphone and normal

handset to adjust the listening volume.

party but the other party cannot hear you.

Press **MUTE** again to resume the

When you subscribe to call waiting service from your telephone service provider, you hear an alert tone if there is an incoming call while you are on another call.

Press FLASH to put the current call on hold

Find handset

To start paging Press /FIND HANDSET on the telephone

To end paging:

Press /FIND HANDSET again on the telephone base.

to the base or charger.

handset use.

During a call, press ▼/VOLUME/▲ on the

The handset earpiece volume setting and speakerphone volume setting are independent

The mute function allows you to hear the other

. During a call, press **MUTE** on the handset or telephone base. The screen displays Muted.

conversation. The screen displays Microphone ON.

Call waiting

Press **FLASH** to switch back and forth between calls.

and take the new call.

base. All idle handsets ring and display ** Paging **.

Use this feature to find all system handsets.

Place the handset in the telephone base or

deregistration.

- or or on another handset to join the call. Press OFF to exit the call. The call continues
- Transfer a call
- call from one handset to another. Press MENU on your handset during a call.
- 4. To answer the intercom call, press TALK, ■), or any dialing key on the destination handset.

handset number 3. To answer the intercom call, press TALK, ◀ᢀ, or any dialing key on the destination handset.

Transfer a call using intercom While on an outside call, you can use the

1. Press INT on your handset during a call.

Do not press and hold **I/FIND HANDSET** for more than four seconds. It may lead to handset

Join a call in progress You can use up to two system handsets additional expansion handsets (CS6709) for

• When a handset is on a home call, press

While on an outside call, you can transfer the

- 2. Scroll to Transfer, and then press SELECT.
- Use the intercom features for conversations between two devices.

place the handset back in the telephone

4. To end the intercom call, press **OFF** or

handset to another.

intercom feature to transfer the call from one

Press TALK, ■), OFF, or any dialing key on the

BNOTE

until all handsets hang up.

at a time on a home line call. You can buy this telephone base. You can register up to five

- handsets to the telephone base
- 3. Use the dialing keys to enter a destination

1. Press INT on your handset when not in use. 2. Use the dialing keys to enter a destination

2. The current call is put on hold. Use the dialing keys to enter a destination handset

3. To answer the intercom call, press TALK, ■), or any dialing key on the destination handset. You can now have a private conservation

before transferring the call.

4. From this intercom call, you have the

following options: You can let the destination handset join you on the outside call in a three-way conversation. Press and hold

You can transfer the call. Press OFF. or

place your handset back in the telephone base or charger. Your handset displays Transferred. The destination handset is then connected to the outside call.

INT on the originating handset.

 You can press INT to switch between the outside call (Outside call displays) and the intercom call (**Intercom** displays). The destination handset can end the intercom call by pressing **OFF**, or by

placing the handset back in the telephone

base or charger. The outside call continues with the original system handset

If you receive an incoming call during an intercom call, there is an alert tone

Answer an incoming call during an

 To answer a call, press TALK. The intercom call ends automatically. • To end the intercom call without answering the outside call, press **OFF**. The intercom call

ends and the telephone continues to ring.

Redial list Each handset stores the last 10 telephone

numbers dialed. When there are already 10

Press REDIAL when the handset is not in

2. Press **▼**, **△**, or **REDIAL** repeatedly until the

entries, the oldest entry is deleted to make room

Review the redial list

desired entry displays

for the new entry.

Dial a redial list entry Press TALK or ■) to dial.

Delete a redial list entry When the desired redial entry displays, press

Directory

The phonebook can store up to 50 entries, which are shared by all handsets. Each entry may consist of a telephone number up to

30 digits, and a name up to 15 characters.

- Add a directory entry 1. Press **MENU** when the phone is not in use. 2. Scroll to **Directory** then press **SELECT**.
- 3. Press **SELECT** again to choose Add contact. 4. Enter the number. Use the dialing keys to enter the number
- Use the dialing keys to enter the name (up to 15 characters). Additional key presses show

or right.

numbers only).

Review the directory

(up to 30 digits)

other characters of that particular key. Press SELECT to save. While entering numbers and names, you can:

Press **SELECT** to move to the name.

 Press and hold DELETE to erase the entire Press ▼ or ▲ to move the cursor to the left

• Press **DELETE** to erase a digit or character.

pause (for entering phone numbers only) • Press 0 to add a space (for entering names Press TONE X to add X () appears) or QUIET # to

• Press and hold PAUSE to insert a dialing

add # (appears) (for entering phone

Entries are sorted alphabetically.

Press when the phone is not in use. Scroll to browse through the directory, or use the dialing keys to start a

3. When the desired entry appears, press or \(\dag{\pi} \) to dial. Dial a directory entry

3 characters for the search).

name search (you can enter up to

When the desired entry appears, press

TALK or **■**® to dial. Edit a directory entry

then press **SELECT**.

- 1. When the desired entry displays, press SELECT.

choose the speed dial location you want to

 
tabletop use, unplug the telephone line cord from the telephone wall jack, and unplug the telephone base power adapter from the wall outlet before mounting your telephone on a wall. Follow the steps below to mount your telephone on a wall.

Route the telephone line cord through the rectangular hole on the wall mount bracket. Then plug the two ends of the telephone line cord into the telephone base and the wall outlet as shown.

The telephone comes ready for tabletop use

If you have already installed the telephone for





3. Use the dialing keys to edit the name, and then press **SELECT** to save.

Delete a directory entry: When the desired entry displays, press DELETE.

When the screen displays Delete contact?

press **SELECT**.

peed dial You can copy up to 9 directory entries into the speed dial locations (0 and 2-9) so that you can dial these numbers using fewer keys than usual.

The speed dial memory locations are stored

in the telephone base and are shared by all handsets. Changes made to the speed dial

entries on one handset apply to all. Assign a speed dial entry

4. Press ▼ or ▲ or the dialing keys (0 or 2-9) to

- Press MENU when the phone is not in use. 2. Scroll to **Directory**, then press **SELECT**. Scroll to Speed dial, then press SELECT.
- choose the desired speed dial location. 5. Press **SELECT**. The screen displays **Copy** from DIR... and then the first entry in the

6. Scroll to browse to the desired entry.

desired entry. 7. Press **SELECT** to save. You hear a confirmation. The name (up to 12 characters)

appears in the selected speed dial location.

Use the alphabetical search to find the

not wish to delete from the speed dial locations.

If the directory is empty, when you press SELECT in

Scroll to Speed dial, then press SELECT.

Step 5, the screen displays **Directory empty**. • If the speed dial location you selected is occupied, Reassign a speed dial entry

1. Press **MENU** when the phone is not in use. 2. Scroll to **Directory**, then press **SELECT**.

4. Press ▼ or ▲, or use the dialing keys to

2. Use the dialing keys to edit the number, and

the new directory entry you selected replaces the old one. Take caution not to replace entries you do

from DIR... and then the first entry of the directory. Scroll to browse to the desired entry.

Use the alphabetical search to find the

desired entry. 8. Press **SELECT** to save. You hear a confirmation. The name (up to 12 characters)

Dial a speed dial number

 Press and hold a dialing key (0 or 2-9) to dial the number stored in the corresponding speed dial location

appears in the selected speed dial location.

When the speed dial location is empty, the screen displays the speed dial list. See Assign a speed dial entry to add a new entry.

Delete a speed dial entry

- 1. Press **MENU** when the phone is not in use.
- 2. Scroll to **Directory**, then press **SELECT**. Scroll to Speed dial, then press SELECT
- 4. Press ▼ or ▲, or use the dialing keys to choose the desired speed dial location, then press **DELETE**. The screen displays **Clear**
- 5. Press **SELECT** to confirm. You hear a confirmation tone

 Deleting the speed dial entries does not affect the entries in the directory.

Caller ID

If you subscribe to caller ID service, information about each caller appears after the first or second ring. If you answer a call before the caller information appears on the screen, it will not be saved in the caller ID log

The caller ID log stores up to 50 entries. Each entry has up to 24 digits for the phone number and 15 characters for the name If the telephone number has more that 15 digits

only the last 15 digits appear. If the name has more than 15 characters, only the first 15 characters are shown and saved in the caller ID log.

Review a caller ID log entry

Press **CID** when the phone is not in use. Scroll to browse through the caller ID log.

When the desired entry appears: Press # repeatedly to show different

dialing options Press 1 repeatedly if you need to add or

remove 1 in front of the phone number. 3. Press TALK or ■ to dial the displayed number.

Dial a caller ID log entry

· When the desired entry appears, press or • to dial

Save a caller ID log entry to the directory

1. When the desired caller ID log entry displays, press SELECT.

- Scroll to To Directory then press SELECT. 3. Use the dialing keys to modify the number, and then press **SELECT**.
- 4. Use the dialing keys to modify the name.
- and then press **SELECT** to save Delete a caller ID log entry

When the desired caller ID log entry displays,

press **DELETE**.

Delete all caller ID log entries

• Press **MENU** when the phone is not in use. Scroll to Caller ID log and then press **SELECT**. Scroll to **Del all calls** and then press **SELECT** twice.

Sound settings

Key tone

You can choose from different ringer tones.

- Press **MENU** when the handset is not in use. Scroll to **Settings**, and then press **SELECT**.
- Scroll to choose **Key tone**, and then press SELECT.
- Scroll to choose **On** or **Off**, and then press SELECT to save

The display

dial tone.

hows No line

The answering

vstem does

The answering

system does

not announce

the correct day

of the week

for recorded

messages time

not record

messages.

- You can choose from different ringer tones. 1. Press **MENU** when the handset is not in use.
- Scroll to **Ringers**, and then press **SELECT**. Scroll to choose Ringer tone, and then
- press **SELECT** 4. Scroll to sample each ringer tone, and then press **SELECT** to save.

Ringer volume

 If you turn off the ringer volume, you will not hear ringer tone samples

You can adjust the ringer volume level, or turn the ringer off

1. Press MENU when the handset is not in use

2. Scroll to Ringers, and then press SELECT.

Press SELECT to choose Ringer volume

4. Scroll to adjust the volume, and then press **SELECT** to save.

If the handset ringer volume is set to off, the

handset is silenced for all incoming calls except Ringer volume (telephone base)

You can adjust the telephone base volume level by pressing ▼VOL- or ▲VOL+ on the top of the

telephone base when idle. Temporary ringer silencing

When the telephone is ringing, you can

temporarily silence the ringer of the handset without disconnecting the call. The next call rings normally at the preset volume · Press OFF or MUTE on the handset. The

handset displays A and Ringer muted briefly

You can turn on the guiet mode for a period of time. During this period, all tones (except paging tone) and call screening are muted. When you turn on the quiet mode, the answering system turns on automatically

- Press and hold QUET# on the handset or 2. Use the dialing keys (**0-9**) to enter the
- duration, and then press **SELECT** to save To turn off the quiet mode, press and hold OULET # on the handset or telephone base when idle.

bout answering system and picemail service

For message recording, your telephone has a built-in answering system, and it also support voicemail service offered by your telephone service provider (subscription is required, and fee may apply

If a caller leaves a very long

when the answering system

disconnects the call after the

preset recording time.

message, part of it may be lost

If the memory on the answering

message, the answering systen

stops recording and disconnects

While the handset is not in use,

press **MENU** and then enter

X364# to change the handset

LCD language back to English

system becomes full during a

The main differences between them are as

the call.

nportant safety instructions

Read and understand all instructions

When using your telephone equipment, basic safety

precautions should always be followed to reduce the risk

of fire, electric shock and injury, including the following:

Unplug this product from the wall outlet before

Use a dry non-abrasive cloth for cleaning

shelf, stand or other unstable surfaces.

cleaning. Do not use liquid or aerosol cleaners.

Do not use this product near water such as near a

swimming pool, or in a wet basement or shower

Do not place this product on an unstable table,

Avoid placing the telephone system in places

bath tub, wash bowl, kitchen sink, laundry tub or a

Follow all warnings and instructions marked on the

The messages

on the answering

I accidentally

set my LCD

language to

Spanish or

Set your built-in answering system ssages are Your answering system has various features, tored in a serve read below for the basic settings lephone base or system provid by your telephon

The answering system can record and store up to 99 messages. Each message can be up to three minutes in length. The total storage capacity for the announcement, messages and memos is approximately 11 minutes. The actual recording time depends on individual message characteristics. Your answering system allows you to set your

announcement, to save and delete messages, activate call screening, to set number of rings before pick up, to access remotely, and to control the recording time.

The answering system must be turned on to answer and record messages

To turn on or off with the telephone bases

3. Scroll to highlight **Answer on/off**, and then

Answer: Off, and then press SELECT to

Scroll to highlight Answer: On or

save. You hear a confirmation tone.

The telephone is preset with a greeting that

announcement, or replace it with your own.

Record your own announcement

message after the tone." You can use this preset

The announcement can be up to 90 seconds in

Press **MENU** when the phone is not in use.

Rec [7], and it announces, "To play, press 2

Press 7 to record. The handset announces

"Record after the tone. Press 5 when you

handset microphone. Then, press 5 when

are done." After the tone, speak towards the

Scroll to **Answering sys** and then press

The handset displays Play [2] Del [3]

answers calls with "Hello, please leave a

You can set the answering system to answer ar incoming call after 2, 3, 4, 5 or 6 rings; or toll saver. If the built-in answering system on or off. you choose toll saver, the answering system answers To turn on or off with the handset a call after 2 rings when you have new messages, or

Play the announcement

SELECT twice.

To record, press 7."

Delete the announcement

SELECT twice.

Press **MENU** when the phone is not in use.

Rec [7], and it announces, "To play, press 2.

Press **MENU** when the phone is not in use

Scroll to **Answering sys** and then press

The handset displays Play [2] Del [3]

Press 2 to play the announcement.

Scroll to Answering sys and then press

The handset displays Play [2] Del [3]

- Press MENU when the phone is not in use. Scroll to Answering sys then press SELECT.
- 4. Scroll to # of rings then press SELECT.
- 5. Scroll to choose 2, 3, 4, 5, 6 or Toll saver

When the message alert tone is set to on, and there is at least one new message, the telephone base beeps every 10 seconds. The message alert tone is preset to off

- Scroll to Answering sys then press SELECT.
- Scroll to **Ans sys setup** then press **SELECT**.
- Scroll to **Msg alert tone** then press **SELECT**. Scroll to choose **Tone: On** or **Tone: Off**.
- 6. Press **SELECT** to save and you hear a

Recording time

You can set the recording time limit for each incoming message

Press **MENU** when the phone is not in use. Scroll to Answering sys then press SELECT.

out of service within the United States and Canada.

- 3. Scroll to Ans sys setup then press SELECT.

The RBRC® program provides a convenient alternative t placing used nickel-metal hydride batteries into the trash or municipal waste, which may be illegal in your area. VTech's participation in RBRC® makes it easy for you t drop off the spent battery at local retailers particip in the RBRC program or at authorized VTech proservice centers. Please call 1 (800) 8 BATTERY information on Ni-MH battery red ans/restrictions in your area. VTech's involved this program is part of its commitment to protecting ou



RBRC® and 1 (800) 8 BATTERY® are the registered trademarks of Rechargeable Battery Recycling

FCC and IC regulations

FCC Part 15 This equipment has been tested and found to comply

with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended interference in a residential installation. This equipment erates, uses and can radiate radio frequence ergy and, if not installed and used in accordance with the instructions, may cause harmful interference quarantee that interference will not occur in a particular interference to radio or television reception, which can • Electrical power: The telephone base of this cordless user is encouraged to try to correct the interference by one or more of the following measures telephone must be connected to a working electrical Reorient or relocate the receiving antenna

- outlet. The electrical outlet should not be controlled by a wall switch. Calls cannot be made from the cordle Increase the separation between the equipment and handset if the telephone base is unplugged, switched
 - · Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV

Changes or modifications to this equipment not

expressly approved by the party responsible for compliance could void the user's authority to operate This device complies with Part 15 of the FCC rules. Rechargeable batteries: Exercise care in handling

Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference eceived, including interference that may cause undesired operation To ensure safety of users, the FCC has established riteria for the amount of radio frequency energy

that can be safely absorbed by a user or bystand according to the intended usage of the product. This product has been tested and found to comply with the FCC criteria. The handset shall be installed and used such that parts of all persons' body are maintained at a distance of approximately 8 in (20 cm) or more. This Class B digital apparatus complies with Canadian CAN ICES-3 (B)/NMB-3(B)

FCC Part 68 and ACTA This equipment complies with Part 68 of the FCC

ules and with technical requirements adopted by he Administrative Council for Terminal Attachments ACTA). The label on the back or bottom of this

lentifier must be provided to your telephone service provider upon request. The plug and jack used to connect this equipment to premises wiring and the telephone network must comply with applicable Part 68 rules and technical ments adopted by ACTA A comp ord and modular plug is provided with this product. It is signed to be connected to a compatible modular jac

letermine how many devices you may connect to your elephone line and still have them ring when you are alled. The REN for this product is encoded as the 6th and 7th characters following the US: in the product dentifier (e.g., if ## is 03, the REN is 0.3). In most, b not all areas, the sum of all RENs should be five (5.0) or ess. For more information, please contact your telephone

This equipment may not be used with Party Lines If you have specially wired alarm dialing equipmen connected to your telephone line, ensure the alarm equipment. If you have questions about what service provider or a qualified installe If this equipment is malfunctioning, it must be

can only be made by the manufacturer or its authorized outlined under the Limited warranty. If this equipment is causing harm to the telephone network, the telephone service provider may temporarily discontinue your telephone service. The elephone service provider is required to notify you

the telephone service provider is required to inform you of your right to file a complaint with the FCC. Your phone service provider may make changes in its acilities, equipment, operation, or procedures that could affect the proper functioning of this product. The telephone service provider is required to notify you if such changes are planned. If this product is equipped with a corded or cordless. andset, it is hearing aid compatible

If this product has memory dialing locations, you may choose to store emergency telephone numbers (e.g., police, fire, medical) in these locations. If you do store or test emergency numbers, please:

Industry Canada

This device complies with Industry Canada licence-exempt RSS standard(s). peration is subject to the following two conditions:

operation

This limited warranty does not cover:

· Press OFF to stop the playback.

Press 3 to delete the playing message.

Delete all old messages at the telephone

To delete all old messages at the telephone

Press **X/DELETE** twice when the phone is not

1. Press **MENU** when the phone is not in use.

A two-digit security code is required to access

touch-tone telephone. The preset code is 19.

You can use this preset code, or set your own

When the system plays your announcement,

3. You can enter one of the following remote

Play all messages.

(during playback).

I Play new messages.

Description

Delete the current message

Repeat the current message

Delete all old messages.

Hear a list of remote

(during playback)

Skip to the next message

I Record a new announcement

Turn the answering system

SELECT twice. You hear a confirmation tone.

To delete all old messages on a handset:

2. Scroll to Answering sys, and then press

3. Scroll to **Delete all old**, and then press

the answering system remotely from any

Dial your telephone number from any

enter the two-digit security code.

Stop.

commands

End the call

The Ringer Equivalence Number (REN) for this

RENs of all the devices does not exceed five

RF radiation exposure statemen

Limited warranty

This product meets the applicable Industry Canada

of the maximum number of devices allowed to be

subject only to the requirement that the sum of the

limits set forth for an uncontrolled environment. The handset should be installed and operated with a

may not ensure compliance with FCC RF exposure guidelines. This transmitter must not be co-located

Canada RSS-102 with respect to Canada's Health Code 6 for Exposure of Humans to RF Fields.

The manufacturer of this VTech Product warrants to

following terms and conditions, when installed and

used in the United States of America and Canada.

What will VTech do if the Product is not free from

defects in materials and workmanship during the limited warranty period ("Materially Defective

During the limited warranty period, VTech's authorized

service representative will repair or replace at VTech's option, without charge, a Materially Defective Product.

the sales package ("Product") are free from

only to the Consumer for Products purchas

he holder of a valid proof of purchase ("Consumer" of you") that the Product and all accessories provided

efects in material and workmanship, pursuant to the

What does this limited warranty cover?

or operating in conjunction with any other antenna or

and all persons' body. Use of other accessories

commands

2

5

mode and handset mode

A two-digit security code is required to access the answering system remotely from any touch-

Remote access code

tone telephone. The preset code is 19. You can

- set the code from 00 to 99
- 1. Press **MENU** when the phone is not in use. with your telephone service, or may be optional
- Scroll to Answering sys then press SELECT. Scroll to Ans sys setup then press SELECT.
- Scroll to **Remote code**, and then press
- 5. Use the dialing keys to enter a two-digit number.
- Scroll to a desired two-digit number. 6. Press **SELECT** to save and you hear a

confirmation tone

Use the built-in answering system

If you are on a call, or if the answering system

at least two rings earlier than your voicemai

service is set to answer. For example, if your

voicemail service answers after six rings, se

your answering system to answer after four

rings. Some voicemail service providers may

program the delay before answering calls in

seconds instead of rings. In this case, allow

six seconds per ring when determining the

voicemail message

appropriate setting.

he indicators. You can use your answering system and

voicemail service together by setting your answering system to answer before voicemai service answers as described below. To learn Press **MENU** when the handset is not in use how to program your voicemail settings, contact vour telephone service provider Scroll to Settings, and then press SELECT.

is busy recording a message and you receive SELECT. another call, the second caller can leave a Set your answering system to answer calls

Expand your telephone system

separately) to your telephone system. Your telephone base supports a maximum of five

For more details, refer to the user's manual that comes with your CS6709 new handset.

ECO mode

This power conserving technology reduces power consumption for optimal battery performance. The ECO mode activates automatically whenever the handset is synchronized with the telephone base

4. Hang up or press 8 to end the call number only signifies that the Industry Cănada technical specifications were met.

Product that has been damaged due to repa nected to a telephone interface. The termination or alteration or modification by anyone other than an authorized service represe an interface may consist of any combination of devices Product to the extent that the problem experienced is caused by signal conditions, network reliability.

- Product to the extent that the problem is caused
- have been removed, altered or rendered illegible; or Product purchased, used, serviced, or shipped for epair from outside the United States of America or Canada, or used for commercial or institution
- Product returned without a valid proof of purchas (see item 2 on the next page); or
- Charges for installation or set up, adjustmen stomer controls, and installation or repair o systems outside the unit.

To obtain warranty service, please visit our website at www.vtechcanada.com or call 1 (800) 267-7377

What must you return with the Product to get warranty service?

along with a description of the malfunction or difficulty; and

Provide your name, complete and correct mailing address, and telephone number

Other limitations This warranty is the complete and exclusive agreement

not covered by this limited warranty.

between you and VTech. It supersedes all other written or oral communications related to this Product. Tech provides no other warranties for this Product. The warranty exclusively describes all of VTech's responsibilities regarding the Product. There are no other express warranties. No one is authorized to make modifications to this limited warranty and you should not rely on any such modification

te/Provincial Law Rights: This warranty gives yo specific legal rights, and you may also have other rights which vary from state to state or province to province

fitness for a particular purpose and merchantability (ar unwritten warranty that the Product is fit for ordinary se) are limited to one year from the date of purchas ome states/provinces do not allow limitations on how long an implied warranty lasts, so the above limitatio or any indirect, special, incidental, consequentia or similar damages (including, but not limited to lost profits or revenue, inability to use the Product or other associated equipment, the cost of substitute equipment, and claims by third parties) resulting fron the use of this Product. Some states/provinces do

Please retain vour original sales receipt as

Technical specifications

control	Crystal controlled PLL synthesizer
Transmit frequency	Handset: 1921.536-1928.448 MHz Telephone base: 1921.536-1928.448
Channels	5

the time of use Handset: 2.4V Ni-MH battery Telephone base: 6V DC @ 400mA Charger: 6V AC @ 300mA

> 50 memory locations; up to 30 digits and 15 characters Handset caller ID log: 50 memory locations; up to 24 digits

according to environment conditions at

All rights reserved. 12/14. CS6729-X_CA_ACIB_V6.0 Document order number: 91-006556-040-100

Frequently asked questions

your question, visit our website at www.vtechcanada.com or call 1 (800) 267-7377. Make sure the telephone base is installed properly, and battery is

electronic parts, so it must be treated with care Avoid rough treatment Place the handset down gently. Save the original

neral product care

Taking care of your telephone

packing materials to protect your telephone if you ever need to ship it. Avoid water

Your cordless telephone contains sophisticated

Your telephone can be damaged if it gets we

Do not use the handset outdoors in the rain, or handle it with wet hands. Do not install the telephone base near a sink, bathtub or shower **Electrical storms**

Electrical storms can sometimes cause powe

surges harmful to electronic equipment. For your

own safety, take caution when using electrical appliances during storms.

Cleaning your telephon

Your telephone has a durable plastic casing that should retain its luster for many years. Clean it only with a dry non-abrasive cloth. Do not use dampened cloth or cleaning solvents of any kind

does not work

nstalled and charged correctly. For optimum daily performance return the handset to the telephone base after use.

cannot hear t If there is no dial tone on that other telephone either, ther the telephone line cord may be defective. Try installing a new telephone line cord. If changing telephone line cord does not help, the wall jack (or the wiring to this wall jack) may be defective. Contact you lephone service provide You may be using a new cable or VoIP service, the existing telephone iacks in vour home may no longer work. Contact you service provider for solutions. The handset is deregistered from The display shows To the telephone base. register HS.. Place the handset in the

isconnect the telephone line

ord from your telephone and

onnect it to another telephone

French, and don't know how to change it back to English.

and ...see telephone base to register manual t back. The handset shows alternately. The Registered and you hear a beep andset does not when the registration process work at all. empletes. This process takes about 90 seconds to complete

Make sure the answering system

is on. When the answering system

is on. **ANS ON** should display of

the handset and the telephone When the answering machine memory is full, it does not record new messages until some old

with extreme temperature, direct sunlight, or other electrical devices. Protect your phone from messages are deleted. If you subscribe to voicemail moisture, dust, corrosive liquids and fumes. service, change the number of Slots and openings in the back or bottom of the telephone base and handset are provided for rings so that your answering ventilation. To protect them from overheating, system answers before your these openings must not be blocked by placing the voicemail service answers. To product on a soft surface such as a bed, sofa or determine how many rings activate rug. This product should never be placed near or over a radiator or heat register. This product should

your voicemail service, contact your not be placed in any area where proper ventilation elephone service provider. is not provided. Make sure you have set the date This product should be operated only from the type of power source indicated on the marking label. If you and time. See Configure your are not sure of the type of power supply in your home telephone section. or office, consult your dealer or local power company.

Do not allow anything to rest on the power cord Do not install this product where the cord may be walked on 10. Never push objects of any kind into this product through the slots in the telephone base or handset because they may touch dangerous voltage points

or create a short circuit. Never spill liquid of any kind on the product. 11. To reduce the risk of electric shock, do not

When you received new messages. o retrieve essages

Storage

Your messages

automatically

will not be deleted

You have to delete

with an access

vtech

your messages

manually.

handset displavs he handset XX new messages displavs 🔀 and and the message New voicemail window on the telephone base flashes. o retrieve retrieve nessages, usually essages, you there are two ways need an access number and/or Press a button sscode provid on the telephone y your telephone base; or vice provider. Access remote

our messages

utomatically

leleted after a

eriod of time.

elephone service

rovider for more

When you receiv

ew messages,

Contact vour

------Telephone base control key panel:

▼ VOL-

Charge the battery provided with or identified for authorized service facility. Opening or removing parts of the telephone base or handset other n specified access doors may expose you

press **SELECT**.

press **SELECT**

Default announcement

SELECT twice.

When the power supply cord or plug is damaged

 If liquid has been spilled onto the product. · If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operation instructions. Improper adjustment of other controls may result in damage and

often requires extensive work by an authorized

If the product exhibits a distinct change in

base and/or handset has been damaged

leak in the vicinity of the leak. Under certain event associated with the closing of any electric circuit. The user should not plug the phone into a wall outlet, and should not put a charge handset into the cradle, if the phone is located in an environment containing concentrations of flammable or flame-supporting gases, unless there is adequate ventilation. A spark in such an environment could create a fire or explosion. Such environments might include: medical use of oxygen without adequate ventilation; industria

16. Only put the handset of your telephone next to your ear when it is in normal talk mode. 17 The power adapter is intended to be correctly oriented

 Use only the battery provided or equivalent To order a replacement, visit our website at www.vtechcanada.com or call 1 (800) 267-7377. Do not dispose of the battery in a fire. Check

SAVE THESE INSTRUCTIONS

oxic if swallowed. Exercise care in handling batteries in order not to create a short circuit with conductive materials.

to dangerous voltages or other risks. Incorrect bling can cause electric shock when the product is subsequently used Do not overload wall outlets and extension cords. 13. Unplug this product from the wall outlet and refer servicing to an authorized service facility under the

If the product has been exposed to rain or water.

technician to restore the product to normal · If the product has been dropped and the telephone

Avoid using a telephone (other than cordless) during an electrical storm. There is a remote risk of electric shock from lightning. Do not use the telephone to report a gas circumstances, a spark may be created when the adapter is plugged into the wall outlet, or when the handset is replaced in its cradle. This is a common

gases (cleaning solvents; gasoline vapors; etc.); a leak of natural gas; etc.

in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling, under-the-table or cabinet outlet.

disposal instructions. Do not open or mutilate the battery. Released electrolyte is corrosive and may cause burns or

injury to the eyes or skin. The electrolyte may be

use with this product only in accordance with the instructions and limitations specified in this manual. Precautions for users of implanted cardiac

Cardiac pacemakers (applies only to digital Wireless Technology Research, LLC (WTR), an independent research entity, led a multidisciplinar aluation of the interference between portable rireless telephones and implanted cardiac pacemakers. Supported by the U.S. Food and Drug Administration, WTR recommends to physicians that:

Should keep wireless telephones at least six inches Should NOT place wireless telephones directly over he pacemaker, such as in a breast pocket, when it

Should use the wireless telephone at the ear opposite the pacemaker. WTR's evaluation did not identify any risk to bystanders with pacemakers from other persons using wireless

About cordless telephones

 Privacy: The same features that make a cordless one convenient create some limitations telephone base and the cordless handset by radio waves, so there is a possibility that the cordless lephone conversations could be intercepted by radio receiving equipment within range of the cordless handset. For this reason, you should not private as those on corded tel

off or if the electrical power is interrupted Potential TV interference: Some cordless elephones operate at frequencies that ma cause interference to televisions and VCRs. To minimize or prevent such interference, do not place near or on top of a TV or VCR. If interference is experienced, moving the cordless telephone farther away from the TV or VCR often reduces or

eliminates the interference

keys. The battery or conductor may overheat and cause harm. Observe proper polarity between the battery and the battery charger. Nickel-metal hydride rechargeable batteries: Dispose of these batteries in a safe manner. Do not purn or puncture the battery. Like other batteries of this type, if burned or punctured, they could release caustic material which could cause injury.

batteries in order not to create a short circuit with

onducting material such as rings, bracelets and

The RBRC® seal The RBRC® seal on the nickel-metal hydride battery

indicates that VTech Communications, Inc. is voluntarily participating in an industry program to collect and recycle

Rec [7], and it announces, "To play, press 2. To record, press 7." Turn the answering system on or off 4. Press 3 to delete your own recorded announcement. Set number of rings Press (J/ANS ON on the telephone base to turn

after 4 rings when you have no new messages. 1. Press **MENU** when the phone is not in use. 2. Scroll to highlight **Answering sys**, and then

Scroll to Ans sys setup then press SELECT.

6. Press **SELECT** to save and you hear a

Message alert tone

listen to the previous message. 1. Press **MENU** when the phone is not in use. Press X/DELETE to delete the playing message. The system advances to the next

Press ►/■/STOP to stop. To playback messages at the handset: Press MENU to choose Play messages.

Press **SELECT**. Options during playback: Press ▼/VOLUME/▲ to adjust the message

4. Scroll to Recording time then press

Scroll to choose 3 minutes, 2 minutes or

You can select a language (English or French)

1. Press **MENU** when the phone is not in use

2. Scroll to Answering sys then press SELECT.

Scroll to Ans sys setup then press SELECT.

4. Scroll to Voice language then press

Scroll to choose English or Français.

When there are new answering system

messages, The handset displays XX new

messages and the message window on the

To playback messages at the telephone base:

Press ►/■/PLAY when the phone is not in use.

Press ▼VOL- or ▲VOL+ to adjust the speaker

currently playing. Press **≪/REPEAT** twice to

Press ►/SKIP to skip to the next message.

Press */REPEAT to repeat the message

6. Press **SELECT** to save and you hear a

<u>Use your built-in answering syster</u>

to be used for the answering system's voice

6. Press **SELECT** to save and you hear a

SELECT

Voice language

SELECT.

confirmation tone

New message indication

telephone base flashes

Options during playback:

playback volume.

Message playback

confirmation tone

Press 6 to skip to the next message.

 Press 4 to repeat the message. Press 4 during the time and day announcement to hear the previous message.

quipment contains, among other things, a product entifier in the format US:AAAEQ##TXXXX. This

that is also compilation. All Not it jack should normally be used for connecting to a single line and an RJ14 jack for two lines. See the installation instructions in the user's manual. The Ringer Equivalence Number (REN) is used to

service provider igged from the modular jack until the problem has n corrected. Repairs to this telephone equipment

before interrupting service. If advance notice is not practical, you will be notified as soon as possible. You I be given the opportunity to correct the problem and

Remain on the line and briefly explain the reason for Perform such activities in off-peak hours, such as early morning or late evening.

this device must accept any interference received ncluding interference that may cause undesired Privacy of communications may not be ensured when

we repair the Product, we may use new or refurbished replacement parts. If we choose to replace the Product, we may replace it with a new or refurbished Product of the same or similar design. We will retain defective parts, modules, or equipment. Repair or replacement of the Product, at VTech's option, is your exclusive remedy. VTech will return the repaired or replacement Products to you in working condition. You should expect the repair or replacement to take approximately 30 days. How long is the limited warranty period? The limited warranty period for the Product extends for ONE (1) YEAR from the date of purchase. If VTech

warranty also applies to the repaired or replacement Product for a period of either (a) 90 days from the date the repaired or replacement Product is shipped to you or (b) the time remaining on the original one-year warranty; whichever is longer What is not covered by this limited warranty?

repairs or replaces a Materially Defective Product under the terms of this limited warranty, this limited

accident, shipping or other physical damage improper installation, abnormal operation or handling, neglect, inundation, fire, water or other ninal equipment is 0.1. The REN is an indication

or cable or antenna systems; or

by use with non-VTech accessories; or Product whose warranty/quality stickers, product The handset complies with FCC RF radiation exposure

minimum distance of 8 in (20 cm) between the handset purposes (including but not limited to Products used for rental purposes); or

How do you get warranty service?

NOTE: Before calling for service, please review the eatures may save you a service call Except as provided by applicable law, you assume the and are responsible for delivery or handling charges ncurred in the transport of the Product(s) to the service ation. VTech will return repaired or replaced under this limited warranty. Transportation, delivery or handling charges are prepaid. VTech assumes no risk for damage or loss of the Product in transit. If the Product failure is not covered by this limited warranty or proof of purchase does not meet the terms of this limited warranty, VTech will notify you and will request that you authorize the cost of repair prior to any further repair activity. You must pay for the cost of repair and return shipping costs for the repair of Products that are

Return the entire original package and contents including the Product to the VTech service location

Include a "valid proof of purchase" (sales receipt) identifying the Product purchased (Product model) and the date of purchase or receipt; and

Voicemail is a feature available from most telephone service providers. It may be included

Fees may apply.

Retrieve voicemai When you received a voicemail, the handset displays 🔀 and New voicemail. To retrieve vou typically dial an access number provided by vour telephone service provider, and then ente a security code. Contact your telephone service provider for instructions on how to configure the voicemail settings and listen to messages.

ione service

Turn off the new voicemail indicators If you have retrieved your voicemail while away

This feature turns off the indicators only, it does no delete vour voicemail messages

Scroll to CIr voicemail, and then press

from home, and the handset still displays the new

voicemail indicators, use this feature to turn off

4. Press **SELECT** to save and you hear a

You can add new handsets (**CS6709**, purchased

Limitations: Implied warranties, including those of

ot allow the exclusion or limitation of incidental of consequential damages, so the above limitation of

Nominal Maximum power allowed by FCC and

Handset directory:

and 15 characters

Specifications are subject to change without notice

2014 for VTech Technologies Canada Ltd.

Below are the questions most frequently asked about the cordless telephone. If you cannot find the answer to