






(Canada version)

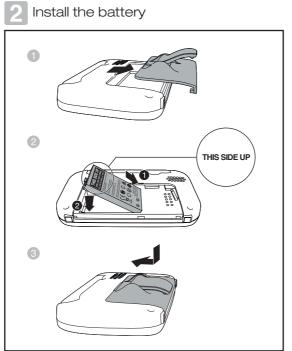


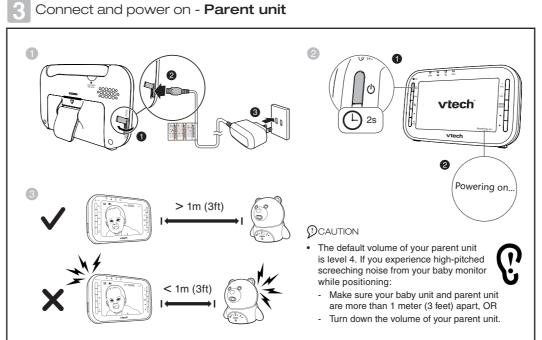


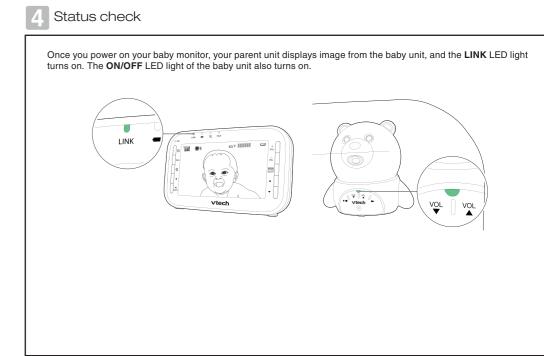


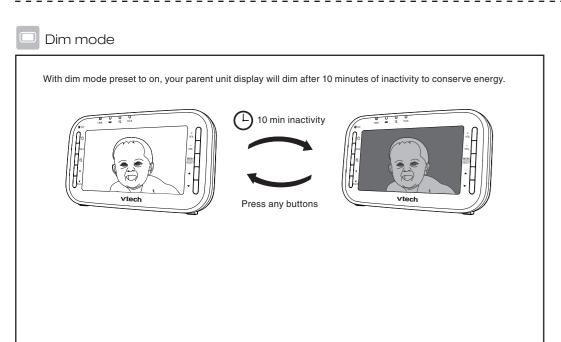

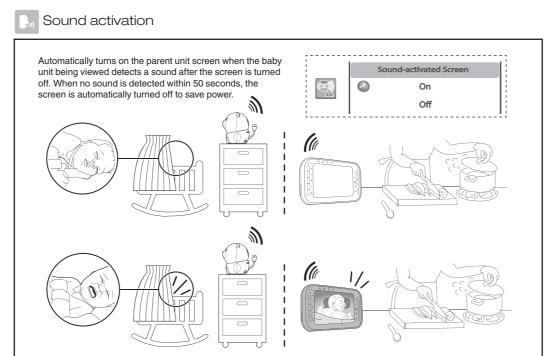

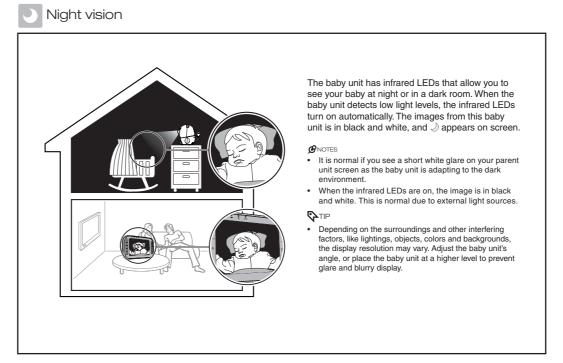

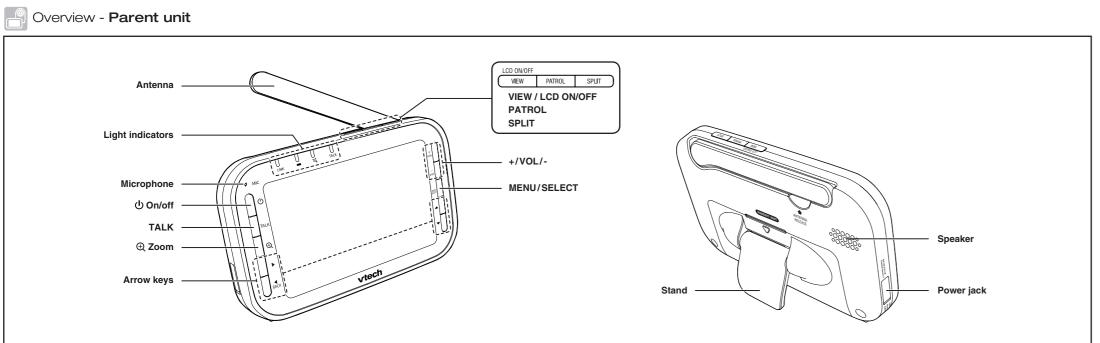

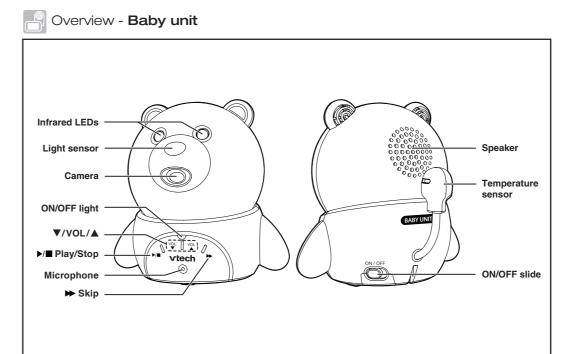

Change different views (require additional baby units - VM306)

You can view from different baby units if you have more than one baby units in your system (VM306 purchased separately).



Press VIEW to switch between the images of the baby units.








Basic operation - Parent unit


Adjust speaker volume Press +/VOL/- to adjust your parent unit speaker

volume. It determines the volume of sound transmitted from your baby unit.

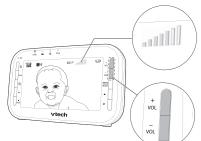


Press


to zoom in or out.

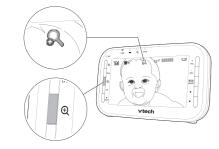

Talk to your baby unit

Press and hold TALK and speak to your parent unit. Your voice is transmitted to the baby unit.

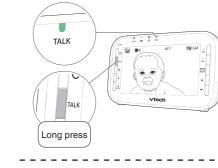

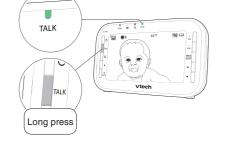



Turn off the screen

Press and hold LCD ON/OFF to switch off the screen. You can still hear sound from the





Basic operation - Baby unit


Adjust speaker volume

Press ▼/VOL/▲ to adjust your baby unit speaker volume. It determines the lullaby volume and talkback volume transmitted from your parent unit.



Press ▶/■ to play lullaby on the baby unit. Press ➤ to skip to the other lullables.


Press ►/■ again to stop the lullaby.

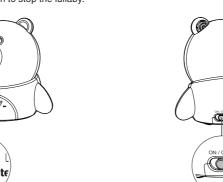

Slide the ON/OFF switch to OFF to power off your baby unit.

 Turn off the baby unit





 $\label{eq:press_pathol} \textit{Press}~\textbf{PATROL}~\text{to alternately view the image from the baby units every 10 seconds}.$

Press SPLIT to view the images from all baby units at once.

 



Use the menu

Press MENU/SELECT to enter the menu, choose a menu item, or save a setting. While in the menu:

 Press ▲ or ▼ to scroll up or down. Press to select an item.


 Press ■ BACK to return to the main menu or idle screen.




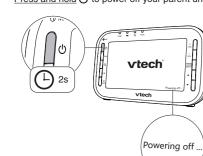

Turn off the parent unit

Press and hold b to power off your parent unit.

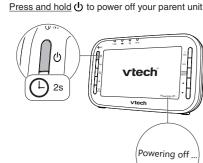

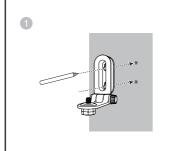

Mount the baby monitor (optional)

 Check for reception strength and amera angle before drilling the holes.

Place the wall mount bracket on a wall and then use a pencil to mark the top and the bottom holes as shown Remove the wall mount bracket and drill two holes in the wall (7/32 inch drill bit).

If you drill the holes into a stud, go to step 3.

 
If you drill the holes into an object other than a stud, insert the wall anchors into the holes. Tap gently on the ends with a hammer until the wall anchors are flush with the wall.



Align the wall mount bracket and screws with the holes in the wall as shown. Tighten the screw in the middle hole first, so that the wall mount bracket position is fixed. You can tighten the other screw in the top hole.




Place the baby unit on the wall mount bracket. Tighten the screw into the threaded socket at the bottom to secure the baby unit.



Insert the screws into the holes and tighten the screws until only 1/4 inch of the screws are exposed.



Place the baby unit on the wall mount bracket. Tighten the screw into the threaded socket at the bottom to secure the baby unit. Align the holes on the wall mount bracket with the screws on the wall, and slide the wall mount bracket down until it locks into place.

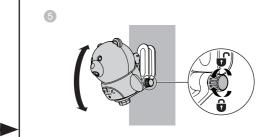

The default angle of the wall mount bracket is 90 degrees. You can maximize your baby unit's viewing angles by tilting the wall mount bracket.

Hold the baby unit, and then rotate the knob in anticlockwise direction. This will loosen the joint of the wall mount bracket. Tilt your baby unit up or down to adjust to your preferred angle. Then, rotate the knob in clockwise direction to tighten the joint and secure the angle.