

Go to www.vtechphones.com (US) to register your product for enhanced warranty support and latest VTech product news. Go to phones.vtechcanada.com (Canada) for latest VTech product news.

 
Scan the QR code for support information



US CA



Abridged User's manual



Operating temperature	0°C - 50°C 32°F - 122°F
Batteries	4 AA alkaline batteries
REN	0.6A

TECHNICAL SPECIFICATIONS

Phone: 1 (800) 595-9511 in the U.S. or 1 (800) 267-7377 in Canada
 States
 Address: 9020 SW Washington, Square Road - Ste 555 Tigard, OR 97223, United
 Company: Vtech Communications, Inc.
 Vtech Communications, Inc. and its suppliers assume no responsibility for any
 loss or claims by third parties that may arise through the use of this product.
 Vtech Communications, Inc. and its suppliers assume no responsibility for any
 damage or loss resulting from the use of this user's manual.

Disclaimer and Limitation of Liability

IMPORTANT SAFETY INFORMATION

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following:

- Read and understand all instructions.
- Follow all warnings and instructions marked on the product.
- Unplug this product from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
- CAUTION:** Do not install the telephone base at a height above 2 meters.
- Do not use this product near water such as near a bath tub, wash bowl, kitchen sink, laundry tub or a swimming pool, or in a wet basement or shower.
- Do not place this product on an unstable table, shelf, stand or other unstable surfaces.
- Avoid placing the telephone system in places with extreme temperature, direct sunlight, or other electrical devices. Protect your phone from moisture, dust, corrosive liquids and fumes.
- Slots and openings in the back or bottom of the telephone base and handset are provided for ventilation. To protect them from overheating, these openings must not be blocked by placing the product on a soft surface such as a bed, sofa or rug. This product should never be placed near or over a radiator or heat register. This product should not be placed in any area where proper ventilation is not provided.
- This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply in your home or office, consult your dealer or local power company. Do not allow anything to rest on the power cord. Do not install this product where the cord may be walked on.
- Never push objects of any kind into this product through the slots in the telephone base or handset because they may touch dangerous voltage points or create a short circuit. Never spill liquid of any kind on the product. To reduce the risk of electric shock, do not disassemble this product, but take it to an authorized service facility. Opening or removing parts of the telephone base or handset other than specified access doors may expose you to dangerous voltages or other risks. Incorrect reassembling can cause electric shock when the product is subsequently used.
- Do not overload wall outlets and extension cords.
- Unplug this product from the wall outlet and refer servicing to an authorized service facility under the following conditions:
 - When the power supply cord or plug is damaged or frayed.
 - If liquid has been spilled onto the product.
 - If the product has been exposed to rain or water.
 - If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operation instructions. Improper adjustment of other controls may result in damage and often requires extensive work by an authorized technician to restore the product to normal operation.
 - If the product has been dropped and the telephone base and / or handset has been damaged.
 - If the product exhibits a distinct change in performance.
- Avoid using a telephone (other than cordless) during an electrical storm. There is a remote risk of electric shock from lightning.
- Do not use the telephone to report a gas leak in the vicinity of the leak. Under certain circumstances, a spark may be created when the adapter is plugged into the power outlet, or when the handset is replaced in its cradle. This is a common event associated with the closing of any electrical circuit. The user should not plug the phone into a power outlet, and should not put a charged handset into the cradle, if the phone is located in an environment containing concentrations of flammable or flame-supporting gases, unless there is adequate ventilation. A spark in such an environment could create a

fire or explosion. Such environments might include: medical use of oxygen without adequate ventilation; industrial gases (cleaning solvents; gasoline vapors; etc.); a leak of natural gas; etc.

- Only put the handset of your telephone next to your ear when it is in normal talk mode.
- The power adapter is intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling, under-the-table or cabinet outlet.
- For pluggable equipment, the socket-outlet shall be installed near the equipment and shall be easily accessible.
- Use only the adapter included with this product. Incorrect adapter polarity or voltage can seriously damage the product.
- The applied nameplate is located at the bottom or near of the product.

SAVE THESE INSTRUCTIONS

WHAT'S IN THE BOX

Your package contains:

 
- Telephone base with mounting bracket and directory card attached;
- Handset;
- Coiled handset cord;
- Telephone line cord; and
- Abridged User's manual.

BASIC SET UP & OPERATE


INSTALL BATTERY

This telephone requires four alkaline AA batteries (not included). Always use the same brand and type of batteries. Do not mix old and new batteries to prevent battery leakage. When there is no battery installed or the power of the installed batteries is low, this telephone will work only to make or answer calls with the handset.


- Press down and pull to open.

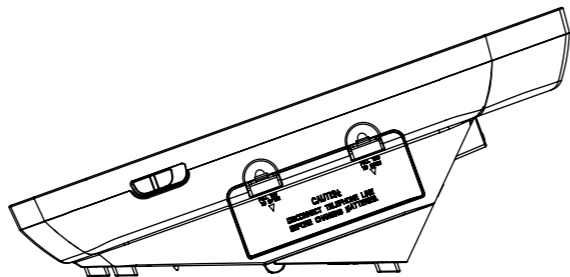

- Insert 4 AA alkaline batteries.

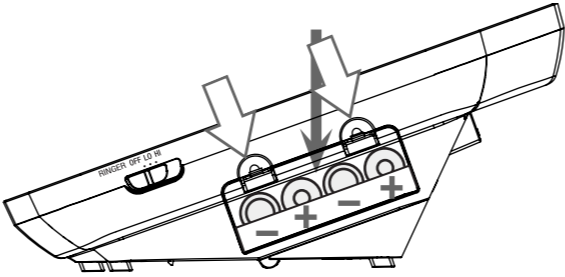 

 - Close and snap the battery compartment cover into place.

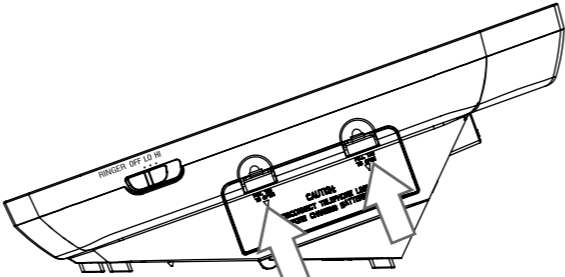


CAUTION

- Always unplug the telephone line cord before installing new batteries.

INSTALL TELEPHONE BASE

 -

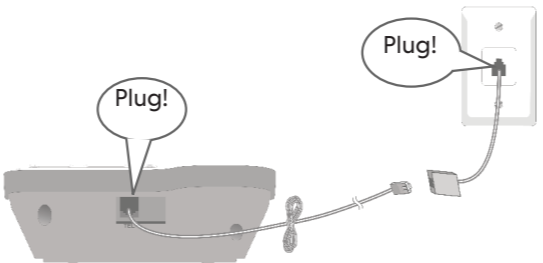

- If you have DSL high-speed Internet service, a DSL filter (not included) is required. The DSL filter must be plugged into the telephone wall jack.

-



SET DATE AND TIME

- Press **MENU/SELECT** repeatedly until the screen displays:-



- Use the dial pad keys (**0-9**) to change the blinking digit.
 - Press **▼** or **▲** to the previous or next digit.
 - Press **#** (pound key) to select between **AM** or **PM**.

- Press **MENU/SELECT** to save the new settings and move to the next option.

SET RINGER VOLUME



Slide the ringer switch to adjust ringer volume. appears on the screen means the ringer is off.

(**RINGER OFF-LO-HI**) design

Slide the ringer switch to select your preferred ringer volume.

SET CONTRAST

Adjust the screen brightness to a comfortable level, from **1** (light) to **4** (dark).

- Press **MENU/SELECT** repeatedly until the screen displays:



- Press **▼** or **▲** until the screen displays the contrast level you prefer.
- Press **MENU/SELECT** to save the setting.

SET HOME AREA CODE

A home area code must be programmed to use the display dial feature.

- Press **MENU/SELECT** repeatedly until the screen displays:

 


- Use the dial pad keys (**0-9**) to enter the home area code.
 - Press **▲** to move to the next digit.
 - Press **▼** to backspace.
 - Press **DELETE** to delete a digit.

- Press **MENU/SELECT** to save the setting.

SET LOCAL AREA CODE

- Press **MENU/SELECT** repeatedly until the screen displays:

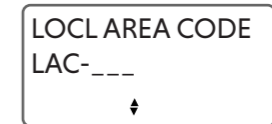

- Use the dial pad keys (**0-9**) to enter the home area code.
 - Press **▲** to move to the next digit.
 - Press **▼** to backspace.
 - Press **DELETE** to delete a digit.

- Press **MENU/SELECT** to save the setting.
- Repeat step 2 - 3 to set more local area codes.

SET DIRECTORY

This telephone has a directory where you can store up to 25 telephone numbers and names. Numbers can be up to 24 digits long and names can be up to 15 characters.

To add a directory entry

- Press **▲** → **▼** or **▲** → **STORE** flashes → **MENU/SELECT**.
- Enter the telephone number → **MENU/SELECT**.
- Enter the name → **MENU/SELECT**.

To review and dial a directory entry

- Press **▲**.
- Press **▼** or **▲** until **REVIEW** flashes.
- Press **MENU/SELECT** → **▼** or **▲** → to scroll through the directory, then lift the handset or press **SPEAKER**.

To delete a directory entry

- Press **▲**.
- Press **▼** or **▲** until **REVIEW** flashes.
- Press **MENU/SELECT** → **▼** or **▲** → to scroll through the directory, then press **DELETE** → **MENU/SELECT**.

SPEED DIAL

There are 14 speed dial locations (7 upper and 7 lower). To access an upper location, press a speed dial key. To access a lower location, press **LOWER**, then press a speed dial key.

To assign a speed dial entry

- Press a speed dial location, or press **LOWER**, then the desired speed dial location → press **MENU/SELECT**.
- Enter the telephone number → press **MENU/SELECT**.

To dial a speed dial entry

- Lift the handset or press **▲** **SPEAKER**.
- Press the desired speed dial location, or press **LOWER**, then the desired speed dial location.

To delete a speed dial entry

Press the desired speed dial location, or press **LOWER**, then the desired speed dial location → Press **DELETE** → **MENU/SELECT**.

CALLER ID

To review the call history

- Press **▼** to enter the call history.
- Press **▼** or **▲** to scroll through the caller ID entries.
- Press **CANCEL** to exit and return to idle mode.

To dial a caller ID entry

- Press **▼** to enter the call history.
- Press **▼** or **▲** to scroll through the caller ID entries.
- Lift the handset or press **SPEAKER** to call.

To delete a caller ID entry

- Press **▼** to enter the call history.
- Press **▼** or **▲** to scroll through the caller ID entries → press **DELETE** → press **MENU/SELECT**.

To delete all caller ID entries

When the telephone is not in use:

- Press and hold **DELETE**
- Press **MENU/SELECT**.

