


### Quick start guide

for model DS6151

#### Install the telephone base

Follow the figures below to install the telephone base as shown below:

#### Figure One: Installation with 2-line jack Electrical outlet L1+L2 If you have DSL not controlled telephone high-speed by a wall switch wall jack Internet service, a DSL filter (not included) is required. . Connect the black Telephone telephone line base power cord to jack adapter labeled LINE 1/L1+L2. Telephone base Figure Two: Installation with separate line jacks

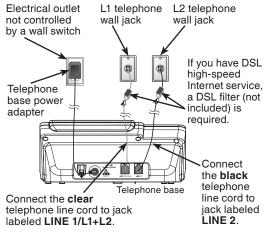

Use only the power adapter and battery note supplied with this VTech telephone.

For complete feature instructions, please refer to your user's manual.

### Battery installation and charging

Install the battery as shown below. After installing the battery, you might be able to make and receive short calls. For best performance, charge the handset battery for at least 16 hours before use.

 
1. If the battery

cover to remove.


compartment.

<del>rte</del>ch


2. Plug the battery compartment cover is on connector securely into the socket inside the handset, press the the handset battery indentation and slide the compartment, matching the color-coded label.



3. Place the battery with 4. Align the cover flat the label THIS SIDE UP against the battery facing up and the wires compartment, then slide it towards the center of inside the battery the handset until it clicks into place.

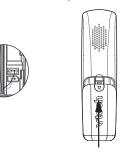

5. Charge the handset by placing it in the telephone base or charger. The CHARGE light is on when the handset charges.

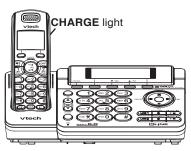

### Make, answer and end a call

#### Using the handset:

#### Make a call

- 1. Press 1 LINE/FLASH, 2 LINE/FLASH, or ■).
- 2. Enter the telephone number.

#### Predial a call

- 1. Enter the telephone number.
- 2. Press 1 LINE/FLASH, 2 LINE/FLASH or .

#### Answer a call

Press 1 LINE/FLASH or 2 LINE/FLASH to answer.

#### End a call

Press OFF or return the handset to the telephone base to hang up.

#### Using the telephone base:

#### Make a call

- 1. Press LINE 1 or LINE 2.
- 2. Enter the telephone number.

#### Predial a call

- 1. Enter the telephone number.
- 2. Press LINE 1 or LINE 2.

#### Answer a call

Press LINE 1 or LINE 2 to answer.

#### End a call

Press LINE 1 or LINE 2.

 
#### Turn the answering system on or off

You must turn on the answering system for answering and recording messages.

#### To turn on or off with the telephone base:

1. Press Φ/ON/OFF LINE 1 and/or ψ/ON/OFF LINE 2 to turn

on the corresponding answering system. The telephone base announces and shows, "Calls will be answered." The **<sup>ψ</sup>/ON/OFF LINE 1** light and/or **<b>ON/OFF LINE 2** light will be on respectively.



2. Press U/ON/OFF LINE 1 and/or ψ/ON/OFF LINE 2 to turn off the corresponding answering system. The telephone base announces and shows, "Calls will not be answered." The ப்/ON/OFF LINE 1 light and/or ON/OFF LINE 2 light will be off respectively.

#### To turn on or off with a handset:

- 1. Press the **MENU** softkey when the handset is not in use.
- 2. Press the SELECT softkey to select **ANSWERING SYS.**
- 3. Press ▲ or ▼ to select Mailbox 1 or Mailbox 2, then press the SELECT softkey. The corresponding icon,  $\mathbf{QQ}^1$  or  $\mathbf{QQ}_2$ , flashes on the screen.
- 4. Press  $\blacktriangle$  or  $\triangledown$  to select **Ans sys setup**, then press the **SELECT** softkey.
- 5. Press ▲ or ▼ to select Answer ON/OFF. then press the SELECT softkey.
- 6. Press  $\blacktriangle$  or  $\checkmark$  to select **On** or **Off**, then press the SET softkey to confirm your setting or press the **BACK** softkey to exit to the previous menu without making any changes.
- 7. The screen displays  $\frac{8051}{014}$  or  $\frac{805}{0142}$  when the answering system of line 1 or line 2 is turned on respectively. The screen displays <sup>Bns1</sup> when the answering systems of both lines 1 and 2 are turned on.



#### **Outgoing announcement**

The telephone is preset with a greeting that answers calls with *"Hello, please leave a message after the tone."* You may use this preset announcement, or replace it with your own.

## Use the telephone base to record your own announcement:

- 1. Press •/REC while the telephone base is not in use.
- 2. Press ▼/CID or ▲/DIR to select Announcement, then press the SELECT softkey.
- Press ▼/ciD or ▲/DiR to select Mailbox 1 or Mailbox 2, then press the SELECT softkey. The corresponding icon, 100 or 002, flashes on the screen.
- The telephone base announces, *"Record after the tone. Press 5 when you are done."* After the tone, speak towards MIC (microphone) of the telephone base. Press 5 or the STOP softkey when finished recording.
- The answering system automatically plays back the newly recorded announcement. Press 5 to stop the playback at any time.

# Use a handset to record your own announcement:

- 1. Press the **MENU** softkey menu when the handset is not in use.
- 2. Press the SELECT softkey to select ANSWERING SYS.
- Press ▲ or ▼ to select Mailbox 1 or Mailbox 2, then press the SELECT softkey. The corresponding icon, QO<sup>1</sup> or QO<sub>2</sub>, flashes on the screen.
- 4. Press ▲ or ▼ to select **Ans sys setup**, then press the **SELECT** softkey.
- Press ▲ or ▼ to select Announcement, then press the SELECT softkey.
- The handset announces, *"To play, press 2. To record, press 7."* Press 7 to record and the screen shows Recording announcement..., or press the BACK softkey to exit to the previous menu.
- 7. The handset announces, *"Record after the tone. Press 5 when you are done."* After the tone, speak towards the microphone of the handset.
- 8. Press **5** or the **STOP** softkey when finished recording.
- The answering system automatically plays back the newly recorded announcement.
   Press 5 to stop the playback at any time; 2 to replay the recorded announcement; or 7 to record again if desired.
- 10. Press the **BACK** softkey to exit to the previous menu.

## To play messages with the telephone base:

Press ►/■/MAILBOX LINE 1 for line 1 or ►/■/MAILBOX LINE 2 for line 2 to listen to messages.

Options during playback:

- Press **▼/VOL/▲** to adjust the speaker volume.
- Press ►/SKIP to skip to the next message.
- Press «/REPEAT to repeat the message currently playing. Press «/REPEAT twice to listen to the previous message.
- Press X/DELETE to delete the current message. The system advances to the next message.
- Press ▶/■/MAILBOX LINE 1 for line 1 or
  ▶/■/MAILBOX LINE 2 for line 2 to stop listening to messages.
- Press CANCEL to exit to the previous menu.

#### To play messages with a handset:

- 1. Press the **MENU** softkey when the handset is not in use.
- 2. Press the SELECT softkey to select ANSWERING SYS.
- Press ▲ or ▼ to select Mailbox 1 or Mailbox 2. Press the SELECT softkey.
- 4. Press ▲ or ▼ to select Play messages, then press the SELECT softkey.

Options during playback:

- Press ▼/VOL/▲ to adjust the speaker volume.
- Press 6 to skip to the next message.
- Press 4 to repeat the message currently playing. Press 4 twice to listen to the previous message.
- Press 3 to delete the current message.
  The system advances to the next message.
- Press 5 to stop.
- Press the **BACK** softkey to exit to the previous menu.

#### **IMPORTANT!**

If your product is not working properly:

- Refer to the **Troubleshooting** section of the user's manual.
- Visit our website at www.vtechphones.com or call 1 (800) 595-9511. In Canada, go to www.vtechcananda.com or dial 1 (800) 267-7377.