
DECT 6.0 cordless telephone with BLUETOOTH® wireless technology





Abridged user's manual (Canada version)

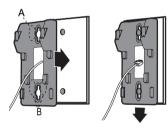

3. Align the grooves on the telephone base with the tabs on the wall mount bracket, and then slide it down until it clicks securely in place.



base and an electrical outlet not controlled by a wall switch.



Congratulations

on purchasing your new VTech product. Before using this product, please read Important safety instructions.

This abridged user's manual provides you with basic installation and use instructions. A limited set of features are described in abbreviated form.


Please refer to the online User's manual for a full set of installation and operation instructions at www.vtechcanada.com.





elephones identified with this logo have reduced noise and nterference when used with most T-coil equipped hearing aids and cochlear implants The TIA-1083 Compliant Logo is a trademark of the lecommunications Industry Association. Used under license.

What's in the box

Your product package contains the following items. Save your sales receipt and original packaging in the event warranty service is

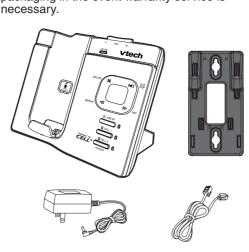

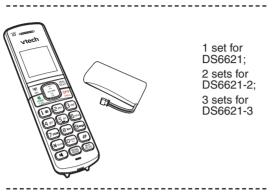

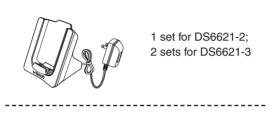

1 set for DS6621-2; 2 sets for DS6621-3

1 set for

DS6621

2 sets for

DS6621-2

3 sets for

DS6621-3



3. Press **SELECT** to save After the setting for the date and time, the

Set answering system through voice guide This feature assists you to do the basic setup of the answering system. You can follow the voice guide to record your own announcement, set the number of rings and the message alert tone. 1. Press **SELECT** to start the voice guide

for the answering system setup. You hear the voice prompt "Hello! This voice guide will assist you with the basic setup of your answering system. 2. Setup your answering system by inputting

the designated numbers as instructed in the voice guide. Check for dial tone:

Press **省/HOME**. If you hear a dial tone, the nstallation is successful.

If you do not hear a dial tone:

· Make sure the installation procedures described above are properly done.

It may be a wiring problem. If you have changed your telephone service to digital service from a cable company or a VoIP service provider, the telephone line may need to be rewired to allow all existing telephone jacks to work. Contact your cable/ VoIP service provider for more information.

Operating range This cordless telephone operates with the

maximum power allowed by the Federal Communications Commission (FCC). Even so, this handset and telephone base can communicate over only a certain distance which can vary with the locations of the elephone base and handset, the weather, and the layout of your home or office.

When the handset is out of range, the handset displays Out of range or and no pwr at base

If there is a call while the handset is out of range, it may not ring, or if it does ring, the call may not connect well when you press **A/HOME** or (1)/CELL. Move closer to the telephone base. and then press **A/HOME** or **P/CELL** to answer the call. If the handset moves out of range during a telephone conversation, there may be interference. To improve reception, move closer to the telephone base.

- MUTE/DELETE

the dialing keys.

handset is ringing.

1 – Handset earpiece

Show the menu

Hang up a call

handset is ringing.

· While in a menu, press to select an item,

• Silence the ringer temporarily while the

Press and hold to erase the missed call

indicator while the phone is not in use.

· Press to return to the previous menu; or

press and hold to return to idle mode,

Press repeatedly to show other dialing

Mute the microphone during a call.

· Delete digits or characters while using

Silence the ringer temporarily while the

options when reviewing a caller ID log

or save an entry or setting


without making changes.

2 - LCD display

3 - MENU/SELECT

4 - OFF/CANCEL

To use a Bluetooth enabled cell phone or headset with your **DS6621**, you must first pair and connect your Bluetooth cell phone or headset with the telephone base.

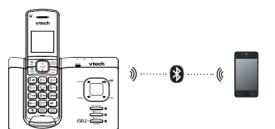

Bluetooth wireless technology operates within a short range (a maximum of approximately 30 feet). When you pair a Bluetooth cell phone to the telephone base, place your Bluetooth cell phone closer to the telephone base to maintain sufficient signal strength.

within 15 feet of the telephone base while using the cell line.

Pair and connect your Bluetooth enabled

Choose a slot to pair the cell phone. Press and hold 🚯 CELL 1 or CELL 2/HEADSET on the telephone base until you hear a confirmation tone, and the (3 CELL 1 or (3 CELL 2/HEADSET light flashes.

Turn on the Bluetooth feature of your cell phone. Once your cell phone finds your VTech phone (VTech DS6621), press appropriate key on your cell phone to continue the pairing process.

 Your cell phone may prompt you to enter the PIN of the telephone base. The default PIN of the telephone base is **0000**.

elephone base, the corresponding status icon (1 or 1 or 1 displays. The corresponding device ight (S) CELL 1 or (S) CELL 2/HEADSET) turns on. If the pairing fails, turn off the Bluetooth feature on your cell phone and on the **DS6621** by pressing (3) CELL 1 or (3) CELL 2/HEADSET. Then repeat the steps above to pair and connect again. In some cases, it may take you a few attempts to complete the pairing process.

7 - REDIAL/PAUSE

· Press repeatedly to review the redial list. Press and hold to insert a dialing pause while entering a number.

8 - Microphone

9 – 💶

- · Make or answer a call using the handset speakerphone.
- During a call, press to switch between the speakerphone and the handset

Press to add a space when entering

11 – *tone

• While you have set the dial mode to pulse and on a call, press to switch to tone dialing temporarily.

 Press repeatedly to add or remove 1 in front of the caller ID log entry before dialing or saving it to the phonebook.

Press and hold to set or dial your voicemail number

_ 爺/HOME/FLASH Make or answer a home call.

• Answer an incoming home call when you 2 - X/DELETE hear a call waiting alert.

14 - (P)/CELL

Make or answer a cell call.

 Answer an incoming cell call when you hear a call waiting alert.

15 - VOLUME/^/♥

VOLUME/~/CID

• Review the phonebook when the phone is not in use

· Increase the listening volume during a

 Scroll up while in a menu, or in the phonebook, caller ID log, or redial list.

 Move the cursor to the right when entering numbers or names.

Review the caller ID log when the phone is not in use. Decrease the listening volume during a

Scroll down while in a menu, or in the


phonebook, caller ID log, or redial list.

 Move the cursor to the left when entering numbers or names.

16 - CHARGE light

On when the handset is charging.

Telephone base overview

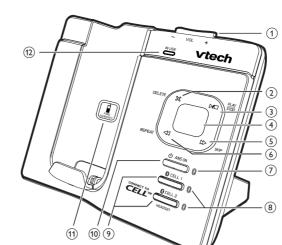

1 - -/VOL/+

- · Press to adjust the volume during message playback.
- Press to adjust the telephone base ringer volume when the phone is not in use.

 When the phone is not in use, press twice to delete all previously reviewed mes-

Press to delete the playing message.

3 - ▶/■/PLAY/STOP

 Press to play messages. Press to stop message playback

Press to repeat a message

4 – Message window

• Shows the number of messages, and other information of the answering system or telephone base.

5 - ₩/SKIP Press to skip to the next message.

6 - ≪/REPEAT

Press twice to play the previous message.

7 - 也/ANS ON light

On when the answering system is on.

8 – **3** CELL 1 and CELL 2/HEADSET lights

- On when the telephone base is paired
- Flashes when the telephone base is in discoverable mode.


9 – 3 CELL 1 and 3 CELL 2/HEADSET

· Press and hold to add or replace a Blue-

Press to turn the answering system on or

11 – I/FIND HANDSET

12 - IN USE light

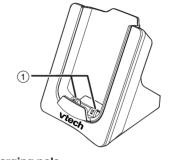

Display icons overview

The battery icon flashes when the

pattery is low and needs charging.

The battery icon becomes solid

when the battery is fully charged.

The battery icon animates when

the battery is charging.

The ECO mode activates

automatically to reduce power

consumption when the handset is

within range from the telephone

There are new voicemail received

On when the home line is in use

or there is an incoming home call.

from your telephone service

Flashes when there is an

incoming home waiting call.

There are Bluetooth devices

connected on the cell devices list

On when the cell line is in use or

there is an incoming cell call.

Flashes when there is an

ncoming cell waiting call.

There are new caller ID log

The handset ringer is off.

The answering system is turned

The message number currently

playing and total number of

new/old messages recorded.

provider

Press **[♠]/HOME** or **II**, and then dial the Call waiting on the home line: telephone number

Enter the telephone number on the handset and take the new call. or base, and then press **[♠]/HOME** or **■** to Press FLASH to switch back and forth

Call waiting on the cell line:

• Press (*)/CELL 1 or (*)/CELL 2, to put the

• Press (*)/CELL 1 or (*)/CELL 2 to switch

Find handset

To start paging Press **/FIND HANDSET** on the telephone base. All idle handsets ring and display '

telephone base.

charger.

6NOTE

Press A/HOME, (♠)/CELL, ■, CANCEL, or

Press **OFF** on the handset, or put the handse

Do not press and hold **I/FIND HANDSET** for During a call, press
on the handset to switch between speakerphone and normal handset

Join a call in progress You can use up to two system handsets at a time on a home line call. You can buy

 When a handset is on a home call, press **★/HOME** or **II** on another handset to join the

Press OFF to exit the call. The call continues

until all handsets hang up. telephone base. The screen displays Muted.

Use the intercom features for conversations

1. Press **MENU** on your handset when not in

then press **SELECT**. Use the dialing keys to enter a destination device number.

for the latest VTech product news.

Bluetooth



landset overview

and connected with a Bluetooth device


Press to connect the paired cell Bluetooth

10 – U/ANS ON

Press to page all system handsets.

- · On when the handset is in use, or the answering system is answering a call.
- Flashes when there is an incoming call, or another telephone sharing the same line is in use.

Charger overview

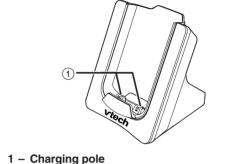

ANS ON

You can choose to connect the telephone base for desktop usage or wall mounting. **O**NOTES

• Use only the adapters provided.

Make a home call

Make a cell call

ØNOTES

(•)/CELL to dial.

• Even if you do not subscribe to any conventional telephone service, you can pair a Bluetooth enabled cell phone to your telephone base (see plugging in a telephone line cord.

Press (*)/CELL on the handset or base.

Enter the telephone number, and then press

Enter the telephone number on the handset

or base, and then press (*)/CELLto dial.

After first pressing (१)/CELL, you may need to choose a cell device. Scroll to select the desired ce

phone, such as large furniture or thick walls.

Press A/HOME, (♠)/CELL, ■, or any dialing

During a call, press \(\ssigmu/VOLUME/\sigma \) on the

The handset earpiece volume setting and speakerphone

handset to adjust the listening volume.

Answer a home/cell call

End a home/cell call

Speakerphone

Volume

to the base or charger.

volume setting are independent.

device when necessary, and then press **SELECT**.

Connect the telephone base

If you subscribe to digital subscriber line (DSL)


e, make sure you install a DSL filter (not

included) between the telephone line cord and


telephone wall jack. Contact your DSL service

provider for more information.


high-speed Internet service through your telephone

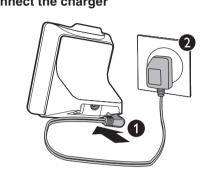


cord into the telephone base and the wall outlet as shown.

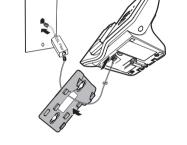


2 Align the holes on the bracket with the standard wall plate and slide the bracket down until it clicks securely in place.

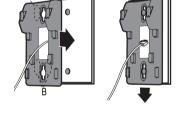

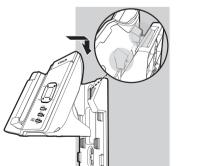


4. Connect the power adapter to the telephone

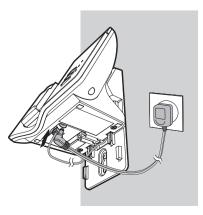



Install and charge the battery


Install the battery

possible leakage.

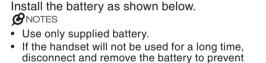

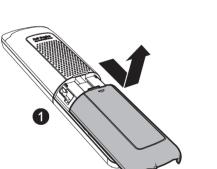

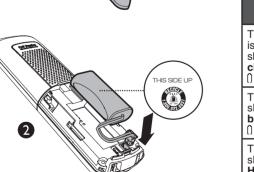

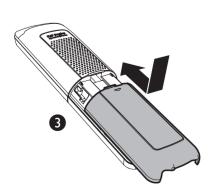

charger to charge **CHARGE** light remains or when charging. vtech

Once you have installed the battery, the

continuous charging.

For best performance, keep the handset in the

indicators	·	
The screen is blank, or shows Put in charger and () flashes.	The battery has no charge or very little charge. The handset cannot be used.	Charge withou interruption (at least 30 minutes).
The screen shows Low battery and () flashes.	The battery has enough charge to be used for a short time.	Charge withou interruption (at least 30 minutes).
The screen shows HANDSET X .	The battery is charged.	To keep the battery charged place it in the telephone base

Battery Battery status Action

Before use

⊘NOTE

After you install your telephone or power returns following a power outage, the handset will prompt vou to set the date and time, and the answering system through voice guide.

year correctly; otherwise the answering system does not announce the correct day of the week for your recorded messages time stamp.

Make sure you set the date and time including the

Charge the battery

handset LCD display indicates the battery status (see the table below).

telephone base or charger when not in use.

The battery is fully charged after 12 hours of

ne screen blank, or nows Put in narger and flashes.	The battery has no charge or very little charge. The handset cannot be used.	Charge without interruption (at least 30 minutes).
ne screen nows Low attery and flashes.	The battery has enough charge to be used for a short time.	Charge without interruption (at least 30 minutes).
ne screen	The battery is	To keep the battery charged.

Set date and time

or charger when

not in use.

 Use the dialing keys (0-9) to enter the month (MM), date (DD) and year (YY). Then press **SELECT**.

2. Use the dialing keys (0-9) to enter the hour (**HH**) and minute (**MM**). Then press \checkmark or \land Place the handset in the telephone base or the to choose AM or PM.

handset will display Voice guide to... and set up Ans sys? alternatively.

For optimal performance, keep your cell phone

cell phone

When the cell phone is connected to the

then press SELECT. and then press **SELECT**. The screen displays

VTech Connect to Cell[™] application This application helps you integrate your Android phones with your DS6621. For more information and application

http://play.google.com/store/apps/ details?id=com.vtech.connecttocell

- 3. Scroll to **Download PB**, and then press
- download. If this is the case, transfer the contacts from your SIM card to your cell phone memory first Then download from your cell phone memory. For more information on how to transfer contacts from your SIM card to your cell phone memory, see the user's manual of your cell phone.

cell phone. Refer to the user's manual of your cell

phone for more information about how that device

- . Press **MENU** on the phone when it is not in use. desired feature menu
- 4. Set your headset to discoverable mode. Once your handset finds your headset, press SELECT. • Enter the PIN of your headset if required. The PIN for most Bluetooth devices is

When the headset is successfully paired and connected to the telephone base, the 3, icon displays. The CELL 2/HEADSET light turns on.

download, scan the QR code on the right, or go to

Download contacts from your Bluetooth

SELECT.

4. Scroll to select the desired cell phone, and

download. • The performance of phonebook download feature depends on the compatibility of your Bluetooth

Certain cell phones do not support SIM card

Pair and connect your Bluetooth enabled

Press ✓ or Λ to scroll to Add BT headset

0000 (refer to the user's manual of your neadset), and then press SELECT.

- Press MENU when the phone is not in use. Scroll to Bluetooth, and then press SELECT.
- For certain cell phones, you may need to press a key on your cell phone to confirm the phonebook

then press **SELECT**.

uses Bluetooth connectivity.

 For Android cell phones, you may also download your cell phone contacts to

your **DS6621** via the VTech Contact

http://play.google.com/store/apps details?id=com.innopage.MMl

the right, or go to

for application download.

Share application. Scan the QR code on

Jsing the handset menu

1. Press **MENU** when the phone is not in use. 2. Press vor until the screen displays the

• To return to the previous menu, press CANCEL.

To return to idle mode, <u>press and hold</u> CANCEL.

The LCD language is preset to English. You can

select English, French or Spanish to be used in

Configure your telephone

Press SELECT to enter that menu.

all screen displavs 1. Press **MENU** when the handset is not in use. 2. Scroll to **Settings**, and then press

3. Scroll to choose English, Français or

Español 4. Press SELECT to save.

SELECT twice.

· Make sure you set the date and time including the does not announce the correct day of the week for

1. Press **MENU** when the handset is not in use.

Scroll to Set date/time, and then press 3. Use the dialing keys (0-9) to enter the month (MM), date (DD) and year (YY). Then press **SELECT**.

4. Use the dialing keys (0-9) to enter the hour

If you have pulse (rotary) service only, you can

switch from pulse to tone dialing temporarily

(**HH**) and minute (**MM**). Then press \checkmark or $^{\sim}$

your recorded messages time stamp.

to choose AM or PM. Press SELECT to save.

during a call.

Temporary tone dialing

 During a call, press *\(\frac{\text{\text{tone}}}{\text{tone}}\). 2. Use the dialing keys to enter the relevant number. The telephone sends touch-tone signals. It automatically returns to pulse dialing mode after you end the call.

ephone operation

-----, Handset control key panel:



H

SELECT

VOLUME



(4 ghi)

7 pgrs)) (8 huv))((9wxyz))((**O**ober))

REDIAL PAUSE

i------

The mute function allows you to hear the other party but the other party cannot hear you. 1. During a call, press **MUTE** on the handset or


2. Press **MUTE** again to resume the

conversation. The screen displays Microphone ON. Call waiting

Connect the charge

Mount the telephone base

Route the telephone line cord through the rectangular hole on the wall mount bracket. Then plug the two ends of the telephone line

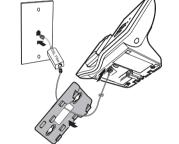

alert tone if there is an incoming call while you are on another call.

Press FLASH to put the current call on hold

current call on hold and take the new call

Use this feature to find all system handsets.

While using the cell line, place your cell phone closer to the base, and make sure that there are no To end paging physical obstacles between the base and the cell Press **/FIND HANDSET** again on the

any dialing key on the handset. Place the handset in the telephone base or


more than four seconds. It may lead to handset

additional expansion handsets (DS6600) for this telephone base. You can register up to five handsets to the telephone base.

between two devices.

2. Press ✓ or ∧ to scroll to Intercom, and

When you subscribe to call waiting service from your telephone service provider, you hear an

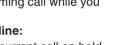

back and forth between calls.

charger Transfer a call

While on an outside call, you can use the intercom feature to transfer the call from one handset to another

4. To end the intercom call, press **OFF** or place

the handset back in the telephone base or

- Press MENU on your handset during a call 2. Press \checkmark or \land to scroll to **Intercom**, and
- then press **SELECT**. The current call is put on hold. Use the dialing keys to enter a destination device number. 3. To answer the intercom call, press **A/HOME**.
- (n)/CELL, ■, or any dialing key on the destination handset. You can now have a private conservation before transferring the call
- 4. To transfer the call, press **OFF** on the initiating handset or place the initiating handset back in the telephone base or charger 5. To end the call, press **OFF** on the destination
- handset or place the destination handset back in the telephone base or charger.

Answer an incoming call during an intercom call

If you receive an incoming call during an ntercom call, there is an alert tone

- To answer a home call, press (A)HOME. The intercom call ends automatically
- To end the intercom call without answering the outside call, press **OFF**. The intercom call ends and the telephone continues to ring.
- To answer a cell call, press OFF to end the intercom call. The telephone continues to ring. Then press (p)/CELL.

Redial list

Each handset stores the last 10 telephone numbers dialed. When there are already 10 entries, the oldest entry is deleted to make room for the new entry.

Review the redial list

- 2. Press ✓, ✓, or **REDIAL** repeatedly until the
- desired entry displays Dial a redial list entry

• Press **A/HOME**, (♠)/CELL, or **II** to dial.

Delete a redial list entry

When the desired redial entry displays, press DELETE.

Use the built-in answering system

You can use your answering system and voicemail service together by setting your answering system to answer before voicemai service answers as described below. To learn how to program your voicemail settings, contact vour telephone service provider. If you are on a call, or if the answering system

is busy recording a message and you receive another call, the second caller can leave a voicemail message Set your answering system to answer calls

at least two rings earlier than your voicemail service is set to answer. For example, if your voicemail service answers after six rings, se your answering system to answer after four rings. Some voicemail service providers may program the delay before answering calls in seconds instead of rings. In this case, allow six seconds per ring when determining the appropriate setting.

etrieve voicemail from elephone service

Voicemail is a feature available from most telephone service providers. It may be included Fees may apply.

Retrieve voicemail

When you received a voicemail, the handset displays and New voicemail. To retrieve, you typically dial an access number provided by your telephone service provider, and then enter a security code. Contact your telephone service provider for instructions on how to configure the voicemail settings and listen to messages.

Turn off the new voicemail indicators

If you have retrieved your voicemail while away from home, and the handset still displays the new voicemail indicators, use this feature to turn off the indicators.

This feature turns off the indicators only, it does not delete your voicemail messages. 1. Press **MENU** when the handset is not in use.

Scroll to Settings, and then press SELECT. 3. Scroll to **Clr voicemail**, and then press SELECT.

honebook then press SELECT to save. The phonebook can store up to 1000 entries

which are shared by all handsets. Each entry

Press MENU when the phone is not in use.

2. Scroll to **Phonebook** then press **SELECT**.

Press SELECT again to choose Add new entry.

Use the dialing keys to enter the number

Use the dialing keys to enter the name (up to

5 characters). Additional key presses show

Press **SELECT** to move to the name.

other characters of that particular key.

While entering numbers and names, you can:

Press **DELETE** to erase a digit or character.

may consist of a telephone number up to

30 digits, and a name up to 15 characters

Add a phonebook entry

Enter the number

(up to 30 digits)

Press **SELECT** to save.

TALK or **■** to dial.

Caller ID

If you subscribe to caller ID service, information about each caller appears after the first or second ring. If you answer a call before the caller information appears on the screen, it will not be saved in the caller ID log.

The caller ID log stores up to 50 entries. Each entry has up to 24 digits for the phone number and 15 characters for the name.

If the telephone number has more that 15 digits. shown and saved in the caller ID log.

- <u>Press and hold</u> **DELETE** to erase the entire entry. 1. Press CID when the phone is not in use Press ▼ or ▲ to move the cursor to the left
- Press and hold PAUSE to insert a dialing pause
- Press 0 to add a space (for entering names only) Press ** to add ** (*) appears) or *# to add **

(for entering phone numbers only).

(appears) (for entering phone numbers only)

Review the phonebook Entries are sorted alphabetically

Press when the phone is not in use Scroll to browse through the phonebook, or use the dialing keys to start a name search (you can enter up to 3 characters for the search).

When the desired entry appears, press or **■** to dial

Delete a phonebook entry

When the desired entry displays, press **DELETE**. When the screen displays **Delete entry?**, press **SELECT**

Delete all phonebook entries:

- Press **MENU** when the phone is not in use. 1. Press **REDIAL** when the handset is not in use. Scroll to **Phonebook**, and then press **SELECT**.
 - Scroll to Delete all, and then press SELECT 4. When the screen displays **Delete all?**, press

Edit a phonebook entry

- When the desired entry displays, press SELECT. 2. Use the dialing keys to edit the number, and
- then press SELECT.

Expand your telephone system

ou can add new handsets (**DS6600**), cordless headsets or speakerphones to your telephone system (purchased separately) to your telephone system. Visit www.vtechcanada.com for a list of compatible devices. Your telephone base supports a maximum of five devices.

For more details, refer to the user's manual that comes with your **DS6600** new handset, cordless headset or speakerphone respectively

ECO mode

This power conserving technology reduces power consumption for optimal battery performance. The ECO mode activates automatically whenever the handset is onized with the telephone base

General product care

Taking care of your telephone

Your cordless telephone contains sophisticated electronic parts, so it must be treated with care Avoid rough treatment

Place the handset down gently. Save the original packing materials to protect your telephone if you ever

Your telephone can be damaged if it gets wet. Do not use the handset outdoors in the rain, or handle it with wet hands. Do not install the telephone base near a sink, bathtub or shower

Electrical storms

Electrical storms can sometimes cause power surges harmful to electronic equipment. For your own safety, take caution when using electrical appliances during storms.

Cleaning your telephone Your telephone has a durable plastic casing that should

retain its luster for many years. Clean it only with a dry non-abrasive cloth. Do not use dampened cloth or cleaning solvents of any kind.

quently asked questions

The following are the questions most frequently asked about the cordless telephone. If you cannot find the answer to your question, visit our website at www.vtechcanada.com or call 1 (800) 267-7377 for customer service.

es not work in: all. in: Fo	ake sure the telephone base is stalled properly, and battery is stalled and charged correctly. or optimum daily performance, turn the handset to the telephone use after use.
	ise alter use.

Dial a phonebook entry

When the desired entry appears, press

Use the dialing keys to edit the name, and

Block unknown calls Press MENU when the phone is not in use. . Scroll to **Call block**, and then press **SELECT**.

SELECT.

SELECT.

Enter the number.

(up to 30 digits).

8. Press SELECT to save

Edit a call block list entry

then press SELECT.

Review call block list

Call block

certain undesired calls.

then press **SELECT**.

Add a call block list entry

The call block list stores up to 20 entries

1. Press MENU when the phone is not in use.

Scroll to Call block, and then press SELECT.

3. Scroll to Block list, and then press SELECT.

4. Scroll to **Add new entry**, and then press

Press SELECT to move to the name

other characters of that particular key.

Press MENU when the phone is not in use

2. Scroll to **Call block**, and then press **SELECT**

Scroll to Block list, and then press SELECT.

2. Use the dialing keys to edit the number, and

Use the dialing keys to edit the name, and

Save a caller ID log entry to call block list

2. Scroll to To Call block then press SELECT.

3. Use the dialing keys to modify the number,

4. Use the dialing keys to modify the name,

and then press **SELECT** to save.

When the desired call block list entry

Make sure you have set the date

If a caller leaves a very long message

swering system disconnects the cal

part of it may be lost when the

after the preset recording time.

f the memory on the answering

nessage, the answering system stop

vstem becomes full during a

While the handset is not in use.

X364# to change the handset LCD

ress MENU and then enter

anguage back to English

mportant safety instructions

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk o

and time. See Configure your

elephone section

1. When the desired caller ID log entry

Press SELECT to choose Review.

then press SELECT to save.

displays, press **SELECT**.

and then press SELECT.

Delete a call block list entry

displays, press **DELETE**.

The answering

announce the

system does not

correct day of the

week for récorded

messages time

The messages

on the

set my LCD

don't know how

Use the dialing keys to enter the name (up to

15 characters). Additional key presses show

Scroll to Calls w/o num, and then press 4. Scroll to choose Not block or Block, and

only the last 15 digits appear. If the name has more than 15 characters, only the first 15 characters are

Review a caller ID log entry

- 2. Scroll to browse through the caller ID log. When the desired entry appears:
- Press # repeatedly to show different dialing options.
- · Press 1 repeatedly if you need to add or remove 1 in front of the phone number.
- Press TALK or to dial the displayed number.

Dial a caller ID log entry

When the desired entry appears, press or **I** to dial

Save a caller ID log entry to the phonebook

- 1. When the desired caller ID log entry displays, press **SELECT**. Scroll to **To Phonebook** then press **SELECT**.
- Use the dialing keys to modify the number, and then press **SÉLECT**. 4. Use the dialing keys to modify the name,

and then press **SELECT** to save.

Delete a caller ID log entry

· When the desired caller ID log entry displays, press **DELETE**.

he display

the dial tone.

the telephone

ouse is poor

The answering

ot record

nessages.

and I cannot

DS6621.

Delete all caller ID log entries Press MENU when the phone is not in

use. Scroll to Caller ID log and then press **SELECT**. Scroll to **Delete all** and then press SELECT twice.

hows No line from your telephone and connect i to another telephone. If there is no dial tone on that other telephone either, then the telephone line cord may be defective. Try installing a new telephone line cord. If changing telephone line cord

Disconnect the telephone line core

does not help, the wall jack (or the wiring to this wall jack) may b defective. Contact your telephone service provider. You may be using a new cable

telephone jacks in your home nay no longer work. Contact you service provider for solutions. The handset is deregistered from shows To the telephone base. Place the handset in the telephon

register HS. base to register it back. The handset shows **Registered** manual ılternatelv. ⁻ and you hear a beep when the registration process complete This process takes abou 90 seconds to complete

ot work at all. Make sure you have cellula and connect overage and the Bluetooth unction of your cell phone or my cell phone neadset is turned on. See the

active on the device list.

and then turn it on again.

I leave your cell phone at that

30 feet of the cell phone.

telephone base must be within

Make sure the answering system is

on ANS ON should display on the

handset and the telephone base.

memory is full, it does not record

If you subscribe to voicemail service

change the number of rings so that

before vour voicemail service answe

To determine how many rings activate

your voicemail service, contact your

telephone service provider.

your answering system answers

When the answering machine

new messages until some old

messages are deleted.

When the answering system is

re, electric shock and injury, including the following: user's manual of your cell phone (headset for more informatio Read and understand all instructions Follow all warnings and instructions marked on the Make sure that the telephone base Carefully follow the pairir instructions in this manual. Make

Unplug this product from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a dry non-abrasive cloth for cleaning. I sure that vour Bluetooth cell phone Do not use this product near water such as near a or headset is not connected to any other Bluetooth device, and is connected to the telephone base and

bath tub, wash bowl, kitchen sink, laundry tub or a swimming pool, or in a wet basement or shower. Do not place this product on an unstable table, shelf, Turn off your cell phone or headset

Avoid placing the telephone system in places with extreme temperature, direct sunlight, or other electrical devices. Protect your phone from moisture, dust, corrosive liquids and fumes. he cell phone I If there is a location in your house Slots and openings in the back or bottom of the location while you use the DS6621 onnect it to my | cell line. In order for this to work, the

phone base and handset are provided for ventilation such as a bed, sofa or rug. This product should never be placed near or over a radiator or heat register. This product should not be placed in any area where proper ventilation is not provided. This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply in your home or

office, consult vour dealer or local power company Do not allow anything to rest on the power cord. Do not install this product where the cord may be walked on. Never push objects of any kind into this product through short circuit. Never spill liquid of any kind on the product. To reduce the risk of electric shock, do not

sassemble this product, but take it to an authorized rvice facility. Opening or removing parts of the ephone base or handset other than specified access doors may expose you to dangerous voltages or other risks. Incorrect reassembling can cause electric shock when the product is subsequently used. 2. Do not overload wall outlets and extension cords.

Sound settings

If you subscribe to caller ID service, you can Kev tone set the telephone to block unknown calls and

You can choose from different ringer tones.

1. Press **MENU** when the handset is not in use.

- Scroll to Settings, and then press SELECT. Scroll to choose **Key tone**, and then press
- Scroll to choose On or Off, and then press **SELECT** to save

Ringer tone

- You can choose from different ringer tones.
- Press **MENU** when the handset is not in use. Scroll to **Ringers**, and then press **SELECT**. Scroll to choose Home ringtone or Cell
- ringtone, and then press SELECT. Scroll to sample each ringer tone, and then press **SELECT** to save.
- Use the dialing keys to enter the number
 - If you turn off the ringer volume, you will not hear ringer tone samples

Ringer volume (handset)

volume, and then

You can adjust the ringer volume level, or turn the ringer off

Scroll to choose **Home volume** or **Cell**

- Press **MENU** when the handset is not in use Scroll to **Ringers**, and then press **SELECT**.
- Scroll to adjust the volume, and then press

SELECT to save 1. When the desired entry displays, press **SELECT**.

is silenced for all incoming calls except paging tone. Ringer volume (telephone base) You can adjust the telephone base volume

level by pressing - /VOL/+ on the top of the

If the handset ringer volume is set to off, that handse

Temporary ringer silencing

telephone base when idle.

When the telephone is ringing, you can temporarily silence the ringer of the handset without disconnecting the call. The next call rings normally at the preset volume

Unplug this product from the wall outlet and refe

· If liquid has been spilled onto the product

roduct to normal operation

vicinity of the leak. Under certain circ

servicing to an authorized service facility under the

When the power supply cord or plug is damaged or

If the product has been exposed to rain or water

If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operation

instructions. Improper adjustment of other controls may result in damage and often requires extensive

work by an authorized technician to restore the

Avoid using a telephone (other than cordless) during a

Do not use the telephone to report a gas leak in the

spark may be created when the adapter is plugged

nto the wall outlet, or when the handset is replaced

not plug the phone into a wall outlet, and should not

ut a charged handset into the cradle, if the phone is

flammable or flame-supporting gases, unless there is adequate ventilation. A spark in such an environment

light include: medical use of oxygen without adequate

Only put the handset of your telephone next to your

a vertical or floor mount position. The prongs are not

designed to hold the plug in place it it is plugged into a

17. The power adapter is intended to be correctly oriented in

SAVE THESE INSTRUCTIONS

with local waste management codes for special disposal

is corrosive and may cause burns or injury to the eyes or skin. The electrolyte may be toxic if swallowed.

Exercise care in handling batteries in order not to create

with this product only in accordance with the instructions and limitations specified in this manual.

Precautions for users of implanted cardiac pacemakers

Cardiac pacemakers (applies only to digital

Wireless Technology Research, LLC (WTR), an independent research entity, led a multidisciplinary

telephones and implanted cardiac pacemakers. by the U.S. Food and Drug Administration, WTR

récommends to physicians that:

Pacemaker patients

rom the pacemaker.

evaluation of the interference between portable wireles

Should keep wireless telephones at least six inches

Should NOT place wireless telephones directly ov

the pacemaker, such as in a breast pocket, when it is

Charge the battery provided with or identified for use

Do not open or mutilate the battery. Released electrolyte

To order a replacement, visit our website at www.vtechcanada.com or call 1 (800) 267-7377.

Do not dispose of the battery in a fire. Check

ng solvents; gasolin

ould create a fire or explosion. Such envi

/entilation; industrial gases (cleaning s /apors; etc.); a leak of natural gas; etc.

ceiling, under-the-table or cabinet outlet.

· Use only the battery provided or equivalent.

ar when it is in normal talk mode.

electrical storm. There is a remote risk of electric shock

If the product has been dropped and the telephone

· If the product exhibits a distinct change in

· Press OFF or MUTE on the handset. The

following conditions:

vtech

Should use the wireless telephone at the ear opposite

WTR's evaluation did not identify any risk to bystanders

with pacemakers from other persons using wireless

Privacy: The same features that make a cordless

base and the cordless handset by radio waves, so

equipment within range of the cordless handset. For this reason, you should not think of cordless telepho

Electrical power: The telephone base of this cordless

versations as being as private as those on corded

one must be connected to a working electrical The electrical outlet should not be controlled by switch. Calls cannot be made from the cordles

erate at frequencies that may cause interference televisions and VCRs. To minimize or prevent suc erference, do not place the telephone base of the

ne farther away from the TV or VCR ofter

ducting material such as rings, bracelets and keys

ose of these batteries in a safe manner. Do not

type, if burned or punctured, they could release causti

The RBRC® seal on the nickel-metal hydride battery indicates that VTech Communications, Inc. is voluntarily participating in an industry program to collect and recycle these batteries at the end of their useful lives, when taken out

The RBRC® program provides a convenient alternative to placing used nickel-metal hydride batteries into the trash or

VTech's participation in RBRC® makes it easy for you to

drop off the spent battery at local retailers participating in the RBRC® program or at authorized VTech product servic centers. Please call 1 (800) 8 BATTERY® for information

on Ni-MH battery recycling and disposal bans/restrictions in your area. VTech's involvement in this program is part of its

registered trademarks of the Rechargeable Battery Recycling

his equipment has been tested and found to comply

with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide

easonable protection against harmful interference in a

mitment to protecting our environment and conserving

RBRC® and 1 (800) 8 BATTERY® are

of service within the United States and Canada.

FCC and IC regulations

FCC Part 15

municipal waste, which may be illegal in your area.

n or puncture the battery. Like other batteries of this

erve proper polarity between the battery a

dless telephone near or on top of a TV or VCF

Rechargeable batteries: Exercise care in handlin

ries in order not to create a short circuit wit

ne hattery or conductor may overheat and cause

Nickel-metal hydride rechargeable batteries

epted by radio recei

there is a possibility that the cordless telephone

ons could be intere

or if the electrical power is interrupted

f interference is experienced.

The RBRC® seal

reduces or eliminates the interference.

the pacemaker

About cordless telephones

Telephone base control key panel:

About answering system and

in answering system, and it also support voicemail

The main differences between them are as follows:

Messages are stored

ovided by your

ephone service

Your messages may b

after a period of time

Contact your telephor

new messages, the

handset displays

and **New voicema**i

messages, you need

telephone service

nore details.

To retrieve

When you received | When you received

there are two ways: I an access number

Press a button | and/or a passcode

on the telephone provided by you

service offered by your telephone service provider

(subscription is required, and fee may apply).

Messages are

lephone base

our messages

will not be delete

our messages

new messages.

andset displays

messages and the

on the telephone

essages, usually

Access remotely

with an access

ase flashes

o retrieve

base; or

ou have to delete

automatically.

anually.

XX new

torage

essages

cemail service

Delete the announcement Set your built-in answering system

Your answering system has various features read below for the basic settings For message recording, your telephone has a built-

> The answering system can record and store up to 99 messages. Each message can be up to three minutes in length. The total storage capacity for the announcement, messages and memos is approximately 17 minutes. The actual recording time depends on individual message characteristics. Set number of rings

Your answering system allows you to set your You can set the answering system to answer ar announcement, to save and delete messages, incoming call after 2, 3, 4, 5 or 6 rings; or toll saver. I activate call screening, to set number of rings you choose toll saver, the answering system answers before pick up, to access remotely, and to a call after 2 rings when you have new messages, or control the recording time. Turn the answering system on or off

The answering system must be turned on to answer and record messages To turn on or off with the telephone bases

Press **U/ANS ON** on the telephone base to turn the built-in answering system on or off.

To turn on or off with the handset . Press **MENU** when the phone is not in use.

- 2. Scroll to highlight **Answering sys**, and then press **SELECT**. 3. Scroll to highlight Answer on/off, and then
- press **SELECT**. . Scroll to highlight On or Off, and then press

SELECT to save. You hear a confirmation tone.

Default announcemen

The telephone is preset with a greeting that answers calls with "Hello, please leave a message after the tone." You can use this preset announcement, or replace it with your own.

Record your own announcement The announcement can be up to 90 seconds in

- 1. Press **MENU** when the phone is not in use. 2. Scroll to **Answering sys** and then press SELECT twice.
- 3. The handset announces, "Announcement, press play or press record. 4. Press 7 to record. The handset announces.
- "Record after the tone. Press **STOP** when you are done." After the tone, speak towards the handset microphone. Then, press 5 when done

Play the announcement Press **MENU** when the phone is not in use.

- 2. Scroll to **Answering sys** and then press
- 3. The handset announces. "Announcement press play or press record."
- Press 2 to play the announcement

and used in accordance with the instructions, may cause

- nore of the following measures Reorient or relocate the receiving antenna Increase the separation between the equipment and
- echnician for help
- d by the party responsible for compliance could This device complies with Part 15 of the FCC rules Operation is subject to the following two condition dset if the telephone base is unplugged, switched o s device may not cause harmful interference, and Potential TV interference: Some cordless telephone this device must accept any interference recei

CAN ICES-3 (B)/NMB-3(B)

modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. An RJ11 jack should normally be used for connecting to a single line and an RJ14 jack for two lines. See the installation instructions in the user's manual.

sidential installation. This equipment gen and can radiate radio frequency energy and, if not installed Your telephone service provider may make changes in its acilities, equipment, operation, or procedures that could affect the proper functioning of this product. The telephon llation. If this equipment does cause harmfu service provider is required to notify you if such changes nterference to radio or television reception, which can be are planned. mined by turning the equipment off and on, the user couraged to try to correct the interference by one or

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV Changes or modifications to this equipment not expres
- ding interference that may cause undesired operation o ensure safety of users, the FCC has established criteri or the amount of radio frequency energy that can be safely absorbed by a user or bystander according to the intended age of the product. This product has been tested and found comply with the FCC criteria. The handset shall be installed and used such that parts of all persons' body are maintained at a distance of approximately 8 in (20 cm) or more.

This Class B digital apparatus complies with Canadian

This equipment complies with Part 68 of the FCC rules and ith technical requirements adopted by the Administra ouncil for Terminal Attachments (ACTA). The label on AAAEQ##TXXXX. This identifier in the format US: ephone service provider upon reques The plug and jack used to connect this equipment to premises wiring and the telephone network must comply with applicable Part 68 rules and technical requirements adopted by ACTA. A compliant telephone cord and

The Ringer Equivalence Number (REN) is used to determine how many devices you may connect to your telephone line and still have them ring when you are called. The REN for this product is encoded as the 6th and 7th characters following the US: in the product identifier (e.g., if ## is 03, the REN is In most, but not all areas, the sum of all RENs should be e (5.0) or less. For more information, please contact your telephone service provider.

This equipment may not be used with Party Lines. If you have specially wired alarm dialing equipment connected to your telephone line, ensure the connection of this equipment does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone service provider or a qualified installer. If this equipment is malfunctioning, it must be unplugged from the modular jack until the problem has been correct Repairs to this telephone equipment can only be made by the nanufacturer or its authorized agents. For repair procedures, ollow the instructions outlined under the Limited warranty. this equipment is causing harm to the telephone network the telephone service provider may temporarily discontinue your telephone service. The telephone service provider s required to notify you before interrupting service. If advance notice is not practical, you will be notified as soon

as possible. You will be given the opportunity to correct the

after 4 rings when you have no new messages. 1. Press **MENU** when the phone is not in use.

Press **MENU** when the phone is not in use.

Scroll to **Answering sys** and then press

The handset announces, "Announcement,

Press 3 to delete your own recorded

SELECT twice.

announcement

press play or press record.

- Scroll to **Answering sys** then press **SELECT**.
- 3. Scroll to **Ans sys setup** then press **SELECT**. 4. Scroll to # of rings then press SELECT.
- 5. Scroll to choose 2, 3, 4, 5, 6 or Toll saver press **SELECT** to save and you hear a
- confirmation tone Message alert tone

and there is at least one new message, the

telephone base beeps every 10 seconds. The message alert tone is preset to off.

- Press **MENU** when the phone is not in use. Scroll to **Answering sys** then press **SELECT**.
- 3. Scroll to **Ans sys setup** then press **SELECT**.

6. Press **SELECT** to save and you hear a

When the message alert tone is set to on.

4. Scroll to **Msg alert tone** then press **SELECT**. To playback messages at the handset Press MENU to choose Play messages Scroll to choose On or Off.

Voice language

confirmation tone

You can select a language (English or French) to be used for the answering system's voice

Scroll to **Answering sys** then press **SELECT**. 3. Scroll to **Ans sys setup** then press **SELECT**. Scroll to Voice language then press

Press **MENU** when the phone is not in use.

Scroll to choose **English** or **Français**. Press SELECT to save and you hear a

Voice guide

This feature is an alternative way for you to do the basic setup of the answering system. You can follow the voice guide to record your own announcement, set the number of rings and the message alert tone

inform you of your right to file a complaint with the FC0

If this product is equipped with a corded or cordless handset, it is hearing aid compatible If this product has memory dialing locations, you may

morning or late evening.

does not exceed five

ose to store emergency telephone numbers ., police, fire, medical) in these locations. If you do store est emergency numbers, please Remain on the line and briefly explain the reason for the call before hanging up. Perform such activities in off-peak hours, such as early

Industry Canada This device complies with Industry Canada licence-exempt RSS standard(s). peration is subject to the following two conditions: this device may not cause harmful interference, and (2 nis device must accept any interference received, including

- using this telephone. The term "IC:" before the certif imber only signifies that the Industry Canada technical The Ringer Equivalence Number (REN) for this terminal equipment is 0.1. The REN is an indication of the ximum number of devices allowed to be connected to a ephone interface. The termination on an interface may nsist of any combination of devices subject only to the quirement that the sum of the RENs of all the devices
- This product meets the applicable Industry Canada technical RF radiation exposure stat The handset complies with FCC RF radiation exposure imits set forth for an uncontrolled environment.

handset should be installed and operated with a minimum distance of 8 in (20 cm) between the handset and all persons' body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This equipment complies also with Industry Canada RSS-102 with respect to Canada's Health Code 6 for Exposure of Humans to RF Fields.

The manufacturer of this VTech Product warrants to the

package ("Product") are free from defects in material and workmanship, pursuant to the following terms and conditions, when installed and used normally and in accordance with the Product operating instructions. This limited warranty extends only to the Consumer for Products of the Consumer for Products of

oducts purchased and used in the United States of

holder of a valid proof of purchase ("Consumer" or "you") that the Product and all accessories provided in the sales

may save you a service call. Except as provided by applicable law, you assume the risk of loss or damage during transit and transportation and are responsible for delivery or handling charges incurred in the transport of the Product(s) to the service location. VTech imited warranty will return repaired or replaced Product under this limited warranty. Transportation, delivery or handling charges are prepaid. VTech assumes no risk for damage or loss of the Product in transit. If the Product failure is not covered by What does this limited warranty cover?

What will VTech do if the Product is not free from defects in materials and workmanship during the limited warranty period ("Materially Defective Product")?

During the limited warranty period, VTech's authorized service representative will repair or replace at VTech's option, without charge, a Materially Defective Product. If we repair the Product, we may use new or refurbished

2. Scroll to scroll to **Answering sys**, and then 3. Scroll to highlight Voice guide, and then

1. Press **MENU** when the phone is not in use.

Jse your built-in answering systen

press SELECT

voice guide

New message indication

telephone base flashes.

Options during playback

Press ►/■/STOP to stop

Options during playback

Press **SELECT**

SELECT.

Message playback

When there are new answering system

messages, The handset displays XX new

messages and the message window on the

To playback messages at the telephone base

Press – /VOL/+ to adjust the speaker volume.

currently playing. Press **≪/REPEAT** twice to

The system advances to the next message

Press X/DELETE to delete the playing message

Press **VOLUME**/ or **VOLUME**/ to adjust

during the time and day announcement to

Press ■ to switch between speakerphone

Delete all old messages at the telephone base

Press **X/DELETE** twice when the phone is not

To delete all old messages on a handset

2. Scroll to **Answering sys**, and then press

ve may replace it with a new or refurbished Product of

the same or similar design. We will retain defective parts, modules, or equipment. Repair or replacement of the Product, at VTech's option, is your exclusive remedy.

Tech will return the repaired or replacement Products to

The limited warranty period for the Product extends for ONE (1) YEAR from the date of purchase. If VTech repairs or

eplaces a Materially Defective Product under the terms o

imited warranty, this limited warranty also applies to epaired or replacement Product for a period of eithe 0 days from the date the repaired or replacement

Product that has been subjected to misuse, accident

ndation, fire, water or other liquid intrus

Product that has been damaged due to renain

authorized service representative of VTech; or

Product to the extent that the problem experienced

Product to the extent that the problem is caused by

number plates or electronic serial numbers have be removed, altered or rendered illegible; or

Product purchased, used, serviced, or shipped for repair from outside the United States of America

or Canada, or used for commercial or institutional purposes (including but not limited to Products used

Product returned without a valid proof of purchase

ner controls, and installation or repair of systems

8. Charges for installation or set up, adjustment of

To obtain warranty service in Canada, please visit our website at www.vtechcanada.com or call 1 (800) 267-7377.

NOTE: Before calling for service, please review the user's manual - a check of the Product's controls and features

this limited warranty, or proof of purchase does not mee the terms of this limited warranty, VTech will notify you and will request that you authorize the cost of repair prior

to any further repair activity. You must pay for the cost o

repair and return shipping costs for the repair of Products that are not covered by this limited warranty.

What must you return with the Product to get warranty

Return the entire original package and contents including the Product to the VTech service location along

with a description of the malfunction or difficulty; and

address, and telephone number.

is caused by signal conditions, network reliability, o

Product whose warranty/quality stickers, product seria

shipping or other physical damage, improper installation, abnormal operation or handling, neglect,

Product is shipped to you or (b) the time remaining on the

you in working condition. You should expect the repair or

cement to take approximately 30 days

original one-year warranty; whichever is longer

This limited warranty does not cove

cable or antenna systems: or

for rental purposes); or

How do you get warranty service?

outside the unit.

use with non-VTech accessories; o

What is not covered by this limited warranty?

How long is the limited warranty period?

1. Press **MENU** when the phone is not in use.

Press ►/SKIP to skip to the next message.

Press ***/REPEAT** to repeat the message

listen to the previous message

the message playback volume.

hear the previous message

Press OFF to stop the playback.

mode and handset mode.

Press 6 to skip to the next message

Press 4 to repeat the message. Press 4

Press 3 to delete the playing message

Press ►/■/PLAY when the phone is not in use.

Remote access press **SELECT**. You hear the voice prompt A two-digit security code is required to access the answering system remotely from any Hello! This voice quide will assist vou with

Command

- the basic setup of your answering system. touch-tone telephone. The preset code is 19 You can use this preset code, or set your own. Setup your answering system by inputting
- designated numbers as instructed in the Dial your telephone number from any touch-tone telephone.
 - When the system plays your announcement

Scroll to **Delete all old**, and then press

SELECT twice. You hear a confirmation tone

- enter the two-digit security code. You can enter one of the following remote
 - Play all messages Play new messages Delete the current message during playback). 33 Delete all old messages lepeat the current message (during playback). Hear a list of remote commands Skip to the next message during playback). Record a new announcement. 8 End the call.

Description

Turn the answering system on

Hang up or press 8 to end the call.

or off.

Remote access code

A two-digit security code is required to access the answering system remotely from any touchtone telephone. The preset code is 19. You can set the code from 00 to 99.

1. Press MENU when the phone is not in use

- Scroll to Answering sys then press SELECT Scroll to Ans sys setup then press SELECT Scroll to **Remote code**, and then press
- To delete all old messages at the telephone base: Use the dialing keys to enter a two-digit number.
 - Scroll to a desired two-digit number. Press SELECT to save and you hear a

This warranty is the complete and exclusive agreement between you and VTech. It supersedes all other written or oral communications related to this Product. VTech provides no other warranties for this Product. The warranty exclusivel describes all of VTech's responsibilities regarding the Product. There are no other express warranties. No one is authorized to make modifications to this limited warranty and ou should not rely on any such modification State/Provincial Law Rights: This warranty gives you specific legal rights, and you may also have other rights which vary from state to state or province to province. imitations: Implied warranties, including those of fitness or a particular purpose and merchantability (an unvarranty that the Product is fit for ordinary use) are limited to one year from the date of purchase. Some states/provincés do not allow limitations on how long a implied warranty lasts, so the above limitation may no apply to you. In no event shall VTech be liable for any indirect enough incidental account to the limitation of the liable for any damages (including, but not limited to lost profits or evenue, inability to use the Product or other associate equipment, the cost of substitute equipment, and claims be third parties) resulting from the use of this Product. Some states/provinces do not allow the exclusion or limitation

mitation or exclusion may not apply to you. Please retain your original sales receipt as proof of purchase

echnical specifications

Transmit frequency	DECT frequency: 1921.536-1928.448 MHz Bluetooth frequency: 2402.000-2480.000 MHz
Channels	DECT: 5

Maximum power allowed by FCC and Nominal effective IC. Actual operating range may vary according to environment conditions at range the time of use. Handset: 2.4V Ni-MH battery

requirements Telephone base: 6V DC @ 400mA

Charger: 6V AC @ 300mA

Phonebook 1000 memory locations (shared petween home and cell lines); up to 30 digits and 15 characters Caller ID log:

15 characters

those of their respective owners. Specifications are subject to change without notice © 2015 for VTech Technologies Canada, Ltd.

Include a "valid proof of purchase" (sales receipt) identifying the Product purchased (Product model) and the date of purchase or receipt; and All rights reserved. 01/15. DS6621-X_CA_ACIB_V3.0 Provide your name, complete and correct mailing Document order number: 91-007671-020-100

The Bluetooth® word mark and logos are owned by Bluetooth SIG. Inc. and any use of such marks by VTech Holdings

50 memory locations; up to 24 digits and

Imited is under license. VTech Holdings Limited is a member of Bluetooth SIG, Inc. Other trademarks and trade names are

confirmation tone.