isplay icons overview

The battery icon flashes when

he battery is low and needs

The battery icon animates when

the battery is charging.

The battery icon becomes

The ECO mode activates

s within range from the

There are new voicemail

elephone base

service provider

solid when the battery is fully

automatically to reduce power

eceived from your telephone

On when the home line is in use

or there is an incoming home

lashes when there is an

ncoming home waiting cal

There are Bluetooth devices

connected on the cell devices

On when the cell line is in use or

there is an incoming cell call.

Flashes when there is an

ncoming cell waiting call.

The handset ringer is off.

laving and total number of

ew/old messages recorded.

There are new caller ID log

The answering system is turned

onsumption when the handset

BLUETOOTH® wireless technology







Abridged user's manual (Canada version)

Congratulations

on purchasing your new VTech product. Before using this product, please read Important safety instructions.

This abridged user's manual provides you

A limited set of features are described in

Please refer to the online User's manual

for a full set of installation and operation

instructions at www.vtechcanada.com

Telephones identified with this

logo have reduced noise and

nterference when used with

most T-coil equipped hearing

aids and cochlear implants.

Logo is a trademark of the

elecommunications Industry

The TIA-1083 Compliant

Association, Used under

The ENERGY STAR®

ov) recognizes and

ncourages the use of

rogram (www.energysta

roducts that save energy and

nelp protect our environment.

We are proud to mark this


product with the ENERGY

STAR® label indicating it

meets the latest energy efficiency guidelines.

abbreviated form.

with basic installation and use instructions.

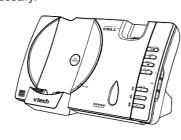

Your product package contains the following


items. Save your sales receipt and original


packaging in the event warranty service is

What's in the box





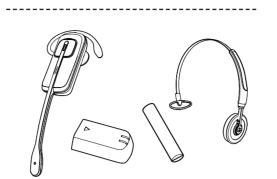

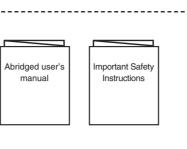

answering a call.

line is in use

landset overview

10 - FIND HANDSET

headset.

1 – Handset earpiece

Show the menu

• While in a menu, press to select an

item, or save an entry or setting.

Press to activate the voice-controlled

application on your connected cell

Silence the ringer temporarily while the

· Press and hold to erase the missed call

Adjust the headset to wear on the ear:

angle of the headset until the microphone is

headset with one hand whenever adjusting

pointing towards your mouth. Firmly grip the

Hook the headset on your ear. Adjust the

the headset microphone up or down.

indicator while the phone is not in use.

2 - LCD display

4 - VOICE

3 - MENU/SELECT

5 - OFF/CANCEL


· Hang up a call.

handset is ringing.

Flashes when there is an incoming call,

Press to page all system handsets and

or another telephone sharing the same

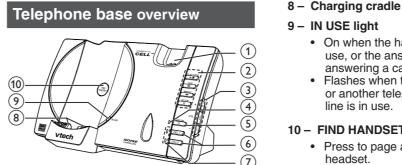

1 - Headset charging cradle

2 - ▶/■/PLAY/STOP

 Press to play messages. Press to stop message playback.

→/SKIP Press to skip to the next message.

· Press to repeat a message. Press twice to play the previous

X/DELETE

 Press to delete the playing message When the handset is not in use, press

twice to delete all old messages. 3 - + /VOL/-· Press to adjust the volume during

 Press to adjust the telephone base ringer volume when the handset is not

or off.

message playback.

4 – U/ANS ON light · On when the answering system is on.

5 - 也/ANS ON · Press to turn the answering system on

6 - CELL 1 and CELL 2 Press to connect the paired cell

Bluetooth device. · Press and hold to add or replace a

Bluetooth device.

7 - CELL 1 and CELL 2 lights

On when the telephone base is paired

and connected with a Bluetooth device Flashes when the telephone base is in discoverable mode

Rotate the earhook to vertical direction and then pull the earhook until it separates from

Wrap the earhook with the sponge.

......

mode, without making changes. On when the handset or headset is in use, or the answering system is

Press to add a space when entering

· Press repeatedly to show other dialing options when reviewing a caller ID log

8 – INT

Press to return to the previous menu;

or press and hold to return to idle

Press to start an intercom conversation

or transfer a call.

9 - Microphone

10 - MUTE/DELETE

• Mute the microphone during a call. Delete digits or characters while using

the dialing keys · Silence the ringer temporarily while the handset is ringing.

· Delete the displayed entry while reviewing the phonebook, caller ID log, call block list or redial list

pulse and on a call, press to switch to

dialing or saving it to the phonebook.

• Make or answer a call using the handset speakerphone

· During a call, press to switch between the speakerphone and the handset 12 - TONE X While you have set the dial mode to

tone dialing temporarily. · Press repeatedly to add or remove 1 in front of the caller ID log entry before

 Press and hold to set or dial your voicemail number 14- 希/HOME/FLASH

· Make or answer a home call. Answer an incoming home call when you hear a call waiting alert.

15 - (₱)/CELL Make or answer a cell call.

 Answer an incoming cell call when you hear a call waiting alert.

16 - REDIAL/PAUSE Press repeatedly to review the redial

· Press and hold to insert a dialing

pause while entering a number.

3. Rotate the headset to vertical direction until it

4. Adjust the head band to fit your head. Adjust

and rotate the angle of the headset until the

microphone is pointing towards your mouth.

To remove the head band from the

head band with your other hand.

1. Hold the headset with one hand and the

Before use After you install your telephone or power

1 - VOL+

17 - VOLUME /▲ / ⋈

or redial list.

VOLUME/▼/CID

or redial list

eadset overview

18 - CHARGE light

handset is not in use

Review the phonebook when the

Increase the listening volume during a

phonebook, caller ID log, call block list

Scroll up while in a menu, or in the

Move the cursor to the right when

entering numbers or names.

Review the caller ID log when the

· Move the cursor to the left when

entering numbers or names.

· On when the handset is charging.

Decrease the listening volume during a

· Scroll down while in a menu, or in the

phonebook, caller ID log, call block list

handset is not in use.

returns following a power outage and batter depletion, the handset will prompt you to set the date and time, and the answering system through voice guide Set date and time **Ø**NOTE

· Make sure you set the date and time including

the year correctly; otherwise the answering

· Increase the headset volume.

Decrease the headset volume.

While on a call, <u>press and hold</u> to

receive a call waiting alert.

answer an incoming call when you

system does not announce the correct day of the week for your recorded messages time 1. Use the dialing keys (0-9) to enter the month (MM), date (DD) and year (YY).

Then press SELECT. 2. Use the dialing keys (0-9) to enter the hour (HH) and minute (MM). Then press ▼ or ▲ to choose AM or PM.

Press SELECT to save. After the setting for the date and time, the handset will display Voice guide to... and set up Ans sys? alternatively

Set answering system through voice

This feature assists you to do the basic setup of the answering system. You car follow the voice guide to record your own announcement, set the number of rings and the message alert tone

1. Press **SELECT** to start the voice guide for the answering system setup. You hear the voice prompt "Hello! This voice guide

will assist you with the basic setup of vour answering system.

Setup your answering system by inputting the designated numbers as instructed in the voice guide.

If you do not hear a dial tone: Make sure the installation procedures

2 - ON/OFF light

3 - Microphone

4 - MUTE

5 – Earpiece

6 - Earhook

1 - Charging pole

ON/OFF key

On when the headset is charging.

Press to activate the voice-controlled

• Mute the microphone during a call.

When there is an incoming call, press

to silence the ringer in the earpiece

application on your connected cell

Press to answer or end a call

phone when idle

temporarily

Charger overview

described above are properly done. It may be a wiring problem. If you have changed your telephone service to digital service from a cable company or a VolF

Press &/HOME. If you hear a dial tone, the

service provider, the telephone line may need to be rewired to allow all existing telephone jacks to work. Contact your cable/VoIP service provider for more information. Operating range

This cordless telephone operates with the

Check for dial tone:

installation is successful.

maximum power allowed by the Federal Communications Commission (FCC), Ever so, this handset and telephone base can communicate over only a certain distance · which can vary with the locations of the telephone base and handset, the weather and the layout of your home or office.

When the handset is out of range, the handset displays Out of range or and no pwr at base If there is a call while the handset is out of

range, it may not ring, or if it does ring, the call may not connect well when you press A/HOME or (♠)/CELL. Move closer to the elephone base, and then press **徭/HOME** or (•)/CELL to answer the call. If the handset moves out of range during a telephone conversation, there may be interference To improve reception, move closer to the

telephone base.


Connect


You can choose to connect the telephone base for desktop usage.

 Use only the adapters provided. telephone service, you can pair a Bluetooth **Bluetooth**), and use the cell line alone without plugging in a telephone line cord.

 If you subscribe to digital subscriber line (DSL) high-speed Internet service through your telephone line, make sure you install a DSL cord and telephone wall lack. Contact your DSL service provider for more information



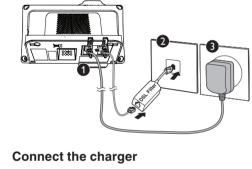


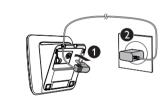


nstall the battery


• Even if you do not subscribe to any conventional enabled cell phone to your telephone base (see



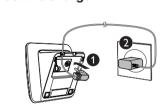


 Use only supplied battery. possible leakage.

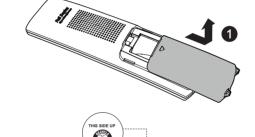


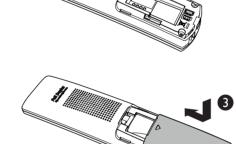


Install the headset battery

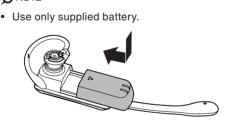



Install the handset battery Install the handset battery as shown below.

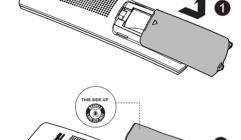

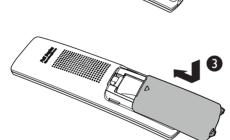

· If the handset will not be used for a long time disconnect and remove the battery to prevent

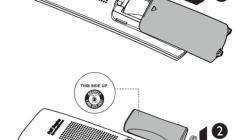

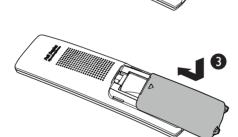

Install the headset battery as shown below.

date and time, and voice guide. For best performance, keep the handset in the

· The handset battery is fully charged after 12 hours of continuous charging. The headset

To activate remote voice control on

If you have connected one cell phone

to the telephone, the handset shows

the device name of the connected cell

If you have connected two cell phones

o the telephone, the handset shows

Select a device, followed by the device

name list of the connected cell phones.

Scroll to choose the desired cell phone, and then press **SELECT**.

2. The handset then shows the remote voice

displays Not available. When the

You can press
 on the handset to turn

off the speakerphone and listen to the

feedback through the handset earpiece

· If the activation fails, the handset

1. Press VOICE on the handset.

phone directly

control icon (9).

battery is fully charged after three hours of continuous charging. If you place the handset in the telephone base or the charger without plugging in the battery, the screen displays **No battery**.


After you have installed the battery, check the battery level on the handset screen If the battery icon is \$\hat{1}\$, \$\hat{0}\$ or \$\hat{0}\$, then go to

Check the battery level

the charger to charge.

Before use section to set the date and time, and set the answering system through voice guide.

battery needs to be charged. Go to Charge the battery section before you do any setting or operation. Charge the battery

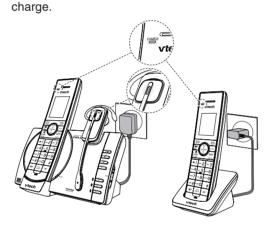

Once you have installed the battery, the handset LCD display indicates the battery status (see the table below). **O**NOTES

• Press **CANCEL** or place the handset in the telephone base or charger will bypass the set

telephone base or charger when not in use. Place the headset on the telephone base when

harger and andset cannot (at least 30 inutes). he battery has he screer shows Low nough charge be used for a **battery** and • If the screen is blank, or 1 flashes, then the flashes. hort time. at least 30 ninutes). The battery is o keep the The screer harged HANDSET X. place it in the telephone charger whe Place the handset in the telephone base or Place the headset on the telephone base to To manually set the date and time and the

answering system section.

is blank, or

shows Put in

answering system, refer to Configure your telephone and Set your built-in answering To manually initiate the voice guide, refer to Voice guide under Set your built-in

he battery has

ittle charge. The

o charge or very

interruptio

Position the headset There are four earbuds and four earhooks provided. One earbud and one earhook have been attached to the headset.

You can choose a suitable size of earbud,

earhook and an appropriate way to position vour headset Replace the pre-installed earbud and




3. Attach a earhook, and then a suitable earbud

to the headset until they fit into place.

To wear on the right ear:



Over the head band To attach the head band to the headset: 1. Refer to Steps 1 and 2 in Replace the pre-installed earbud and earhook

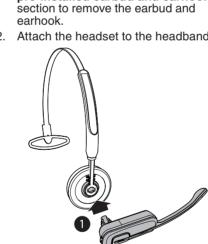

2. Rotate the headset to horizontal direction and the pull the headset until it separates form the head band.



Make a home call Press A/HOME or ◄», and then dial the

Make a cell call • Press (•)/CELL on the handset. Enter the telephone number, and then press (*)/CELL

 Enter the telephone number on the handset, and then press (1)/CELL to dial.

cell device when necessary, and then press SELECT. choose a cell device. Scroll to select the desired · While using the cell line, place your cell phone closer to the base, and make sure that there are no physical obstacles between the base and the

Press A/HOME, (♠)/CELL, ♠), or any dialing

 Press ON/OFF key on the headset. End a home/cell call

Press OFF on the handset, or put the

 Press ON/OFF key on the headset. Speakerphone

switch between speakerphone and normal handset use

handset, or VOL+ or VOL- on the headset

During a call, press ▼/VOLUME/▲ on the

· The handset earpiece volume setting and

telephone number. Enter the telephone number on the

handset, and then press **A/HOME** or **◄** to

to dial.

ONOTES After first pressing (*)/CELL, you may need to

cell phone, such as large furniture or thick walls. Answer a home/cell call

handset in the telephone base or charger.

During a call, press

on the handset to

The mute function allows you to hear the other party but the other party cannot hear

2. Press **MUTE** again to resume the

1. During a call, press **MUTE** on the handset.

The handset screen displays **Muted**.

conversation. The screen displays

2. Press **MUTE** again to resume the

Microphone on During a call, press MUTE on the headset. The headset announced "Mute on".

conversation. The headset announced "Mute off". Join a call in progress You can use up to two system handsets at a time on a home line call. You can buy

additional expansion handsets (DS6072) for

this telephone base. You can register up to

five handsets to the telephone base.

When a handset is on a home call, press **[®]/HOME** or **[¶]** on another handset to join

 Press OFF to exit the call. The call continues until all handsets hang up.

When you subscribe to call waiting service from your telephone service provider, you hear an alert tone if there is an incoming cal while you are on another call.

Call waiting

Call waiting on the home line: Press FLASH to put the current call on hold and take the new call. Press FLASH to switch back and forth

Call waiting on the cell line: • Press (•)/CELL to put the current call on

hold and take the new call.

• Press FIND HANDSET again on the telephone base.

Find handset

 Place the handset in the telephone base or charger. **⊘**NOTE

and headset deregistration.

room for the new entry.

Dial a redial list entry

A/HOME, (♠)/CELL, or ♠) to dial

DELETE.

Delete a redial list entry

Redial list

CELL 2 light flashes. Turn on the Bluetooth feature of your cell phone. Once your cell phone finds your VTech phone (VTech DS6771), press appropriate key on your cell phone to continue the pairing process.

turns on.

⊘NOTE

enter the PIN of the telephone base The default PIN of the telephone base When the cell phone is connected to the telephone base, the corresponding status icon (🚱¹ or 🚱) displays on handsets. The

If the pairing fails, turn off the Bluetooth

feature on your cell phone and on the

sponding device light (CELL 1 or CELL 2)

DS6771 by pressing CELL 1 or CELL 2. Then

repeat the steps above to pair and connect

again. In some cases, it may take you a few

attempts to complete the pairing process.

Your cell phone may prompt you to

Bluetooth wireless technology operates within a short range (a maximum of approximately 15 feet). When you pair a Bluetooth cell phone to the telephone base, place your Bluetooth

Make sure your cell phone has a good cell

reception near the telephone base

neadset with the telephone base.

To use a Bluetooth enabled cell phone or

headset with vour DS6771, you must first

pair and connect your Bluetooth cell phone or

maintain sufficient signal strength. For optimal performance, place your cell phone next to the telephone base while using the cell

devices, place your telephone base far away from devices such as baby monitors, wireless

Press and hold CELL 1 or CELL 2 on

confirmation tone, and the CELL 1 or

the telephone base until you hear

cell phone closer to the telephone base to

routers, microwaves and computers. https://play.google.com/store/apps/ details?id=com.vtech.connecttocell. Pair and connect your Bluetooth enabled cell phone 1. Choose a slot to pair the cell phone

> 2. Scroll to **Bluetooth**, and then press SELECT. 3. Scroll to **Download PB**, and then press SELECT.

> > • For certain cell phones, you may need to press a key on your cell phone to confirm the phonebook download. The performance of phonebook download

4. Scroll to select the desired cell phone,

and then press **SELECT**.

feature depends on the compatibility of your Bluetooth cell phone. Refer to the user's manual of your cell phone for more information about how that device uses Bluetooth connectivity Certain cell phones do not support SIM card.

download. If this is the case, transfer the contacts

m your SIM card to your cell phone memory

first. Then download from your cell phone memory

For more information on how to transfer contacts

from your SIM card to your cell phone memory,

then press **SELECT**.

3. Press ▼ or ▲ to scroll to Add BT

Pair and connect your Bluetooth enabled headset 1. Press **MENU** when the handset is not in

2. Press ▼ or ▲ to scroll to Bluetooth, and

headset, and then press SELECT. The screen displays Search headset.... 4. Set your headset to discoverable mode. Once your handset finds your headset, press **SELECT**.

Enter the PIN of your headset if

press **SELECT**. When the headset is successfully paired and connected to the telephone base, the 🐧 icon displays on handsets. The CELL 2 light turns

required. The PIN for most Bluetooth

devices is **0000** (refer to the user's

manual of your headset), and then

This application helps you integrate your Android phones with your For more information and application download, scan the QR code on the right, or go to

VTech Connect to Cell[™] application

Download contacts from your Bluetooth cell phone 1. Press **MENU** when the handset is not in

> • Do not lock up your cell phone's screen or set passcode for activating the voice app.

download.

controlled

application

Svstem

supported)

Operation IOS

Versions above) above)

make sure you checked the following:

 Make sure you have turned on or logged in to the applications on your cell phone that you will be sending your voice commands, such as GPS, email and social networking accounts.

Your cell phone's data or Wi-Fi signal is in full strength and your cell phone can connect to the Internet. Try to activate the voice app on your cell phone to ensure it is in place.

Siri® is a registered trademark of Apple Inc

Google Now™ is a trademark of Google Inc

S Voice® is a registered mark of Samsung Electronics

see the user's manual of your cell

 For Android cell phones, you may also download your cell phone ontacts to your **DS6771** via the VTech Contact Share application. Scan the QR code on the right, or go to https://play.google.com/store/apps/

details?id=com.innopage.MMI for application

emote voice control If you have connected a cell phone to your **DS6771** telephone system, you can activate the voice-controlled application (voice app) of

Android

Before using the remote voice control feature,

Your cell phone is paired and connected to

your telephone system via Bluetooth.

the background of your cell phone.

No Bluetooth applications are running in

Place your cell phone next to the telephone

Androi

above)

screen returns to idle, try Step 1 again the cell phone, such as Siri®, Google Now™ When the handset plays the confirmation or S Voice®, via your handset or headset. tone as forwarded by the cell phone's voice app, start speaking toward the handset, and then wait for feedback. The remote voice control feature works with: Make reply to the voice app's feedback, if S Voice Google

NOTES

the voice app.

To end the current remote voice control session, press CANCEL on the handset You can restart by following Steps 1-3 To activate remote voice control on

⊘NOTE . Make sure the CELL 1 slot on the telephone base is paired and connected with a cell phone. Press MUTE on the headset. 2. When the headset plays the confirmation tone as forwarded by the cell phone's

voice app, start speaking toward the

and the voice app's help topics to find out what

commands you can use and any limitations of

carriers may customize the phone's operating

system and implement their own voice app.

If you want to use Google Now, you need to

manually set it as your default voice app. For

user's manual, or contact your cell phone's

detailed instructions, refer to your cell phone

Some cell phone manufacturers or network

headset, and then wait for feedback

3. To end the current remote voice control session, press the ON/OFF key on the headset. You can restart by following Steps 1 and 2 mentioned above.

Make reply to the voice app's feedback, if

CANCEL. Once you have activated the remote voice control feature, you are using your cell phone's voice app to operate your cell phone. Please check the cell phone user's manual

earhook: 1. Hold both sides of the earbud. Twist and pull the earbud until it separates from the

manufacturer or network carrier. You may also

go to "Google Product Forums" on the Internet

Due to the settings of certain cell phones and

voice apps, your cell phone may not support

the remote voice control feature. Contact you cell phone's manufacturer or network carrier or check the voice app's help topics if you encounter any problems During the remote voice control activation, if your Android cell phone comes with both a dedicated voice app and Google Now, it may prompt you to select which voice app to use, and whether use it for just once or always. Select the desired options. If you do not respond to your cell phone's prompt in time, the handset screen

If you receive a landline or cell line incoming call when you have activated remote voice control on a connected cell phone, the remote voice control operation will be ended The feature may be ended automatically by your cell phone. For example, a cell call has been

established via the remote voice control feature

during a cell call, please make the call using the

using the voice app via the remote voice control

If you need to press dialing keys (0-9, *\frac{\pi}{2} tone, #)

cell lines of your telephone system instead of

and the call has just ended.

Using the handset menu

will return to idle, and the (icon will disappear.

You can restart by following Steps 1-3 mentioned

2. Press ▼ or ▲ until the screen displays the desired feature menu. Press SELECT to enter that menu. To return to the previous menu, press

To return to idle mode, <u>press and hold</u>

Press MENU when the handset is not in

Configure your telephone

The LCD language is preset to English. You

can select English, French or Spanish to be

Set language

used in all screen displays.

4. Press **SELECT** to save.

Set date and time

1. Press **MENU** when the handset is not in 2. Scroll to Settings, and then press SELECT twice.

3. Scroll to choose English, Français or

 Make sure you set the date and time including the year correctly; otherwise the answering

system does not announce the correct day of

the week for your recorded messages time

1. Press **MENU** when the handset is not in

Scroll to Set date/time, and then press SELECT. Use the dialing keys (0-9) to enter the month (MM), date (DD) and year (YY). Then press **SELECT**.

hour (HH) and minute (MM). Then press

4. Use the dialing keys (0-9) to enter the

▼ or ▲ to choose AM or PM.

5. Press **SELECT** to save.


Temporary tone dialing


If you have pulse (rotary) service only, vou can switch from pulse to tone dialing temporarily during a call. During a call, press ** tone. 2. Use the dialing keys to enter the relevant

number. The telephone sends touch-tone


signals. It automatically returns to pulse


dialing mode after you end the call.

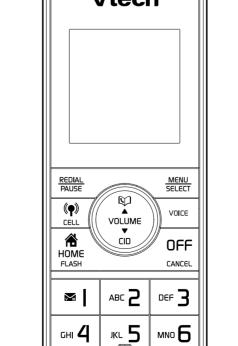

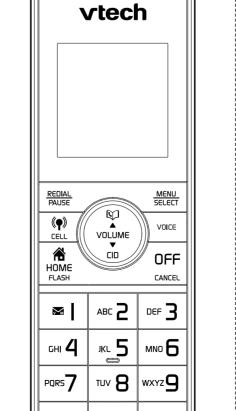


MUTE DELETE

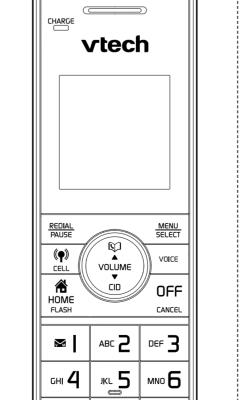

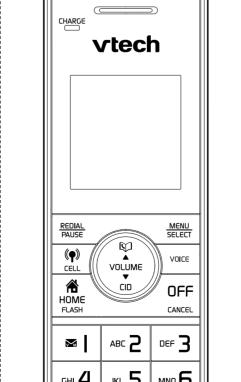

elephone operation

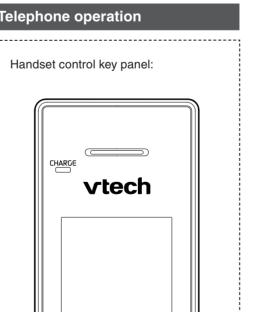

to adjust the listening volume. speakerphone volume setting are independent.

• Press (9)/CELL to switch back and forth

Review the redial list Press REDIAL when the handset is not in

the desired entry displays.

When the desired redial entry displays, press

and handsets display ** Paging **.

Do not press and hold FIND HANDSET for more than four seconds. It may lead to handset

Each handset stores the last 10 telephone

2. Press ▼, ▲, or REDIAL repeatedly until

Use this feature to find all system handsets and headsets. To start paging Press FIND HANDSET on the telephone base. All idle handsets and headsets ring

 Press ^A/HOME, ⁽ⁿ⁾/CELL, [√]», CANCEL, or any dialing key on the handset.

numbers dialed. When there are already 10 entries, the oldest entry is deleted to make

When the desired entry displays, press

To answer the intercom call, press A/HOME, (♠)/CELL, ◄», or any dialing key on the destination handset, or ON/OFF key on the headset. may consist of a telephone number up to To end the intercom call, press OFF or 30 digits, and a name up to 15 characters.

place the handset back in the telephon

base or charger, or press ON/OFF key on

Answer an incoming call during an

If you receive an incoming call during an intercom call, there is an alert tone. Using a handset To answer a home call, press (*)HOME

intercom call. The telephone continues to

Press **ON/OFF** key to end the intercom call.

The telephone continues to ring. Press

While on an outside call, you can use the

The current call is put on hold

To answer the intercom call, press

. Press INT on your handset during a call.

ring. Then press (*)/CELL.

Call transfer using intercom

Using a headset:

device to another.

device number

Press SELECT to move to the name. The intercom call ends automatically 6. Use the dialing keys to enter the name (up to To end the intercom call without answering

15 characters). Additional key presses show the outside call, press **OFF**. The intercom other characters of that particular key. call ends and the telephone continues to

7. Press **SELECT** to save. While entering numbers and names, you

(up to 30 digits)

Add a phonebook entry

To answer a cell call, press **OFF** to end the

Press and hold DELETE to erase the entire

destination handset or place the

1. Press **MENU** when the handset is not in

2. Scroll to **Phonebook** then press **SELECT**.

3. Press SELECT again to choose Add new

4. Use the dialing keys to enter the number

Press **DELETE** to erase a digit or character.

Press ▼ or ▲ to move the cursor to the left **ON/OFF** key again to answer the home call.

- Press and hold PAUSE to insert a dialing pause (for entering phone numbers only).
- Press *\(\frac{1}{2}\) to add *\(\frac{1}{2}\) (*\(\frac{1}{2}\) appears) or # intercom feature to transfer the call from one to add # (# appears) (for entering phone numbers only)
- Press **0** to add a space (for entering names 2. Use the dialing keys to enter a destination

Review the phonebook Entries are sorted alphabetically

浴/HOME, (♠)/CELL, ♠), or any dialing key Press
 when the handset is not in use on the destination handset, or press Scroll to browse through the phonebook, **ON/OFF** key on the destination headset or use the dialing keys to start a name You can now have a private conservation search (you can enter up to 3 characters before transferring the call. for the search). 1. To transfer the call, press **OFF** on the 3. When the desired entry appears, press initiating handset or place the initiating

A/HOME or **♦**) to dial. handset back in the telephone base or charger.

. To end the call, press **OFF** on the

The phonebook can store up to 1000 entries which are shared by all handsets. Each entry

. Press **MENU** when the handset is not in

Delete all phonebook entries:

press **SELECT**.

 Scroll to Phonebook, and then press SELECT.

3. Scroll to **Delete all**, and then press

SELECT. 4. When the screen displays Delete all?, press **SELECT**.

Edit a phonebook entry 1. When the desired entry displays, press

- SELECT. Use the dialing keys to edit the number, and then press SELECT.
- 3. Use the dialing keys to edit the name, and
- then press **SELECT** to save.

Dial a phonebook entry When the desired entry appears, press **A**/HOME or **I**) to dial.

If you subscribe to caller ID service,

Caller ID

nformation about each caller appears after the first or second ring. If you answer a call before the caller information appears on the screen, it will not be saved in the caller ID log. The caller ID log stores up to 50 entries. Each entry has up to 24 digits for the phone number and 15 characters for the name. If the telephone number has more than 15 digits, only the last 15 digits appear. If the name has more than 15 characters, only the first

15 characters are shown and saved in the caller

1. Press CID when the handset is not in use.

Scroll to browse through the caller ID log.

Review a caller ID log entry

Delete a phonebook entry 1. When the desired entry displays, press DELETE.

reviewed in the caller ID log, the handset displays XX missed calls When the screen displays Delete entry?, Each time you review a caller ID log entry marked **NEW**, the number of missed calls

decreases by one. When you have reviewed all the missed calls the missed call indicator no longer displays. If you do not want to review the missed calls one by one, press and hold CANCEL on the idle handset to erase the missed call indicator. All the entries are then considered old.

2. Scroll to Call block, and then press SELECT. Scroll to Calls w/o num, and then press

Dial a caller ID log entry

When there are calls that have not been

Missed call indicator

 When the desired entry appears, press **A**/HOME or **I** on the handset to dial.

Save a caller ID log entry to the

- I. When the desired caller ID log entry displays, press SELECT.
- 2. Scroll to To Phonebook then press SELECT Use the dialing keys to modify the number

if necessary, and then press **SELECT**.

4. Use the dialing keys to enter the name, and then press **SELECT** to save.

Delete a caller ID log entry

 When the desired caller ID log entry displays, press **DELETE**.

press **SELECT** twice.

Delete all caller ID log entries · Press MENU when the handset is not in use. Scroll to Caller ID log and then press

Skip to the next message

Turn the answering system

(during playback).

Record a nev

I End the call

on or off.

A two-digit security code is required to access

touch-tone telephone. The preset code is 19.

1. Press **MENU** when the handset is not in

the answering system remotely from any

You can set the code from **00** to **99**.

2. Scroll to Answering sys then press

Scroll to Ans sys setup then press

4. Scroll to **Remote code**, and then press

Scroll to a desired two-digit number.

5. Use the dialing keys to enter a two-digit

4. Hang up or press 8 to end the call.

Remote access code

SELECT

SELECT

SELECT

number.

announcement

SELECT. Scroll to Delete all and then

Call block

Block unknown calls

then press **SELECT**.

SELECT.

SELECT.

SELECT

(up to 30 digits)

8. Press **SELECT** to save

Review call block list

SELECT

SELECT.

SELECT.

Add a call block list entry

If you subscribe to caller ID service, you can set the telephone to block unknown calls and certain undesired calls

The call block list stores up to 20 entries.

1. Press **MENU** when the handset is not in

Scroll to choose Unblock or Block, and

1. Press **MENU** when the handset is not in

Scroll to Add new entry, and then press

5. Use the dialing keys to enter the number

6. Press **SELECT** to move to enter the name.

7. Use the dialing keys to enter the name (up to

other characters of that particular key.

1. Press **MENU** when the handset is not in

2. Scroll to Call block, and then press

3. Scroll to Block list, and then press

Press SELECT to choose Review.

1. When the desired entry displays, press

Use the dialing keys to edit the number

3. Use the dialing keys to edit the name, and

Edit a call block list entry

and then press **SELECT**.

then press **SELECT** to save.

15 characters). Additional key presses show

2. Scroll to **Call block**, and then press

3. Scroll to Block list, and then press

SELECT

SELECT

- Use the dialing keys to modify the number
- 2. Scroll to **To Call block** then press
- if necessary, and then press **SELECT**.

Save a caller ID log entry to call block

When the desired entry displays, press

- 4. Use the dialing keys to enter the name, and then press **SELECT** to save.
- Delete a call block list entry
- When the desired call block list entry displays, press **DELETE** on the handset.
- Mute first ring
- Your telephone rings once for blocked calls
- You can choose to mute the first ring for all
- incoming calls, so that there will be no ring for blocked calls. By default, the first ring is set to
- 1. Press **MENU** when the handset is not in
- Press 7464# on the handset
- 3. Scroll to choose First ring:On to keep the first ring, or First ring:Off to mute the first
- 4. Press SELECT to save. **P**NOTE

If you have muted the first ring, you will hear

one ring less before the answering system and voicemail answer the incoming calls.

Key tone

Sound settings

You can choose from different ringer tones.

- 1. Press **MENU** when the handset is not in 2. Scroll to **Settings**, and then press
- SELECT. 3. Scroll to choose **Key tone**, and then press

SELECT to save

- SELECT. 4. Scroll to choose On or Off, and then press

Ringer tone You can choose from different ringer tones

- oicemail service 1. Press **MENU** when the handset is not in For message recording, your telephone has a
- 2. Scroll to **Ringers**, and then press

You can adjust the ringer volume level, or turn

1. Press **MENU** when the handset is not in

3. Scroll to choose Home volume or Cell

4. Scroll to adjust the volume, and then press

If the handset ringer volume is set to off, that

You can adjust the telephone base volume

When the telephone is ringing, you can

temporarily silence the ringer of the handse

without disconnecting the call. The next call

Press OFF or MUTE on the handset. The

level by pressing - /VOL/+ on the side of the

handset is silenced for all incoming calls except

volume, and then press SELECT

2. Scroll to Ringers, and then press

Telephone base ringer volume

3. Scroll to choose **Home ringtone** or **Cell**

ringer tone samples.

the ringer of

SELECT.

paging tone.

Handset ringer volume

SELECT to save.

telephone base when idle

handset displays A

Temporary ringer silencing

rings normally at the preset volume.

- fee may apply). ringtone, and then press **SELECT**. The main differences between them are: 4. Scroll to sample each ringer tone, and
- then press **SELECT** to save.
- If you turn off the ringer volume, you will not hear

About answering system and

built-in answering system, and it also support

service provider (subscription is required, and

voicemail service offered by your telephone

Press ▶/■ on the

telephone base:

Access remotely

with an access

	,	service	Your answering system allows you to set your
Storage	Messages are stored in the telephone base.	Messages are stored in a server or system provided by your telephone service.	announcement, to save and delete messages activate call screening, to set number of rings before pick up, and to access remotely. Telephone base control key panel:
	Your messages will not be deleted automatically. You have to delete your messages manually.	Your messages may be automatically deleted after a period of time. Contact your telephone service provider for more details.	
Method to retrieve messages	When you received new messages, handset displays XX new messages and the message window on the telephone base flashes.	When you received new messages, the handset displays and New voicemail.	PLAY/STOP Image: Application of the content of t
	To retrieve messages, usually there are two ways:	To retrieve messages, you need an access	VOL ANS ON

vided by

your telephone

service provide

Set your built-in answering system Your answering system has various features

read below for the basic settings The answering system can record and store up to 99 messages. Each message can be up

to three minutes in length. The total storage

capacity for the announcement, messages

 Press MENU when the handset is not in and memos is approximately 23 minutes. The actual recording time depends on individual message characteristics Scroll to Answering sys, and then press Your answering system allows you to set your SELECT

save and delete messages, ng, to set number of rings

answer and record messages.

3. Scroll to Answer on/off, and then press SELECT.

To turn on or off with the handset

Turn the answering system on or off

The answering system must be turned on to

To turn on or off with the telephone base

• Press **U/ANS ON** on the telephone base to

turn the built-in answering system on or off.

Scroll to choose **On** or **Off**, and then press **SELECT** to save. You hear a confirmation

Set voice language

The voice prompt language is preset to English

You can select English or French to be used for the voice prompts in your answering system. 1. Press **MENU** when the handset is not in

 Scroll to Answering sys, and then press 3. Scroll to Ans sys setup, and then press

SELECT. 4. Scroll to Voice language, and then press SELECT.

Scroll to choose English or Français.

Press SELECT to save your setting

Default announcement The telephone is preset with a greeting that

answers calls with "Hello, please leave a message after the tone." You can use this preset

announcement, or replace it with your own

Record your own announcement The announcement can be up to 90 seconds in length.

SELECT twice The screen displays Play [2], Del [3], Rec

[7], and it announces, "To play, press 2. To record, press 7.º 4. Press 7 to record. The handset announces, "Record after the tone. Press 5 when you

are done." After the tone, speak towards the

handset microphone 5. Press **5** when done.

The remote voice I Make sure the operating

2. Scroll to **Answering sys** and then press **SELECT** twice. 3. The handset announces, "To play, press

announcement.

Set number of rings

2. To record, press 7." Press 2 to play the announcement. Delete the announcement

Play the announcement

 Press MENU when the handset is not in 2. Scroll to **Answering sys** and then press

SELECT twice. 3. The handset announces, "To play, press 2. To record, press 7. 4. Press 3 to delete your own recorded

1. Press **MENU** when the handset is not in

You can set the answering system to answer an incoming call after 2, 3, 4, 5 or 6 rings; or toll saver. If you choose toll saver, the answering system

answers a call after 2 rings when you have new

messages, or after 4 rings when you have no

Press MENU when the handset is not in

2. Scroll to **Answering sys** then press SELECT. 3. Scroll to **Ans sys setup** then press

Scroll to # of rings then press SELECT. 5. Scroll to choose 2, 3, 4, 5, 6 or Toll saver. 6. Press **SELECT** to save and you hear a

confirmation tone.

SELECT.

If you have muted the first ring, you will hear one ring less before the answering system answers the incoming calls.

Message alert tone

When the message alert tone is set to on, and there is at least one new message, the telephone base beeps every 10 seconds. The message alert tone is preset to off. 1. Press **MENU** when the handset is not in

2. Scroll to **Answering sys** then press SELECT. 3. Scroll to **Ans sys setup** then press

SELECT.

control feature

does not work

4. Scroll to **Msg alert tone** then press SELECT. 5. Scroll to choose On or Off

confirmation tone

Voice guide

This feature is an alternative way for you to do the basic setup of the answering

press **SELECT**.

4. Setup your answering system by inputting

Use your built-in answering

Message playback

Options during playback:

listen to the previous message

Press ►/■/STOP to stop.

system. You can follow the voice guide to record your own announcement, set the number of rings and the message alert

2. Scroll to **Answering sys**, and then

This voice guide will assist you with the basic setup of your answering system."

When there are new answering system

To playback messages at the telephone

 Press ►/SKIP to skip to the next message. Press ≪/REPEAT to repeat the message currently playing. Press **≪/REPEAT** twice to

portant safety instructions

When using your telephone equipment, basic safety

a bath tub, wash bowl, kitchen sink, laundry

5. Do not place this product on an unstable table

Avoid placing the telephone system in places

with extreme temperature, direct sunlight, or

moisture, dust, corrosive liquids and fumes.

Slots and openings in the back or bottom of the

telephone base and handset are provided for

ventilation. To protect them from overheating

9. Do not allow anything to rest on the power cord.

Do not install this product where the cord may

in specified access doors may expose you

reassembling can cause electric shock when the

ricing to an authorized service facility under

When the power supply cord or plug is

If liquid has been spilled onto the product

If the product has been exposed to rain or

If the product does not operate normally by

following the operating instructions. Adjust only those controls that are covered by the

to dangerous voltages or other risks. Incorrect

product is subsequently used.

the following conditions:

damaged or frayed.

these openings must not be blocked by placing

the product on a soft surface such as a bed, soft

or rug. This product should never be placed nea

other electrical devices. Protect your phone from

shelf, stand or other unstable surfaces.

tub or swimming pool, or in a wet basement or

6. Press **SELECT** to save and you hear a

1. Press **MENU** when the handset is not in

designated numbers as instructed in the voice guide.

messages, The handset displays **XX new** messages and the message window on the telephone base flashes.

Press ►/■/PLAY when the handset is not in

Press - /VOL/+ to adjust the speaker

To playback messages at the handset: Press MENU to choose Play messages. Press SELECT

3. Scroll to **Voice guide**, and then press SELECT. You hear the voice prompt "Hello!

New message indication

Press X/DELETE to delete the playing message. The system advances to the next

Remote access

Description

Options during playback:

Press X/DELETE twice when the handset is

1. Dial your telephone number from any touch-tone telephone.

1	Play all messages.		
2	Play new messages.		
3	Delete the current message (during playback).		
33	Delete all old messages.		
4	Repeat the current message (during playback).		
5	Stop.		
*5	Hear a list of remote		

commands

 Press 4 to repeat the message. Press 4 twice to hear the previous message.

1. Press **MENU** when the handset is not in

3. Scroll to **Delete all old**, and then press **SELECT** twice. You hear a confirmation tone.

touch-tone telephone. The preset code is 19. You can use this preset code, or set your own.

commands

Press VOLUME/▼ or VOLUME/▲ to adjust

the message playback volume. Press 6 to skip to the next message.

 Press 3 to delete the playing message. Press OFF to stop the playback.

2. Scroll to **Answering sys**, and then press SELECT.

A two-digit security code is required to access the answering system remotely from any

2. When the system plays your

6. Press **SELECT** to save and you hear a confirmation tone

service answers as described below. To learn how to program your voicemail settings contact your telephone service provider. If you are on a call, or if the answering system is busy recording a message and you receive another call, the second caller can leave a voicemail message Set your answering system to answer calls at least two rings earlier than your voicemail service is set to answer. For example, if your voicemail service answers after six rings, se

phone service Voicemail is a feature available from most telephone service providers. It may be

be optional. Fees may apply

trieve voicemail from

Retrieve voicemail When you received a voicemail, the handset displays **and New voicemail**. To retrieve, vou typically dial an access number provided by your telephone service provider, and then enter a security code. Contact your telephone

configure the voicemail settings and listen to

After you save the voicemail number, you can

included with your telephone service, or may

Set your voicemail number You can save your access number on each handset for easv access to vour voicemail.

nessages.

SELECT.

SELECT.

turn off the indicators.

1. Press MENU when the handset is not in Scroll to Settings and then press

3. Scroll to Voicemail # and then press

4. Use the dialing keys to enter the voicer

number (up to 30 digits) Press SELECT to save. Turn off the new voicemail indicators If you have retrieved your voicemail while away

from home, and the handset still displays the

new voicemail indicators, use this feature to

This feature turns off the indicators only, it does not delete your voicemail messages.

Press MENU when the handset is not in

(AT&T TL80133) to your telephone system. All accessories are sold separately. Your telephone base supports a maximum of five

For more details, refer to the user's manual

that comes with your new device.

cordless headsets (IS6200) or speakerphones

Expand your telephone system

You can add new handsets (DS6072)

ECO mode This power conserving technology reduces power

consumption for optimal battery performance. The ECO mode activates automatically whenever the nandset is synchronized with the telephone base.

General product care

Avoid rough treatment Place the handset down gently. Save the original packing materials to protect your telephone if you ever

it with wet hands. Do not install the telephone base near a sink, bathtub or shower. Electrical storms can sometimes cause power surges harmful to electronic equipment. For your own safety

take caution when using electrical appliances during

Your telephone has a durable plastic casing that

cloth or cleaning solvents of any kind.

should retain its luster for many years. Clean it only

with a dry non-abrasive cloth. Do not use dampened

Your telephone can be damaged if it gets wet. Do

find the answer to your question, visit our website at www.vtechcanada.com or call 1 (800) 267-7377 for customer service.

requently asked questions

The following are the guestions most frequently

asked about the cordless telephone. If you cannot

Make sure the telephone My telephone does not work and charged correctly. For optimum daily performance return the handset to the

The display

shows No line.

cannot hear the

telephone. If there is no dia dial tone. tone on that other telephone either, then the telephone line cord may be defective. Try

provider.

or VoIP service, the existing elephone jacks in your hom may no longer work. Contact your service provider for

from the telephone base. Place the handset in the telephone base to register it back. The handset shows Registered and you hear a beep when the registration handset does not process completes. This work at all. process takes about 90

registered".

The headset

cannot pick

up any call. I

announces "Not

process, the LED light flashes alternatively in red and blue, and turn red after the registration completes This process takes about 60 Lift the headset, then press

During the registration

The headset is deregistered

from the telephone base.

Follow the steps below to

. Press and hold FIND

The **IN USE** light turns on.

HANDSET for four seconds

2. Place the headset on the

elephone base to register it

ON/OFF key on the headset

If you hear a dial tone, the

egistration is successful

instructions in this manua

cell phone or headset is

Bluetooth device, and is

not connected to any other

Make sure that your Bluetooth

you can leave your cell phone

the DS6771 cell line. In order

for this to work, the telephone

base must be within 30 feet of

at that location while you use

register it back.

connect my cell coverage and the Bluetooth phone or headset function of your cell phone to the telephone or headset is turned on. See the user's manual of your ce phone or headset for more nformation. Make sure that the telephone Carefully follow the pairing

cannot add and | Make sure you have cellular

connected to the telephone base and active on the device list. Turn off your cell phone or headset, and then turn it on The cell phone If there is a location in your eception in my ouse with better reception

house is poor

and I cannot

DS6771.

connect it to my

The answering system does date and time. See **Configure**

not announce

of the week

et my LCD

French, and

to English.

on't know ho

the correct day

The answering

system does

essages.

not record

message, i.e., more than four minutes, part of it may be los when the answering system disconnects the call. If the memory on the answering

system stops recording and disconnects the call. While the handset is not in use ress MENU and then enter ***364**# to change the handset LCD language back to English to change it back

When the answering machine memory is full, it does not record new messages until some old messages are

CELL I

CELL 5

service, change the number of rings so that your answering system answers before your voicemail service answers To determine how many rings activate your voicemail service contact your telephone service Make sure you have set the

your telephone section

Make sure the answering

system is on. When the

ON should display on the

answering system is on. ANS

for recorded essages time The messages The maximum length for a on the answering | message is four minutes. If incomplete

system becomes full during a message, the answering anguage to

terms of this limited warranty, VTech will notify you

and will request that you authorize the cost of repair

prior to any further repair activity. You must pay for

the cost of repair and return shipping costs for the

repair of Products that are not covered by this limited

(Product model) and the date of purchase or

Provide your name, complete and correct

mailing address, and telephone number

If you subscribe to voicemail

Make sure you have turned or or logged in to the application on your cell phone that you will be sending your voice commands, such as GPS email and social networking accounts.

Make sure your cell phone's data or Wi-Fi signal is in full strength and your cell phone can connect to the Internet

> do not work, please check the cell phone user's manual and the voice app's help topics to find out what commands you can use and any limitations of the voice app.

manufacturers or network carriers may customize the phone's operating system and plement their own voice app. If you want to use Good Now, you need to manually set it as your default voice app. For detailed instructions refer to your cell phone user manual, or contact your ce phone's manufacturer or network carrier. You may also go to "Google Product

echnical specifications

1921.536-1928.448 MHz

luetooth frequency:

2402.000-2480.000 MHz

Charger: 6V DC @ 400mA

30 digits and 15 characters

1000 memory locations (shared

etween home and cell lines); up to

Phonebook

DECT frequency

Nominal range

Other limitations This warranty is the complete and exclusive

receipt; and

malfunction or difficulty; and

warranty service?

VTech's responsibilities regarding the Product. There are no other express warranties. No one is authorized to make modifications to this limited warranty and you should not rely on any such modification. State/Provincial Law Rights: This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state or province to province. imitations: Implied warranties, including those of

ordinary use) are limited to one year from the date Product. Some states/provinces do not allow the not apply to you. Please retain your original sales receipt as

proof of purchase.

What must you return with the Product to get Return the entire original package and contents including the Product to the VTech service location along with a description of the Include a "valid proof of purchase" (sales receipt) identifying the Product purchased

agreement between you and VTech. It supersedes all other written or oral communications related to this Product. VTech provides no other warranties for this Product. The warranty exclusively describes all of

fitness for a particular purpose and merchantabilit (an unwritten warranty that the Product is fit for

Channels

Memory

SIG, Inc. and any use of such marks by VTech Holdings Limited is under license. VTech Holdings Limited is a member of Bluetooth SIG, Inc. Other trademarks and trade names are

Specifications are subject to change without notice © 2016 VTech Technologies Canada Ltd. All rights reserved. 05/16. DS6771_CA_ACIB_V3.0

has been established via the and the call has just ended. If you receive a landline of cell line incoming call when you have activated remote voice control on a connected cell phone, the remote voice

The data or Wi-Fi connection

Make sure vour cell phone's

data or Wi-Fi signal is in full

The feature may be ended

phone. For example, a cell ca

automatically by your cell

of your cell phone may be los

cannot press (**0-9**, Xtone, # a cell call using control feature.

precautions should always be followed to reduce control feature. Contact you

may be affected by other cell phone operations in the background. If the problem persists, contact your cel phone's network carrier When you press the dialing keys on the handset or telephone base during a ce call using the remote voice control feature, the telephone

the risk of fire, electric shock and injury, including the following Read and understand all instructions. 2. Follow all warnings and instructions marked on the product. Unplug this product from the wall outlet before cleaning. Do not use liquid or aerosol cleaners Use a damp cloth for cleaning 4. Do not use this product near water such as near

or over a radiator or heat register. This product should not be placed in any area where proper ventilation is not provided. This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of powe supply in your home or office, consult your dealer or local power company.

10. Never push objects of any kind into this product through the slots in the telephone base or handset because they may touch dangerous oltage points or create a short circuit. Neve spill liquid of any kind on the product. 11. To reduce the risk of electric shock, do not disassemble this product, but take it to an authorized service facility. Opening or removing parts of the telephone base or handset other

be walked on.

12. Do not overload wall outlets and extension 13. Unplug this product from the wall outlet and refer

ase use the cell lines of

stem may have no resp and the call may be ended your telephone system for dialing keys during the call

cell phone's manufacturer of network carrier, or check the voice app's help topics if you encounter The remote The Bluetooth function of your voice contro cell phone may be off, or you feature ends may have moved your cell nóne out of Blueťooth range while it is in use of the telephone base. Make sure the Bluetooth function of your cell phone is turned or and place your cell phone nex to the telephone base.

strength.

The remote voice | Due to the settings of certain

cell phones and voice apps

your cell phone may not

control operation will be The voice-controlled application of your cell phone

To delete all old messages on a handset:

of other controls may result in damage and often requires extensive work by an authorized technician to restore the product to normal operation.

If the product has been dropped and the

If the product exhibits a distinct change ir

14. Avoid using a telephone (other than cordless)

damaged.

performance.

telephone base and/or handset has been

operation instructions. Improper adjustment

during an electrical storm. There is a remote risk of electric shock from lightning 5. Do not use the telephone to report a gas leak in the vicinity of the leak. Under certain circumstances, a spark may be created when the adapter is plugged into the power outlet, or when the handset is replaced in its cradle. This is a common event associated with the closing of any electrical circuit. The user should not plug the phone into a power outlet, and should not put a charged handset into the cradle, if the phone is located in an environment containing concentrations of flammable or flame-supporting gases, unless there is adequate ventilation A spark in such an environment could create

a fire or explosion. Such environments might

include: medical use of oxygen without adequate

gasoline vapors; etc.); a leak of natural gas; etc.

ventilation; industrial gases (cleaning solvents)

16. Only put the handset of your telephone next to

The power adapters are intended to be correctly

oriented in a vertical or floor mount position. The

if it is plugged into a ceiling, under-the-table or

prongs are not designed to hold the plug in place

your ear when it is in normal talk mode.

SAVE THESE INSTRUCTIONS · CAUTION: Use Only Supplied Battery. · Do not dispose of the battery in a fire. Check

with local waste management codes for special

electrolyte is corrosive and may cause burns or

Exercise care in handling batteries in order not to

for use with this product only in accordance with

the instructions and limitations specified in this

create a short circuit with conductive materials.

Charge the battery provided with or identified

vireless telephones and implanted cardiac

pacemakers. Supported by the U.S. Food and Drug

Administration, WTR recommends to physicians that

injury to the eyes or skin. The electrolyte may be

Do not open or mutilate the battery. Released

disposal instructions.

toxic if swallowed

Precautions for users of implanted cardiac pacemakers Cardiac pacemakers (applies only to digital cordless elephones): Wireless Technology Research, LLC (WTR), an independent research entity, led a multidisciplinary evaluation of the interference between portable

Delete all old messages

To delete all old messages at the telephone

speakerphone mode and handset mode.

announcement, enter the two-digit security 3. You can enter one of the following remote

Use the built-in answering systen and voicemail service You can use your answering system and

voicemail service together by setting your

answering system to answer before voicemail

your answering system to answer after four rings. Some voicemail service providers may program the delay before answering calls in seconds instead of rings. In this case, allow

six seconds per ring when determining the

Should keep wireless telephones at least six

Should NOT place wireless telephones directly

Privacy: The same features that make a cordless

telephone base and the cordless handset by

radio waves, so there is a possibility that the

intercepted by radio receiving equipment within

range of the cordless handset. For this reason.

conversations as being as private as those on

Electrical power: The telephone base of this

cordless telephone must be connected to a

working electrical outlet. The electrical outlet

telephones operate at frequencies that may

cause interference to televisions and VCRs

o minimize or prevent such interference, do

interference is experienced, moving the cordless

telephone farther away from the TV or VCR ofter

not place the telephone base of the cordless

telephone near or on top of a TV or VCR. If

Rechargeable batteries: Exercise care in

handling batteries in order not to create a short

circuit with conducting material such as rings

bracelets, and keys. The battery or conductor

polarity between the battery and the battery

Dispose of these batteries in a safe manner.

may overheat and cause harm. Observe prope

Nickel-metal hydride rechargeable batteries:

Do not burn or puncture the battery. Like other

batteries of this type, if burned or punctured, they

could release caustic material which could cause

cordless telephone conversations could be

vou should not think of cordless telephone

telephone convenient create some limitations.

appropriate setting

Pacemaker patients

inches from the pacemake

when it is turned ON.

opposite the pacemake

using wireless telephones.

About cordless telephones

orded telephones

the electrical power

reduces or eliminates

the interference.

injury.

is interrupted.

2. Scroll to **Settings**, and then press SELECT. 3. Scroll to Clr voicemail, and then press SELECT

over the pacemaker, such as in a breast pocket, s voluntarily participating in an industry progra to collect and recycle these batteries at the end of Should use the wireless telephone at the ear their useful lives, when taken out of service within the United States and Canada WTR's evaluation did not identify any risk to bystanders with pacemakers from other persons

The RBRC® seal

should not be controlled by a wall switch. Calls cannot be made from the cordless handset if the FCC, ACTA and IC regulations telephone base is unplugged, switched off or if FCC Part 15 Potential TV interference: Some cordless

neasures:

and receiver.

connected

technician for help.

operate the equipment.

The RBRC® program provides a convenient alternative to placing used nickel-metal hydride batteries into the trash or municipal waste, which nay be illegal in your area VTech's participation in RBRC $^{ ext{@}}$ makes it easy for you to drop off the spent battery at local retailers articipating in the RBRC® program or at authorized /Tech product service centers. Please call 1 (800) 8 BATTERY® for information on Ni-MH battery ecycling and disposal bans/restrictions in you

area. VTech's involvement in this program is par

conserving natural resources.

Corporation.

of its commitment to protecting our environment and

RBRC® and 1 (800) 8 BATTERY

are registered trademarks of

hargeable Battery Recycling

The RBRC® seal on the nickel-metal hydride

battery indicates that VTech Communications, Inc.

This equipment has been tested and found comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance wit the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a articular installation. If this equipment does cause harmful interference to radio or television reception which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following

Reorient or relocate the receiving antenna

Connect the equipment into an outlet on a

Increase the separation between the equipment

circuit different from that to which the receiver is

Consult the dealer or an experienced radio/TV

Changes or modifications to this equipment not

compliance could void the user's authority to

expressly approved by the party responsible for

This device complies with Part 15 of the FCC rules

Operation is subject to the following two conditions:

(1) this device may not cause harmful interference.

service provider for instructions on how to

press and hold **1** to retrieve voicemail. Taking care of your telephone Your cordless telephone contains sophisticated electronic parts, so it must be treated with care.

devices

not use the handset outdoors in the rain, or handle **Electrical storms**

Cleaning your telephone

Avoid water

and (2) this device must accept any interference

received, including interference that may cause

undesired operation. Privacy of communications

nay not be ensured when using this telephone.

criteria for the amount of radio frequency energy

according to the intended usage of the product

held against the ear of the user. The telephone

base shall be installed and used such that parts

To ensure safety of users, the FCC has established

hat can be safely absorbed by a user or bystande

This product has been tested and found to comply

vith the FCC criteria. The handset mav be safelv

of the user's body other than the hands are maintained at a distance of approximately 20 cm (8 nches) or more This Class B digital apparatus complies with Canadian requirement CAN ICES-3 (B)/NMB-3(B) FCC Part 68 and ACTA

This equipment complies with Part 68 of the FCC

rules and with technical requirements adopted by

(ACTA). The label on the back or bottom of this

provider upon request

the Administrative Council for Terminal Attachments

equipment contains, among other things, a product

identifier in the format US:AAAEQ##TXXXX. This

The plug and jack used to connect this equipmen

dentifier must be provided to your telephone service

to premises wiring and the telephone network must comply with applicable Part 68 rules and technica requirements adopted by ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a patible modular jäck that is also compliant. An RJ11 jack should normally be used for connecting to a single line and an RJ14 jack for two lines. See the nstallation instructions in the user's manual. The Ringer Equivalence Number (REN) is used to determine how many devices you may connect to your telephone line and still have them ring when you are called. The REN for this product is encoded as the 6th and 7th characters following the US: in

the product identifier (e.g., if ## is 03, the REN is

0.3). In most, but not all areas, the sum of all RENs should be five (5.0) or less. For more information, contact your telephone service provider. This equipment may not be used with Party Lines If you have specially wired alarm dialing equipmen connected to your telephone line, ensure the connection of this equipment does not disable your alarm equipment. If you have questions about what vill disable alarm equipment, consult your telephone service provider or a qualified installer. If this equipment is malfunctioning, it must be unplugged from the modular jack until the problem has been corrected. Repairs to this telephone equipment can only be made by the manufacturer

or its authorized agents. For repair procedures, follow

the instructions outlined under the Limited warranty.

If this equipment is causing harm to the telephone

temporarily discontinue your telephone service.

notify you before interrupting service. If advance

network, the telephone service provider may

The telephone service provider is required to

base is installed properly and battery is installed

installing a new telephone line If changing telephone line cord does not help, the wall jack (or the wiring to this wall jack) may be defective. Contact

You may be using a new cable

your telephone service

telephone base after use.

Disconnect the telephone

and connect it to another

line cord from your telephone

The display The handset is deregistered shows **To** register HS.. and ...see manual alternately. The

seconds to complete.

If this product is equipped with a corded or cordless handset, it is hearing aid compatible. If this product has memory dialing locations, you may choose to store emergency telephone numbers (e.g., police, fire, medical) in these locations. If you do store or test emergency numbers, please: Remain on the line and briefly explain the reason for the call before hanging up.

Operation is subject to the following two conditions:

and (2) this device must accept any interference

received, including interference that may cause

Privacy of communications may not be ensured

i) this device may not cause harmful interference,

notice is not practical, you will be notified as soon

as possible. You will be given the opportunity to

rovider is required to inform you of your right

to file a complaint with the FCC. Your telephone

equipment, operation, or procedures that could

if such changes are planned.

affect the proper functioning of this product. The

telephone service provider is required to notify you

service provider may make changes in its facilities.

correct the problem and the telephone service

Limited warranty

What does this limited warranty cover?

undesired operation.

when using this phone.

installed and used normally and in accordance with the Product operating instructions. This imited warranty extends only to the Consumer for Products purchased and used in the United States of America and Canada What will VTech do if the Product is not free from defects in materials and workmanship during the limited warranty period ("Materially Defective During the limited warranty period, VTech's authorized service representative will repair or replace at VTech's option, without charge, a Materially Defective Product. If we repair the Product, we may

in working condition. You should expect the repair or replacement to take approximately 30 days.

the cell phone

accident, shipping or other physical damage improper installation, abnormal operation or Perform such activities in off-peak hours, such as handling, neglect, inundation, fire, water or other early morning or late evening. liquid intrusion; or 2. Product that has been damaged due to repair, Industry Canada alteration or modification by anyone other than This device complies with Industry Canada licensean authorized service representative of VTech: exempt RSS standard(s).

The manufacturer of this VTech Product warrants to the holder of a valid proof of purchase ("Consumer" or "you") that the Product and all accessories provided in the sales package ("Product") are free from defects in material and workmanship, pursuan

to the following terms and conditions, when

and features may save you a service call Except as provided by applicable law, you assume the risk of loss or damage during transit and transportation and are responsible for delivery or handling charges incurred in the transport o use new or refurbished replacement parts. If we the Product(s) to the service location. VTech choose to replace the Product, we may replace it with will return repaired or replaced Product under a new or refurbished Product of the same or similar this limited warranty. Transportation, delivery or design. We will retain defective parts, modules, or nandling charges are prepaid. VTech assumes no equipment. Repair or replacement of the Product, at risk for damage or loss of the Product in transit. VTech's option, is your exclusive remedy. VTech will If the Product failure is not covered by this limited return the repaired or replacement Products to you

The limited warranty period for the Product extends for ONE (1) YEAR from the date of purchase. If VTech repairs or replaces a Materially Defective Product under the terms of this limited warranty, this limited warranty also applies to the repaired or replacement Product for a period of either (a) 90 days from the

date the repaired or replacement Product is shipped

to you or (b) the time remaining on the original one-

What is not covered by this limited warranty?

Product that has been subjected to misuse

year warranty; whichever is longer

This limited warranty does not cover:

How long is the limited warranty period?

4. Product to the extent that the problem is caused by use with non-VTech accessories; or 5. Product whose warranty/quality stickers, product serial number plates or electronic serial numbers

experienced is caused by signal conditions,

network reliability, or cable or antenna systems;

have been removed, altered or rendered illegible

Product purchased, used, serviced, or shipped

America or Canada, or used for commercial or

for repair from outside the United States of

3. Product to the extent that the problem

How do you get warranty service? To obtain warranty service, please visit our website at **www.vtechcanada.com** or call NOTE: Before calling for service, please review the user's manual - a check of the Product's controls

warranty, or proof of purchase does not meet the

institutional purposes (including but not limited of purchase. Some states/provinces do not allow limitations on how long an implied warranty lasts to Products used for rental purposes); or so the above limitation may not apply to you. In no Product returned without a valid proof of event shall VTech be liable for any indirect, special purchase (see item 2 on the next page); or incidental, consequential, or similar damages 8. Charges for installation or set up, adjustment (including, but not limited to lost profits or revenue. of customer controls, and installation or repair of inability to use the Product or other associated systems outside the unit. equipment, the cost of substitute equipment, and claims by third parties) resulting from the use of this exclusion or limitation of incidental or consequentia damages, so the above limitation or exclusion may

1. Press MENU when the handset is not in

Scroll to **Answering sys** and then press

control feature system of your cell phone is iÓS 8 or later, or Android 4 o does not work. Make sure your cell phone

Bluetooth.

the telephone base Do not lock up your cell phone's screen or set passcode for activating the voice-controlled application (voice app).

is paired and connected to

your telephone system via

applications are running in th

Place your cell phone next to

background of your cell phone

Make sure no Bluetooth

Try to activate the voice app on vour cell phone to ensure in place Once you have activated the remote voice control feature you are using your cell phone's voice app to operate your cell phone. If the voice commands

Forums" on the Internet and check the corresponding help

Some cell phone

DECT: 5 Bluetooth: 79 Maximum power allowed by FCC and IC. Actual operating range may vary according to environment conditions at the time of use Handset: 2.4V Ni-MH battery requirements Telephone base Output #1: 6V DC @ 450mA Output #2: 6V DC @ 300mA

> Caller ID log: 50 memory locations; up to 24 digits and 15 characters Call block: 20 entries

The Bluetooth® word mark and logos are owned by Bluetooth

Document order number: 91-010012-030-100