 
 


- IS8151-1 IS8151-1S
- IS8151-2 IS8151-2S
- IS8151-3 IS8151-3S
- IS8151-4 IS8151-4S
- IS8151-5 IS8151-5S
- IS8152-5 IS8152-5S

DECT 6.0 Cordless telephone with BLUETOOTH® wireless technology

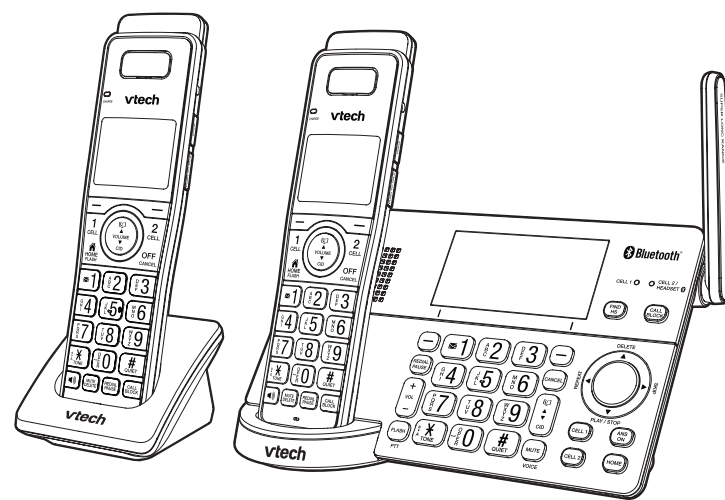

vtech For more support information
Quick start guide (Canada version)

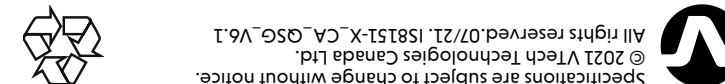

IMPORTANT SAFETY INSTRUCTIONS

 
- When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following:
- Read and understand all instructions.
 - Follow all warnings and instructions marked on the product.
 - Unplug this product from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
 - Do not use this product near water such as near a bath tub, wash bowl, kitchen sink, laundry tub or a swimming pool, nor in a wet basement or shower.
 - Do not place this product on an unstable table, shelf, stand or other unstable surfaces.
 - Avoid placing the telephone system in places with extreme temperature, direct sunlight, or other electrical devices. Protect your phone from moisture, dust, corrosive liquids and fumes. Slots and openings in the back or bottom of the telephone base and handset are provided for ventilation. To protect them from overheating, these openings must not be blocked by placing the product on a soft surface such as a bed, sofa or rug. This product should never be placed near or over a radiator or heat register. This product should not be placed in any area where proper ventilation is not provided.
 - This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply in your home or office, consult your dealer or local power company.
 - Do not allow anything to rest on the power cord. Do not install this product where the cord may be walked on.
 - Never push objects of any kind into this product through the slots in the telephone base or handset because they may touch dangerous voltage points or create a short circuit. Never spill liquid of any kind on the product.
 - To reduce the risk of electric shock, do not disassemble this product, but take it to an authorized service facility. Opening or removing parts of the telephone base or handset other than specified access doors may expose you to dangerous voltages or other risks. Incorrect reassembly can cause electric shock when the product is subsequently used.
 - Do not overload wall outlets and extension cords.
 - Unplug this product from the wall outlet and refer servicing to an authorized service facility under the following conditions:
 - When the power supply cord or plug is damaged or frayed.
 - If liquid has been spilled onto the product.
 - If the product has been exposed to rain or water.
 - If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operation instructions. Improper adjustment of other controls may result in damage and often requires extensive work by an authorized technician to restore the product to normal operation.
 - If the product has been dropped and the telephone base and/or handset has been damaged.
 - If the product exhibits a distinct change in performance.
 - Avoid using a telephone (other than cordless) during an electrical storm. There is a remote risk of electric shock from lightning.
 - Do not use the telephone to report a gas leak in the vicinity of the leak. Under certain circumstances, a spark may be created when the adapter is plugged into the power outlet, or when the handset is replaced in its cradle. This is a common event associated with the closing of any electrical circuit. The user should not plug the phone into a power outlet, and should not put a charged handset into the cradle, if the phone is located in an environment containing concentrations of flammable or flame-supporting gases, unless there is adequate ventilation. A spark in such an environment could create a fire or explosion. Such environments might include: medical use of oxygen without adequate ventilation; industrial gases; cleaning solvents; gasoline vapors; etc.; a leak of natural gas, etc.
 - Only put the handset of your telephone next to your ear when it is in normal talk mode. The power adapter is intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling, under-the-table or cabinet outlet.

- For pluggable equipment, the socket-outlet shall be installed near the equipment and shall be easily accessible.
 - CAUTION:** Use only the batteries indicated in this manual. There may be a risk of explosion if a wrong type of battery is used for the handset. Use only the supplied rechargeable batteries or replacement batteries (BT18342/BT28342) for the handset. Do not dispose of batteries in a fire. They may explode. Use only the adapter included with this product. Incorrect adapter polarity or voltage can seriously damage the product. **SAVE THESE INSTRUCTIONS**
- Battery**
- CAUTION:** Use Only Supplied Battery.
 - Do not dispose of the battery in a fire. Check with local waste management codes for special disposal instructions.
 - Do not open or mutilate the battery. Released electrolyte is corrosive and may cause burns or injury to the eyes or skin. The electrolyte may be toxic if swallowed.
 - Exercise care in handling batteries in order not to create a short circuit with conductive materials.
 - Charge the battery provided with this product only in accordance with the instructions and limitations specified in this manual.
- Precautions for users of implanted cardiac pacemakers**
- Cardiac pacemakers (applies only to digital cordless telephones):
- Wireless Technology Research, LLC (WTR), an independent research entity, led a multidisciplinary evaluation of the interference between portable wireless telephones and implanted cardiac pacemakers. Supported by the U.S. Food and Drug Administration, WTR recommends to physicians that:
- Pacemaker patients**
- Should keep wireless telephones at least six inches from the pacemaker.
 - Should NOT place wireless telephones directly over the pacemaker, such as in a breast pocket, when it is turned ON.
 - Should use the wireless telephone at the ear opposite the pacemaker.
- WTR's evaluation did not identify any risk to bystanders with pacemakers from other persons using wireless telephones.

ABOUT CORDLESS TELEPHONES

- Privacy:** The same features that make a cordless telephone convenient create some limitations. Telephone calls are transmitted between the telephone base and the cordless handset by radio waves, so there is a possibility that the cordless telephone conversations could be intercepted by radio receiving equipment within range of the cordless handset. For this reason, you should not think of cordless telephone conversations as being as private as those on corded telephones.
- Electrical power:** The telephone base of this cordless telephone must be connected to a working electrical outlet. The electrical outlet should not be controlled by a wall switch. Calls cannot be made from the cordless handset if the telephone base is unplugged, switched off or if the electrical power is interrupted.
- Potential TV interference:** Some cordless telephones operate at frequencies that may cause interference to televisions and VCRs. To minimize or prevent such interference, do not place the telephone base of the cordless telephone near or on top of a TV or VCR. If interference is experienced, moving the cordless telephone farther away from the TV or VCR often reduces or eliminates the interference.
- Rechargeable batteries:** Exercise care in handling batteries in order not to create a short circuit with conducting material such as rings, bracelets and keys. The battery or conductor may overheat and cause harm. Observe proper polarity between the battery and the battery charger.
- Nickel-metal hydride rechargeable batteries:** Dispose of these batteries in a safe manner. Do not burn or puncture the battery. Like other batteries of this type, if burned or punctured, they could release caustic material which could cause injury.

WHAT'S IN THE BOX

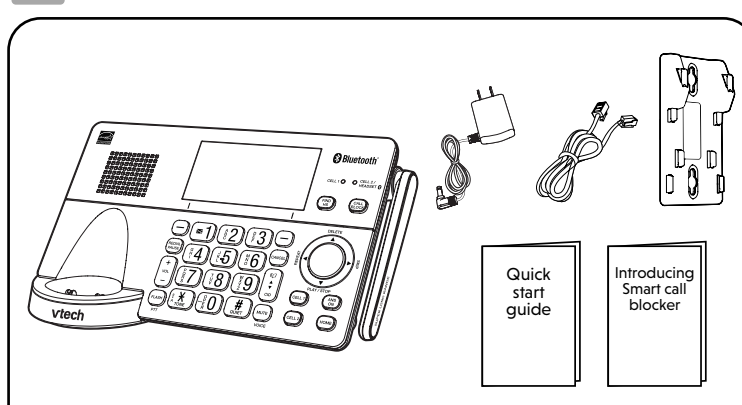

- 1 set for IS8151/ IS8151-1S
 - 2 sets for IS8151-2/IS8151-2S
 - 3 sets for IS8151-3/IS8151-3S
 - 4 sets for IS8151-4/IS8151-4S
 - 5 sets for IS8151-5/IS8152-5/ IS8151-5S/IS8152-5S
- 1 set for IS8151-2/IS8151-2S
 - 2 sets for IS8151-3/IS8151-3S
 - 3 sets for IS8151-4/IS8151-4S
 - 4 sets for IS8151-5/IS8152-5/ IS8151-5S/IS8152-5S

CONNECT AND INSTALL

- Connect the telephone base**
If you subscribe to digital subscriber line (DSL) high-speed Internet service through your telephone line, make sure you connect a DSL filter (not included) to the telephone wall jack.
- Install the battery**
Insert the battery into the handset.
- Connect the charger**
Plug the power supply cord into a wall outlet.
- Charge the battery**
Place the handset in the charging cradle.

Install belt clip

To attach the belt clip
Snap the belt clip into the slots on both sides of the cordless handset.

To remove the belt clip
Lift either of the belt clip tabs outwards from the handset.

Improve the telephone signal strength

NOTE

- To avoid interference, place the telephone base in a central location of the house and at least 3 feet (1 meter) away from thick walls as well as other household appliances such as, TV, radio, microwave oven, Wi-Fi router, large mirror, metal furniture and fish tank.

SETUP

After you install your telephone or power returns following a power outage and battery depletion, the handset and telephone base will prompt you to set the date and time, and to configure the Smart call blocker and answering system through voice guide.

Date and time

Follow the steps below to set the date and time. For example, if the date is 25 July, 2019, and the time is 12:05 AM:

- Enter the date.
- Press **NEXT**.
- Enter the time.
- Press **SAVE**.

Softkeys	Option displayed above a softkey. Press [] or [] to select.
[]	The handset battery low and needs charging.
[]	The handset battery is charging.
[HS1]	Handset indicates the handset number.
[]	Handset or telephone base ringer is off.
[]	New voicemail received from your telephone service provider.
[]	The HOME line is in use.
[]	Bluetooth device is active.
[]	Bluetooth device is in use.
[]	Wireless Bluetooth headset is in use.
[]	Answering system is on.
[]	There are new caller ID log entries and/or new messages.

Voice guide for Smart call blocker / Answering system

After setting the date and time, the handset and telephone base will prompt if you want to set Smart call blocker and the answering system. For more details, see **Use voice guide to set Smart call blocker** in the **Introducing Smart call blocker** leaflet and **Use voice guide to set Answering system** in the online help topics.

When the handset and telephone base prompt you to set up the Smart call blocker via voice guide

Start voice guide to set up Smart call blocker now?
NO YES

Press **YES**

Setup your Smart call blocker by inputting the designated numbers as instructed in the voice guide.

When the handset and telephone base prompt you to set up the answering system via voice guide

Start voice guide to set up Answering system now?
NO YES

Press **YES**

Setup your answering system by inputting the designated numbers as instructed in the voice guide.

OPERATE

Make a home call

① Handset: Press **HOME** FLASH -OR- Telephone base: **HOME**

② Enter the phone number.

Make a cell call

① Handset: Press **1** CELL -OR- **2** CELL Telephone base: **CELL 1** -OR- **CELL 2**

② Enter the phone number.

Answer a home call

Handset: Press **HOME** FLASH -OR- Telephone base: **HOME** -OR- Press any dialing keys to answer

Answer a cell call

Handset: Press **1** CELL -OR- **2** CELL Telephone base: **CELL 1** -OR- **CELL 2** -OR- Press any dialing keys to answer

Volume

Handset: Press **VOLUME** UP/DOWN Telephone base: **+ VOL** -OR- **- VOL**

LCD LANGUAGE SETTING
If you accidentally set the LCD language to Spanish or French, press **MENU** and then enter **364#** to change the handset LCD language back to English while the handset is not in use.

BLUETOOTH

To use a Bluetooth enabled cellular phone with your telephone, you must first pair and connect your Bluetooth cellular phone with the telephone base. Before you begin, make sure that you have cellular coverage and your Bluetooth enabled cell phone is not connected to any other Bluetooth device.

Add a Bluetooth cell phone

- Press **MENU** on the telephone base.
- Press **V/▲** to scroll to **Bluetooth**, then press **SELECT**.
- Press **SELECT** to select **Add device**.
- Press **SELECT** to select **Add cellular**.
- Press **NEXT**.
- Press **NEXT**.
- Once your cellphone finds your telephone (Vtech DECT 6.0), press appropriate key on your cell phone to continue the pairing process.

Add a Bluetooth headset

- Press **MENU** on the telephone base.
- Press **V/▲** to scroll to **Bluetooth**, then press **SELECT**.
- Press **SELECT** to select **Add device**.
- Press **V/▲** to scroll to **Add headset**, then press **SELECT**.
- Press **NEXT**.
- Press **NEXT**.
- Place your headset next to the base to continue the pairing process.

Download a cell phone directory using the telephone base

Before downloading a directory, make sure the cell phone is paired, active, and connected to your IS8151.

- Press **MENU** on the telephone base.
- Press **V/▲** to scroll to **Bluetooth**, then press **SELECT**.
- Press **V/▲** to scroll to **Download PB**, then press **SELECT**.
- Press **NEXT**.

Activate remote voice control

Make sure your cell phone is paired and connected to your telephone system via Bluetooth.

Handset: Press **VOICE** on the handset.

Telephone base: Press **VOICE** on the telephone base.

- Speak toward the telephone base or handset, and then wait for feedback.
- Press **END** to end.

*Includes licenced Galtel™ technology. Galtel™ is a trademark of Truecall Group Limited.

