Go to www.vtechcanada.com for the latest VTech product news.


VM5262 VM5262-2

Pan and Tilt Video Monitor






Quick start guide (Canada version)

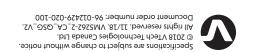




**INSTALL THE BATTERY** 

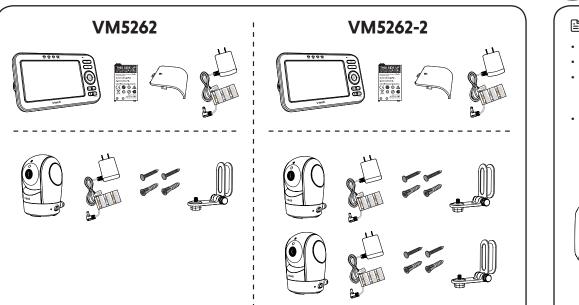

# 2 CONNECT THE BABY MONITOR

### NOTES


- Use only the power adapters supplied with this product.
- Make sure the baby monitor is not connected to the switch controlled electric outlet.
- Connect the power adapters in a vertical or floor mount position only. The adapters' prongs are not designed to hold the weight of baby monitor, so do not connect them to any ceiling, under-the-table, or cabinet outlets. Otherwise, the adapters may not properly connect to the outlets.
- Make sure the parent unit, the baby units and the power adapter cords are out of reach of children.

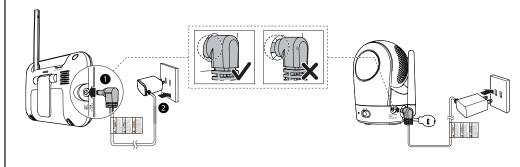


# B POWER ON OR OFF THE BABY MONITOR

Press and hold POWER to power on

or off your parent unit.

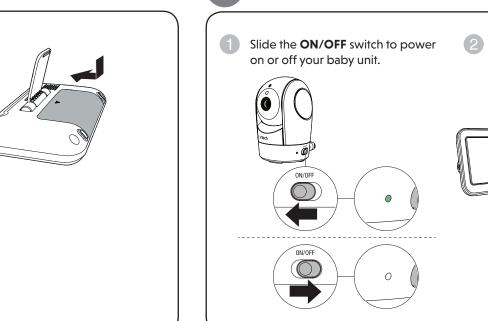

# 4 Positioning the baby monitor

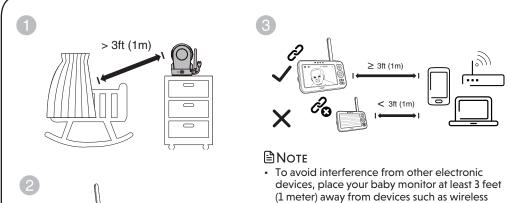


# routers, microwaves, cell phones and computers.

### ① CAUTION

- The default volume of your parent unit is level
  A, and the maximum volume is level 7. If you experience high-pitched screeching noise from your baby monitor while positioning:
- Make sure your baby unit and parent unit are more than 3 feet (1 meter) apart, OR
- Lower the volume of your parent unit.

# 5 STATUS CHECK

from the baby unit, and the **LINK** LED light turns on.

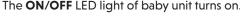




# Basic operation - Parent unit

### Adjust speaker volume


speaker volume. It determines the volume of

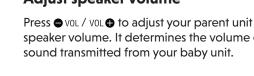


Pan, tilt, zoom

## Talk to your baby unit

Your voice is transmitted to the baby unit.

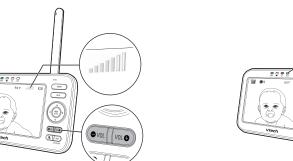

Press and hold TALK and speak to your parent unit.

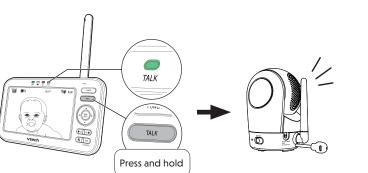

### Turn off the screen

Press and hold LCD ON/OFF to switch off the screen. You can still hear sound from the baby unit.



兴 TIP

• Press any keys on the parent unit to turn on the screen again.

Press MENU to enter the menu, choose a menu item, or save a setting. You

can use the parent unit for advanced settings or operations, such as to play

Press and hold  $\land$ ,  $\lor$ ,  $\lt$  or  $\gt$  to pan or tilt the camera upward, downward, leftward or rightward

Press  $\oplus$  to zoom in or out.

or stop the baby unit lullaby, or to adjust the baby unit sound sensitivity. While in the menu:

Use the menu



- Press ∧ or ∨ to scroll among the menu options.
- Press MENU or ➤ to select an item.








Once you power on both your baby unit and parent unit, your parent unit displays image

The **ON/OFF** LED light of baby unit turns on






# OVERVIEW - PARENT UNIT

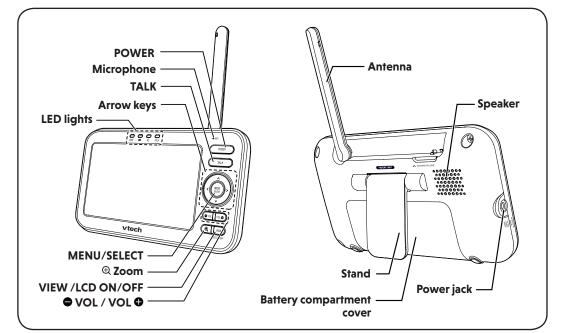

# OVERVIEW - BABY UNIT

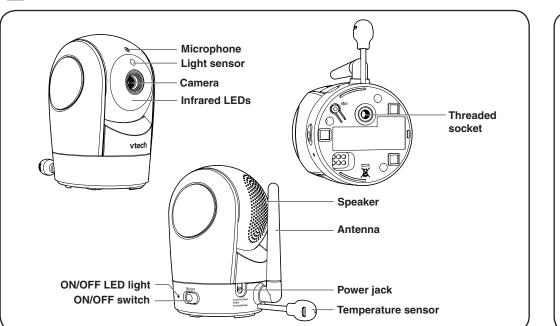


### Sound sensitivity and sound activation

### Sound sensitivity


With sound sensitivity setting, you can choose to hear sounds from the baby unit all the time, or to hear sounds that exceed a certain level. The default level **Highest** allows you to hear all sounds (including background noises).

If you set the sound sensitivity to a lower level (e.g. Medium), you will only hear sounds that exceed the selected level. The baby unit may not detect soft sounds. and the parent unit speaker may remain quiet.

For details, please see Adjust the sound sensitivity of the baby unit in the User's

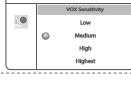



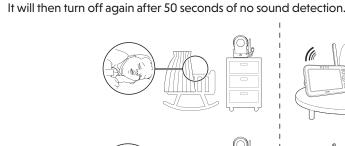

When sound activation is on, the parent unit screen stays off to save

Once the baby unit detects sounds that are louder than the choser


sound sensitivity level, the parent unit screen turns on automatically.

power when the baby unit detects no sound.





### DIM MODE

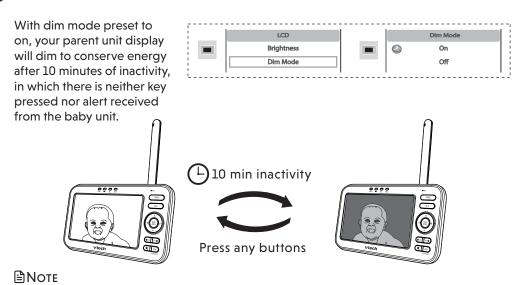

• If you do not want LCD to dim automatically, turn off the **Dim Mode**.

# NIGHT VISION

Sound activation



The baby unit has infrared LEDs that allow you to see your baby clearly at night or in a dark room. When the baby unit being viewed detects low light levels, the infrared LEDs are switched on automatically. The images from the baby unit are in black and white, and  $extcolor{}$ appears on the screen.


- It is normal if you see a short white glare on your parent unit screen as the baby unit is adapting to the dark environment. When the infrared LEDs are on, the images
- are in black and white. This is normal.


Depending on the surroundings and other interfering factors, like lightings, objects, colors and backgrounds, the video quality may vary. Adjust the baby unit's angle or place the baby unit at a higher level to prevent glare and blurry display.

# MOUNT THE BABY UNIT (OPTIONAL)

### ■ Note

• The types of screws and anchors you need depend on the composition of the wall.

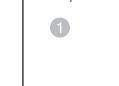

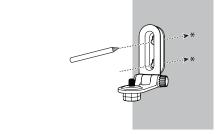

### ■ Note


 Check for reception strength and camera angle before drilling the holes.

Place the wall mount bracket on a wall and then use a pencil to mark the top and the bottom holes as shown. Remove the wall mount bracket and drill two holes in the wall (7/32 inch drill bit).




If you drill the holes into a stud, go to


If you drill the holes into an object other than a stud, insert the wall anchors into the holes. Tap gently on the ends with a hammer until the wall anchors are flush with the wall.

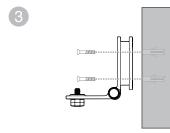

Alian the wall mount bracket and screws with the holes in the wall as shown. Tighten the screw in the middle hole first, so that the wall mount bracket position is fixed. You can tighten the other screw in the top hole.

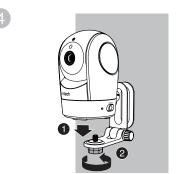


Place the baby unit on the wall mount bracket. Tighten the screw into the threaded socket at the bottom to secure the baby unit.

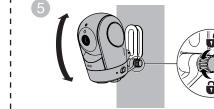

are exposed.

Insert the screws into the holes and tighten

the screws until only 1/4 inch of the screws

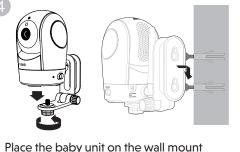

bracket. Tighten the screw into the threaded socket at the bottom to secure the baby unit. Alian the holes on the wall mount bracket with the screws on the wall, and slide the wall mount bracket down until it locks into



You can maximize your baby unit's viewing angles by tilting the wall mount bracket.


Hold the baby unit, and then rotate the knob in anticlockwise direction. This will loosen the joint of the wall mount bracket. Tilt your baby unit up or down to adjust to your preferred angle. Then, rotate the knob in clockwise direction to tighten the joint and secure the angle.



# For VM5262-2 ONLY

### Status check - Two baby units

If you are viewing baby unit **®**1, the **ON/OFF** LED light of baby unit @1 turns on. As baby unit **©**2 is not being viewed, its **ON/OFF** LED light flashes.

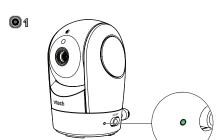


### **Change different views - Patrol**

Select **Patrol** as your monitoring mode to alternately view the image from baby units 101 and **©**2 every 10 seconds.

Change different views - Single CAM

between the image of baby units @1 and @2.

In Single CAM or Patrol mode, press VIEW to switch

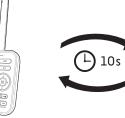

If you power on only one baby unit, you may see the parent unit displaying X and then No link to CAM # (# represents the baby unit number), and the LINK LED light flashing Press VIEW in Single CAM or Patrol mode to switch to the baby unit you have powered on.





### Change different views - Split

Select **Split** as your monitoring mode to view the images from both baby units at once.







Single CAM

